

# Main Menu

## FPS

- Basic: 8 – 60 fps  
24 fps
- Advanced: 1 – 60 fps   
23.976 fps

dependent on Resolution & REDCODE settings

## ISO

- 250 – 12800  
ISO 800

## F-Stop

- Available with RED Canon EOS Mount
- Basic: Allows adjustment of the aperture, range depends on attached lens
- Advanced: Aperture Enter F-stop directly
- Advanced: Focus Enter focal distance directly, range depends on attached lens

## 1/SEC (Exposure)

- Basic: 1 sec – 1/8000 sec  
1/48 sec
  - Advanced: Exposure (Speed) 1 – 1/8000 sec   
1/48 sec
  - Advanced: Integration Time 0.125 – 1000 ms   
20.833 ms
  - Advanced: Angle\* -1.000 – 360.000 deg   
Absolute Angle 180.000 deg
- \* "Relative" or „Absolute“ dependent on shutter mode

## White Balance

- Basic: 1700 – 10000 K
  - Advanced:
    - Preset Daylight
      - Incandescent (2800K)
      - Tungsten (3200K)
      - Flourescent (4500K)
      - Flash (5500K)
      - Daylight (5600K)
      - Cloudy (7500K)
      - Shade (9000K)
    - Color Temp. 1700 – 10000K   
5600 K
    - Tint -100.000 – 100.000   
0
    - Calc White Balance
- Apply Preset

## Resolution

- 5K  
4K HD
- 4K
- 4K HD
- 3K
- 2K

## REDCODE

- 3:1 – 18:1  
8:1
- dependent on Resolution & fps



## RED SCARLET MENU GUIDE



Menu Guide OCTAMAS AG Switzerland  
[mail@octamas.com](mailto:mail@octamas.com) +41 44 401 58 00  
[www.octamas.com](http://www.octamas.com)







### LEGEND

- ◁ Lorem ipsum Are default values
- ▶ Playback
- Exit Playback
- Touch this menu icon to enter the Secondary Menus / to return to settings menu
- Touch and hold to lock the touchscreen
- Advanced Touch and hold or double-click on an icon to bring up an advanced interface display
- Keypad for entering information directly
- Keyboard for entering information directly
- Slider to adjust levels
- Touch and hold to unlock the touchscreen

# Secondary Menus 1/8




## RED SCARLET MENU GUIDE

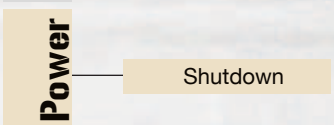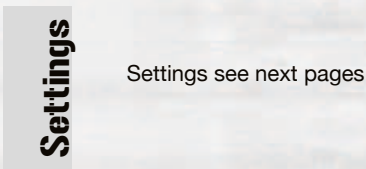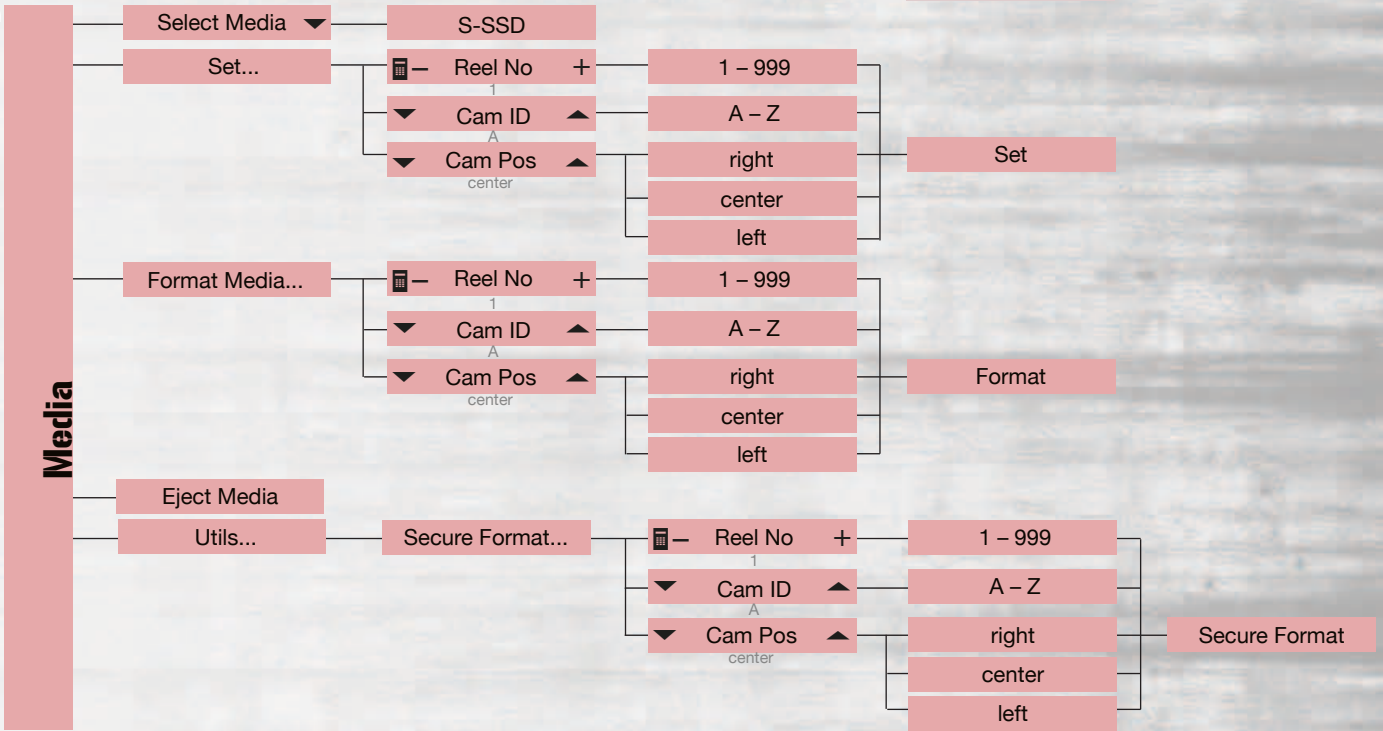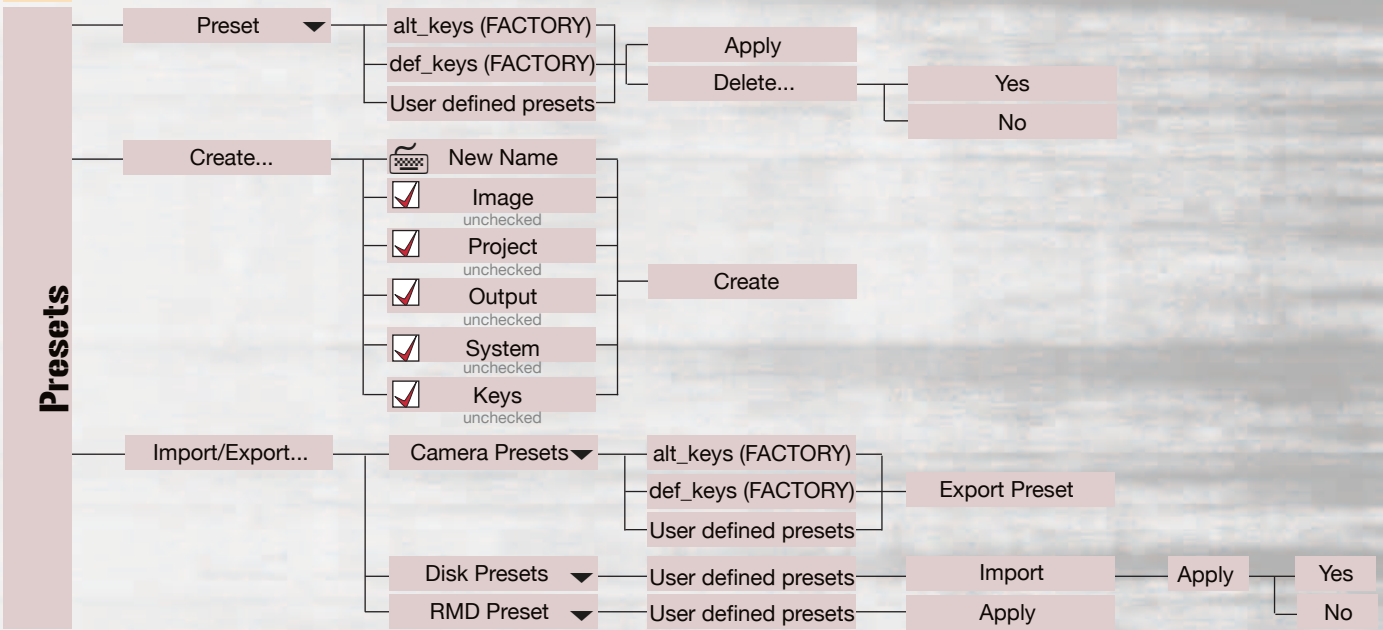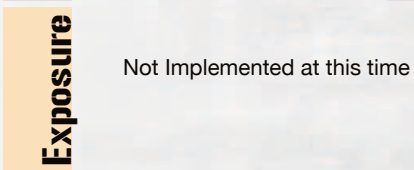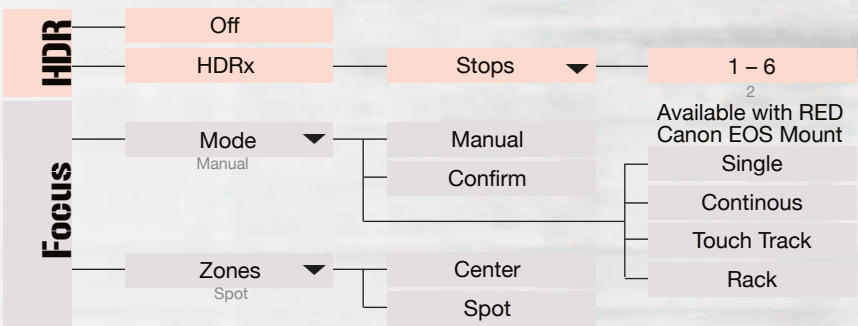

# Secondary Menus 2/8

## Settings

Display

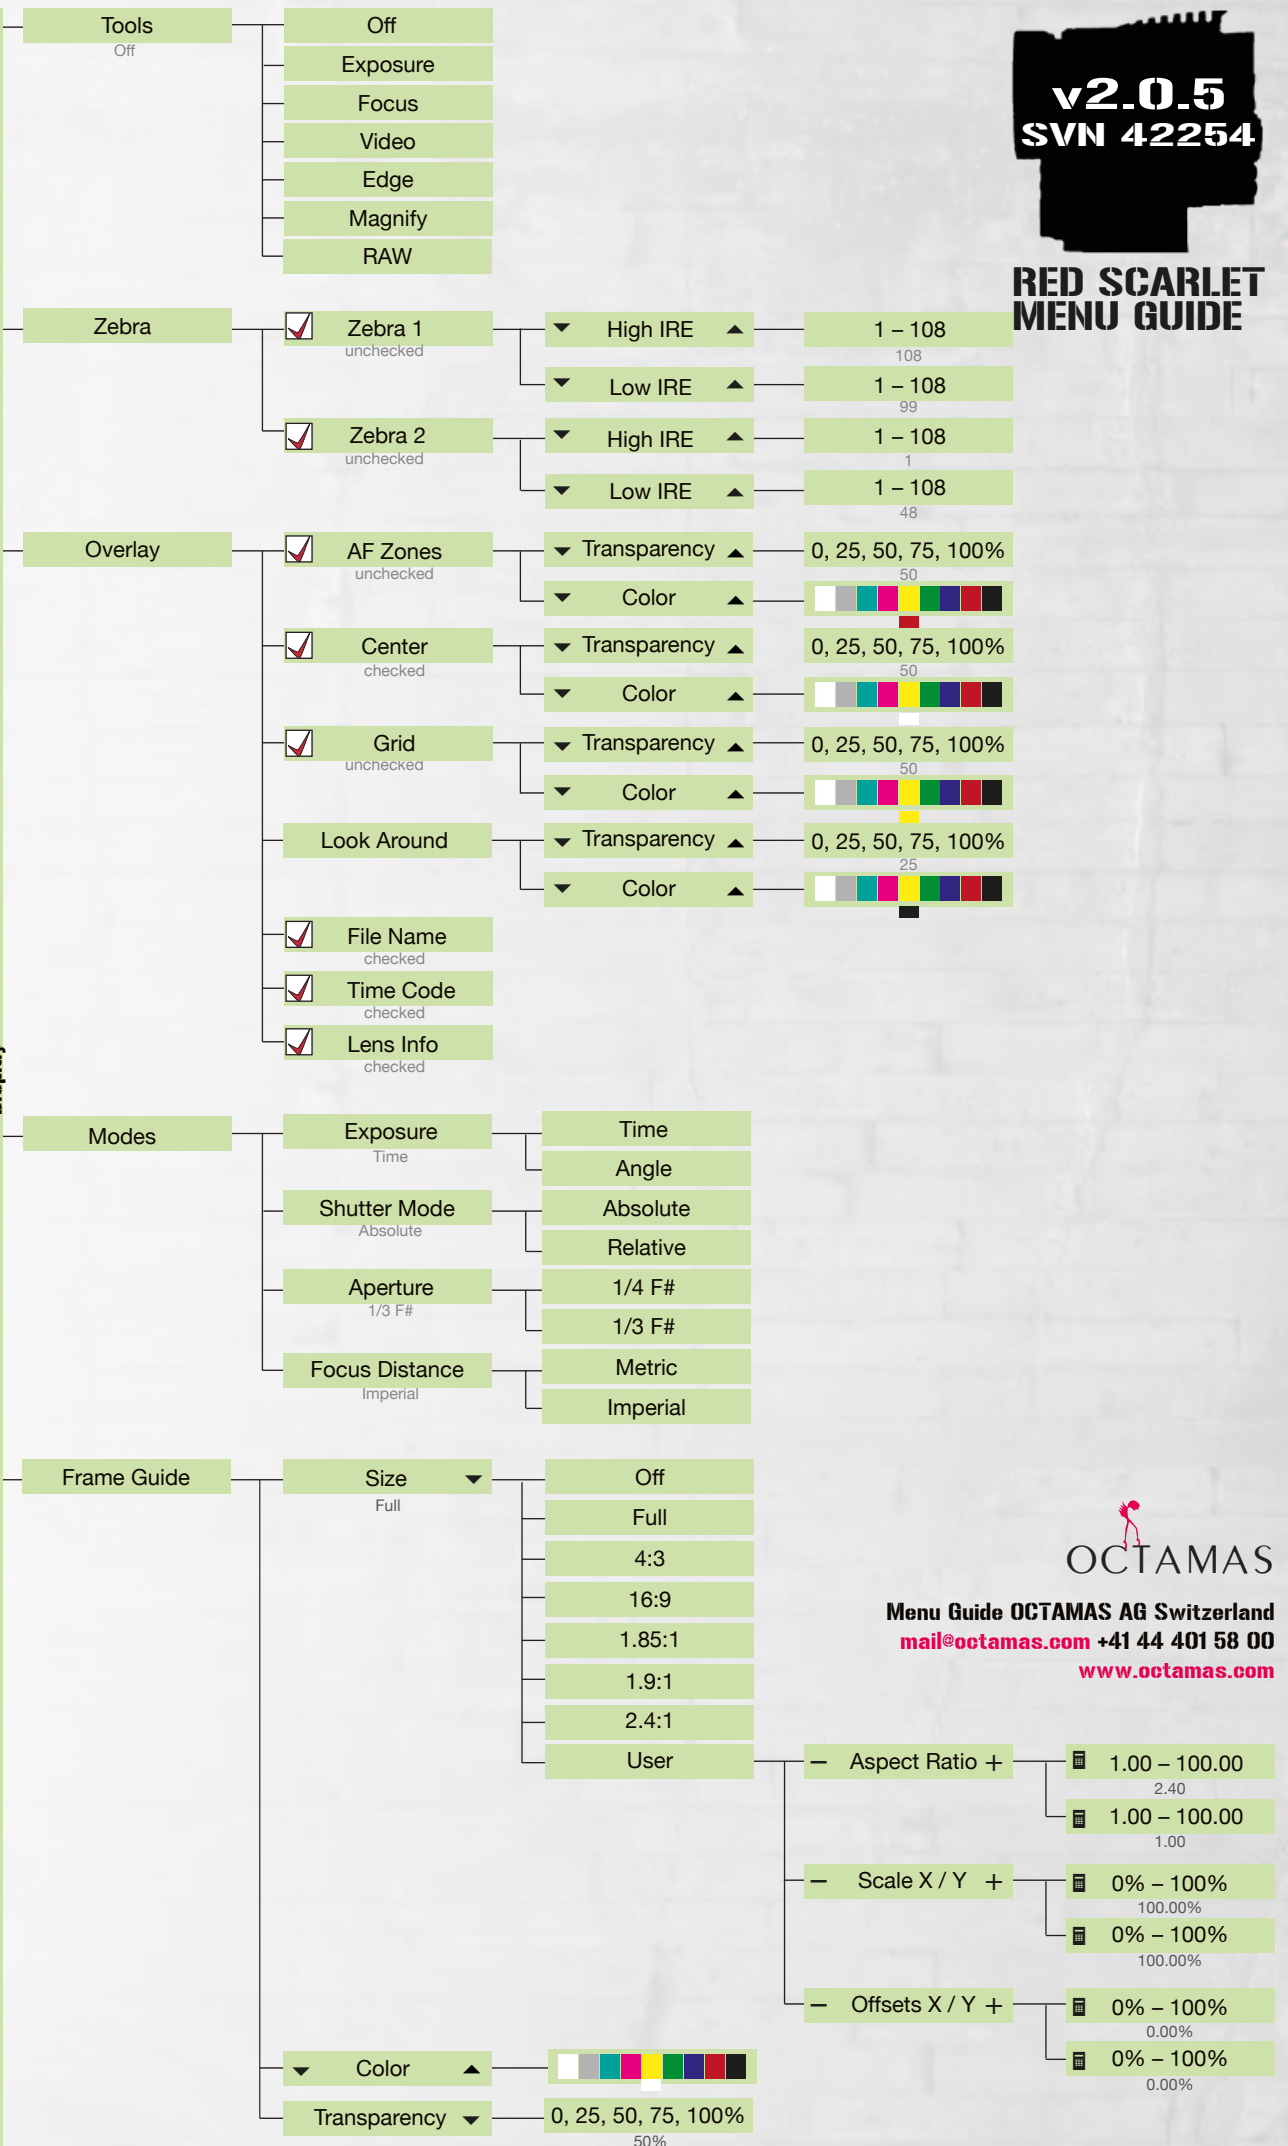


## RED SCARLET MENU GUIDE



Menu Guide OCTAMAS AG Switzerland  
 mail@octamas.com +41 44 401 58 00  
 www.octamas.com

## Settings

Display

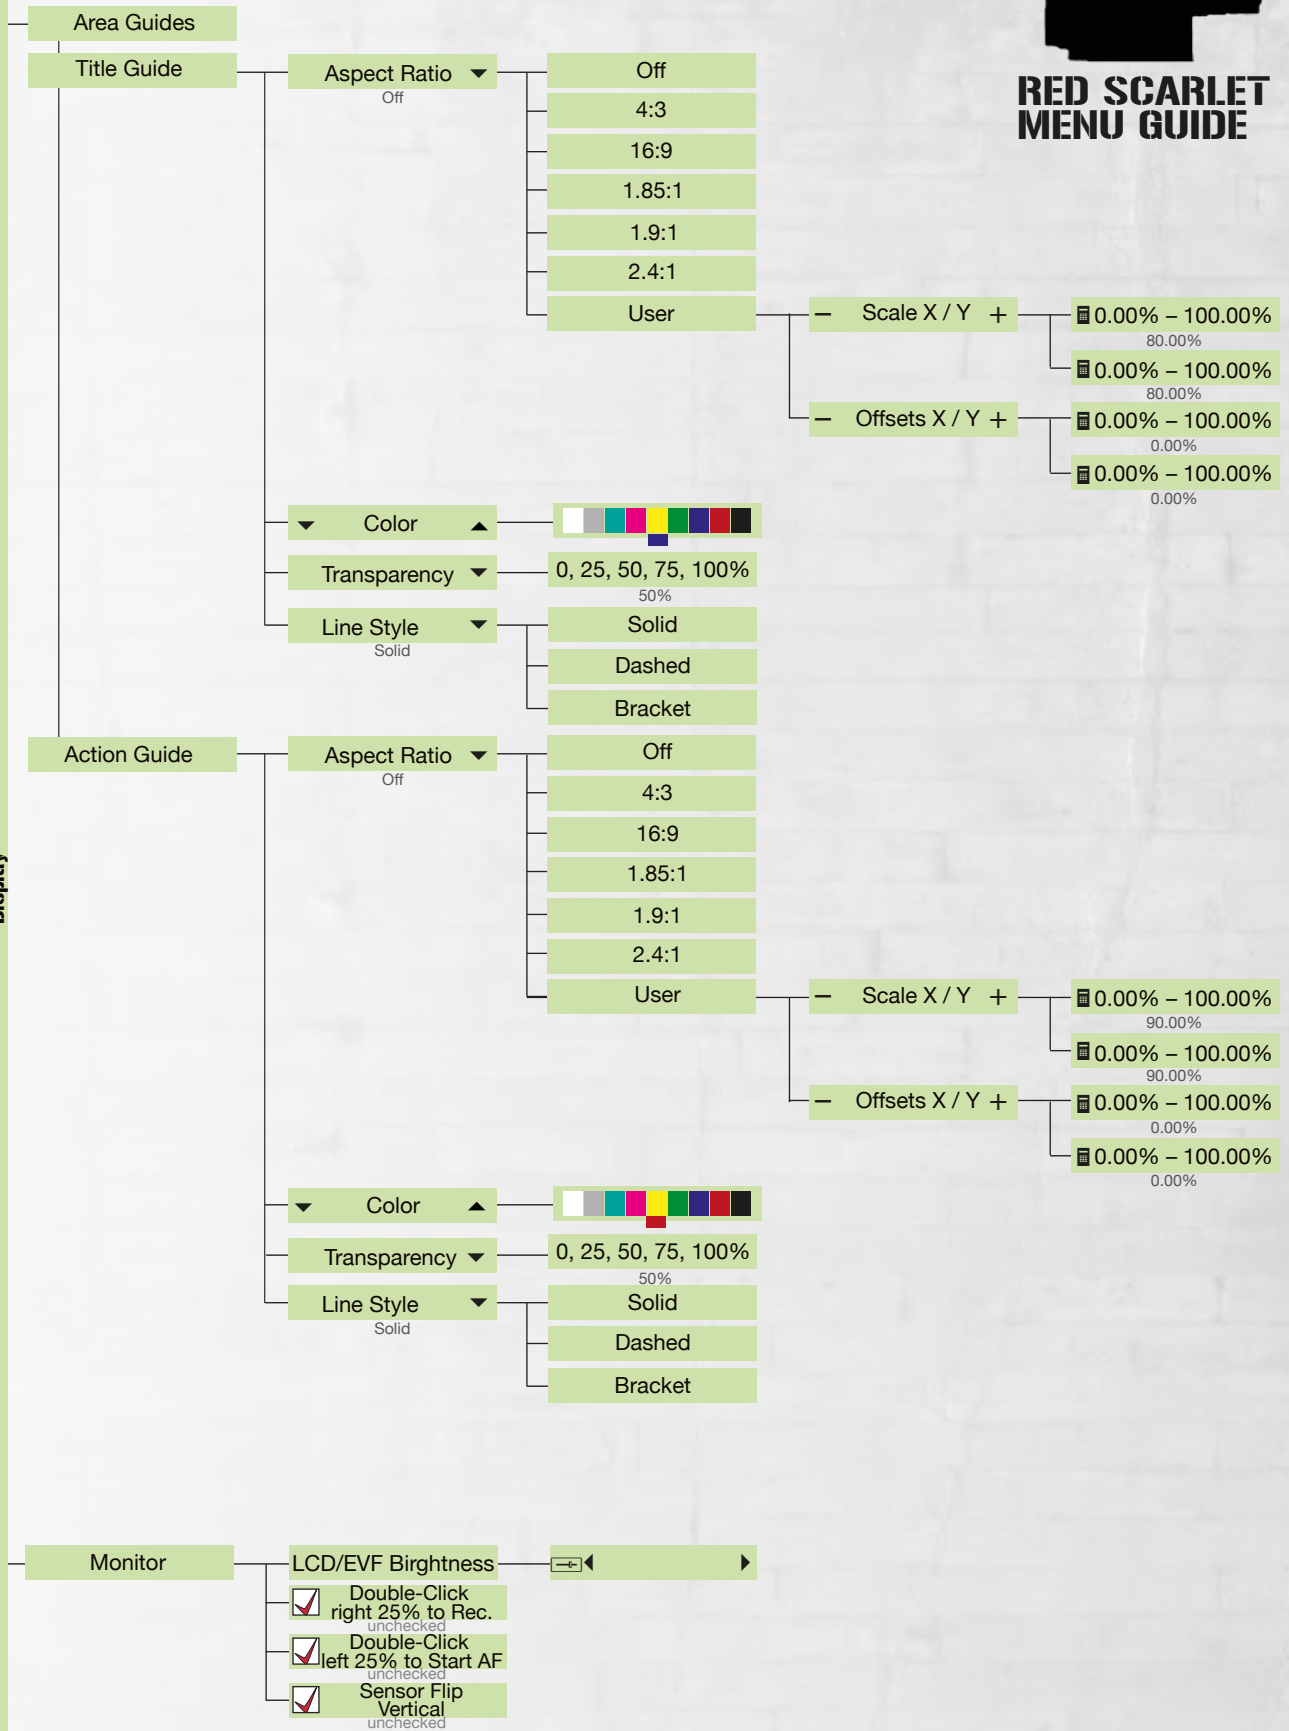


## RED SCARLET MENU GUIDE

# Secondary Menus 4/8


## Settings

Look

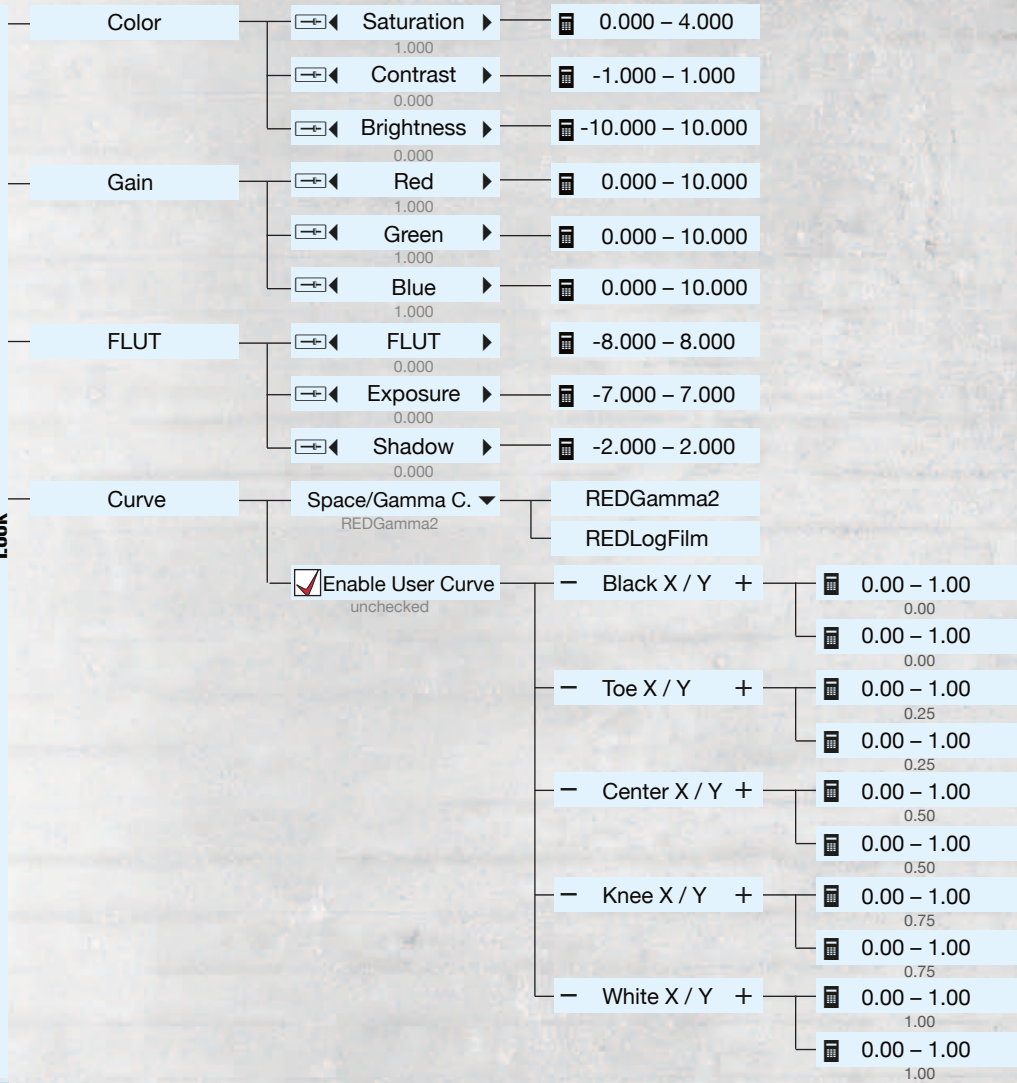


## RED SCARLET MENU GUIDE

Project

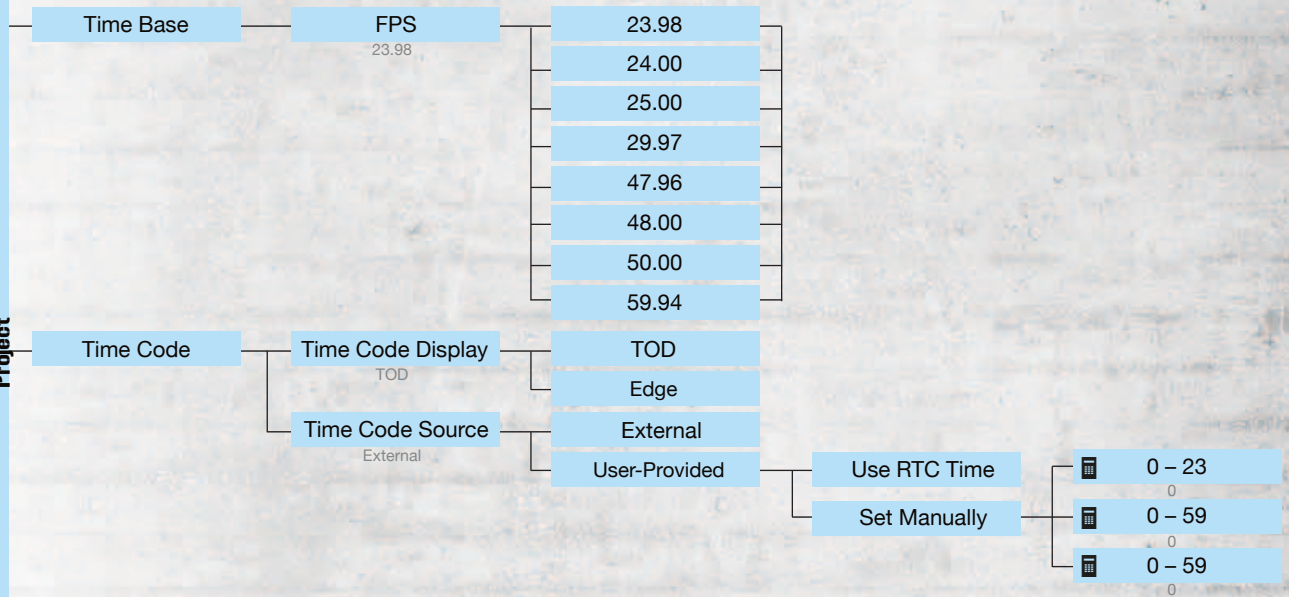

## Settings

Audio / Video

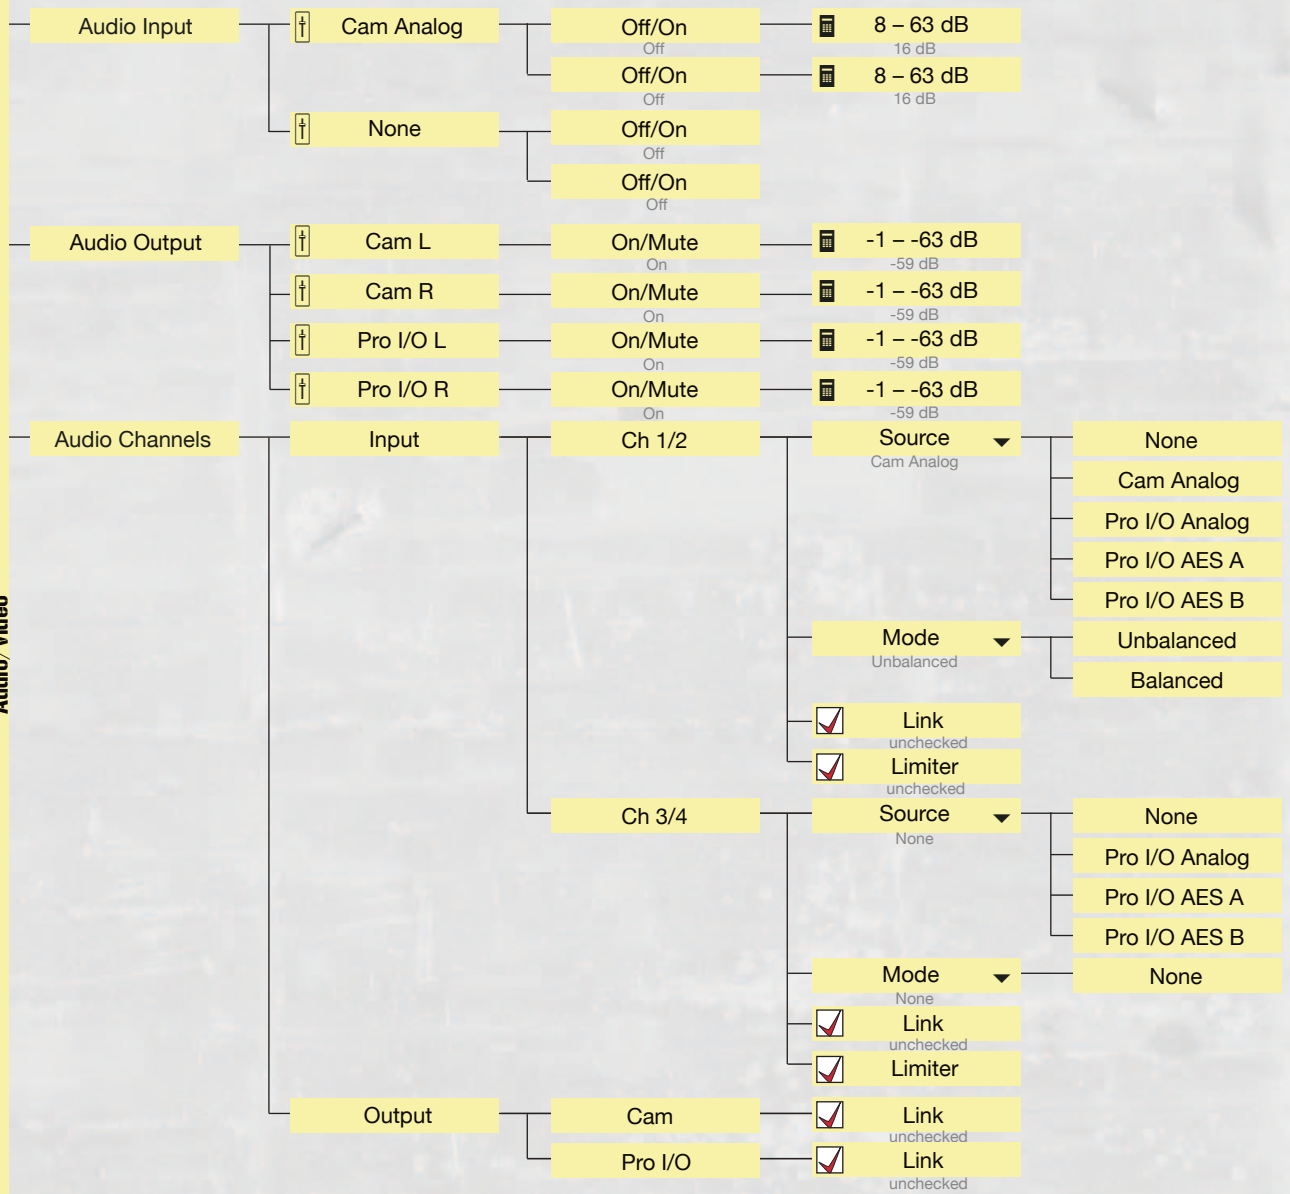


## RED SCARLET MENU GUIDE

# Secondary Menus 6/8


## Settings

Audio / Video

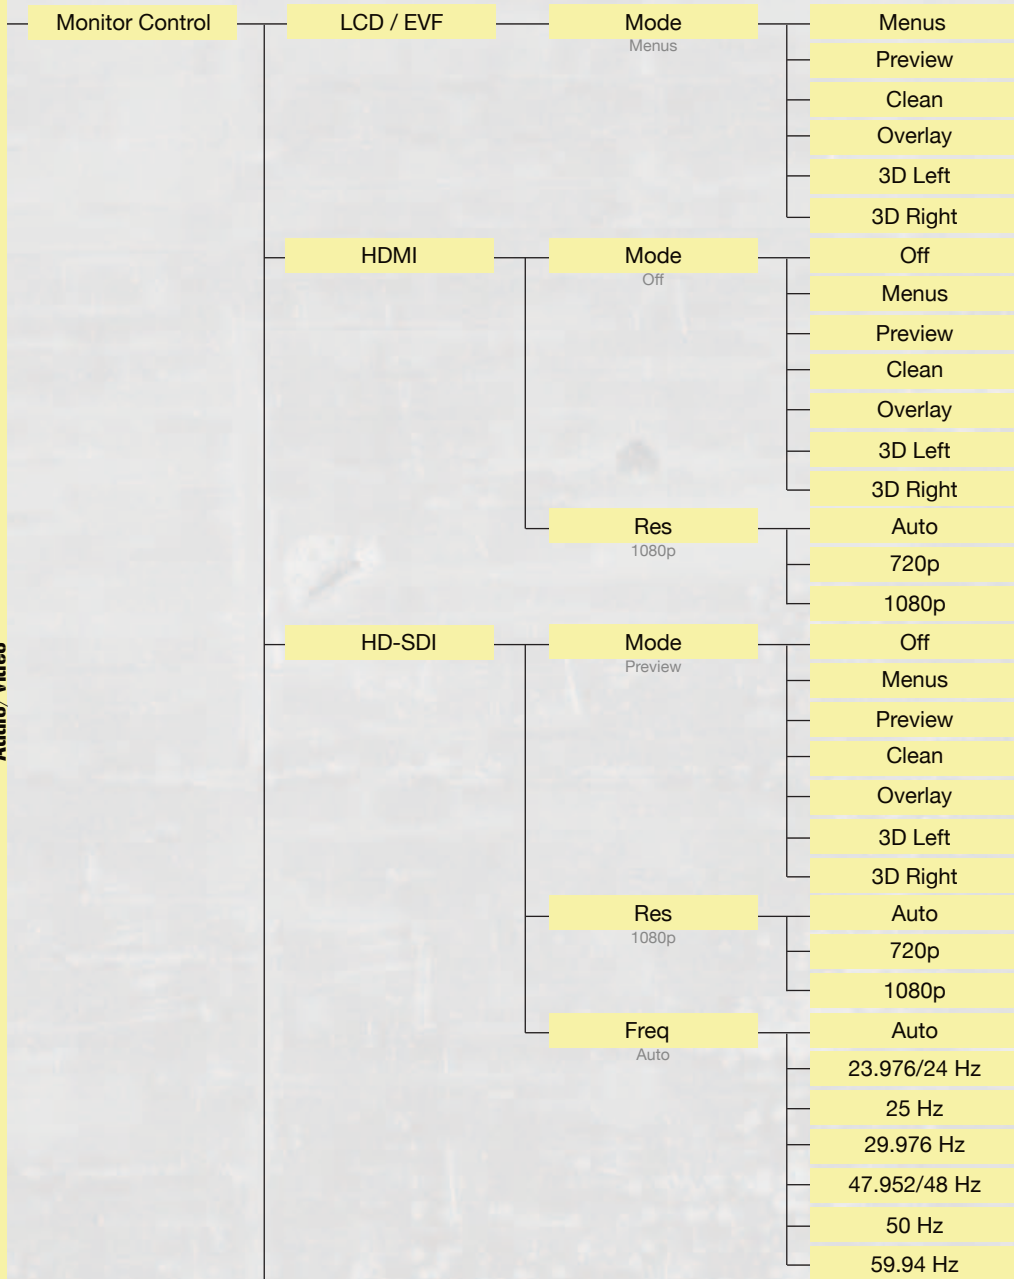

Automatically assign menu screen if enabled  
unchecked

 - Turning monitors ON/OFF or changing resolution requires a restart
- HDSDI and HDMI cannot be enabled at the same time
- Double-tapping on the touch LCD will re-enable the menus
- Settings will be applied when the dialog is closed




RED SCARLET  
MENU GUIDE

OCTAMAS

Menu Guide OCTAMAS AG Switzerland  
mail@octamas.com +41 44 401 58 00  
www.octamas.com

# Secondary Menus 7/8

## Settings Setup

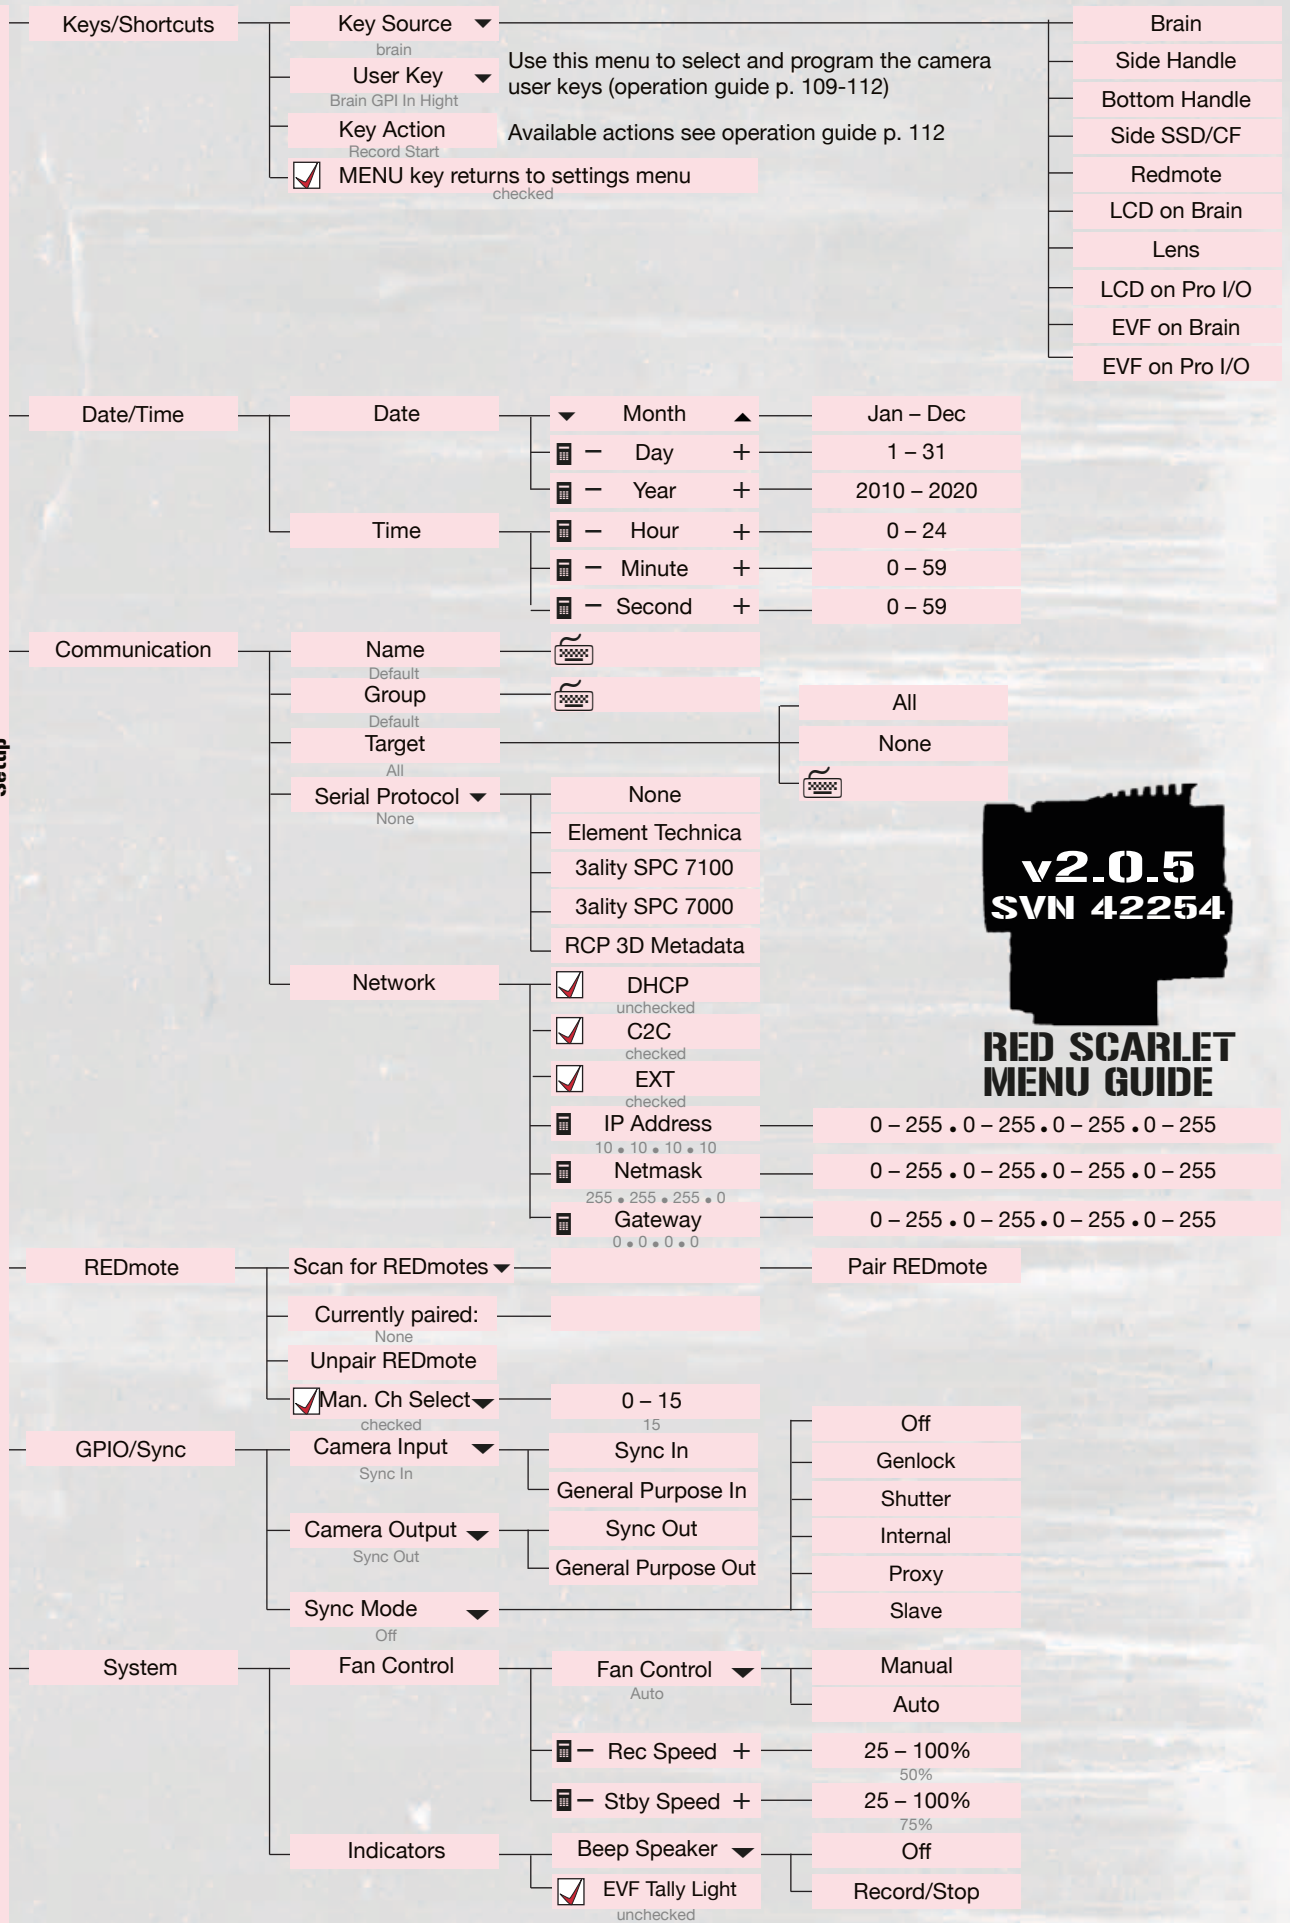

**v2.0.5**  
**SVN 42254**


**RED SCARLET**  
**MENU GUIDE**



## Settings

Maintenance

Playback

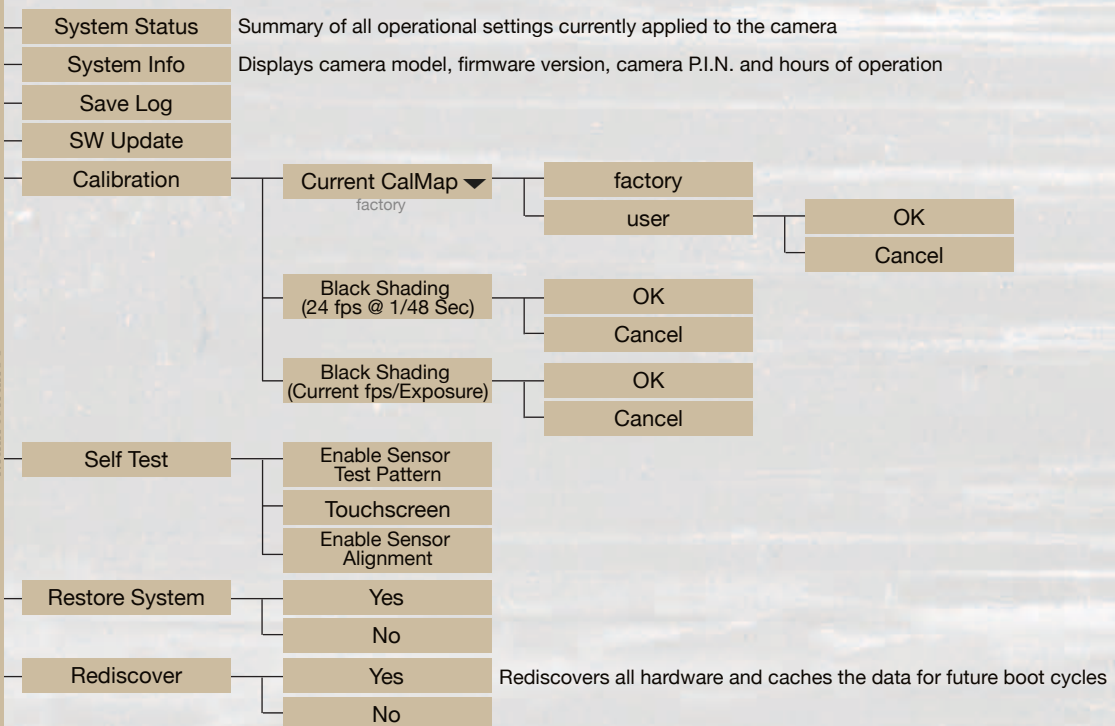

Allows you to view clips and also allows you to change the look of the playback clips, see operation guide p. 132 - 140

### LEGEND

- ▶ Playback
- Exit Playback
- x1 Playback Speed
- ⋮/▬ In Point Marker
- ◀ Frame-by-frame reverse
- ▶ / || Play / Pause
- ▶ Frame-by-frame forward
- ▬/⋮ Out Point Marker
- / ↺ Play once / Loop
- / ← Playback direction