

FPS

Basic

8 – 400 fps

24 fps

Advanced

1 – 400 fps +

23.976 fps

dependent on Resolution & REDCODE settings

ISO

250 – 12800

ISO 800

F-Stop

Basic

Allows adjustment of the aperture,
range depends on attached lens

Advanced +

Available with RED
EPIC Canon EOS
Mount

Aperture

Enter F-stop directly

Focus

Enter focal distance directly,
range depends on attached lens

1/SEC (Exposure)

Basic

1 sec – 1/8000 sec

1/48 sec

Advanced +

Exposure (Speed)

1 – 1/8000 sec +

1/48 sec

Integration Time

0.125 – 1000 ms +

20.833 ms

Angle*

-1.000 – 360.000 deg +

Absolute Angle 180.000 deg

* “Relative“ or „Absolute“
dependent on shutter mode

White Balance

Basic

1700 – 10000 K

Advanced

Preset

Daylight

Incandescent (2800K)

Tungsten (3200K)

Flourescent (4500K)

Flash (5500K)

Daylight (5600K)

Cloudy (7500K)

Shade (9000K)

Apply Preset

Color Temp.

5600 K

1700 – 10000K +

Tint

0

-100.000 – 100.000 +

Calc White Balance

Resolution

5K

5K 2:1

5120 x 2700

5K 2:1

5120 x 2560

5K WS

5120 x 2160

5K HD

4800 x 2700

5K Ana

3600 x 2700

4K

4096 x 2160

4K HD

3840 x 2160

3K

3072 x 1620

3K HD

2880 x 1620

2K

2048 x 1080

2K WS

2048 x 854

2K HD

1920 x 1080

1K HD

1280 x 720

1K WS

1280 x 480

REDCODE

3:1 – 18:1

8:1

dependent on Resolution & fps

RED EPIC
MENU GUIDE

Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00
www.octamas.com

LEGEND

Lorem ipsum

Are default values



Playback



Exit Playback



Touch this menu icon to enter the
Secondary Menus / to return to settings menu
Touch and hold to lock the touchscreen

Advanced

Touch and hold or double-click on an icon
to bring up an advanced interface display



Keypad for entering information directly



Keyboard for entering information directly



Slider to adjust levels



Touch and hold to unlock the touchscreen

Secondary Menus 1/11

HDR

Off

HDRx

Stops

1 – 6

2

Focus

Mode

Manual

Manual

Confirm

Single

Continuous

Touch Track

Rack

Zones

Spot

Center

Spot

Available with RED EPIC
Canon EOS Mount and
Lens in AF Mode

Exposure

Not Implemented at this time

Presets

Camera Preset

Camera

-->

All ->

<--

<- All

S-SSD\presets

Apply

Delete...

Yes

No

Create



New Name

Display

Key

Look

Project

System

-->

All ->

<--

<- X

Create

Looks

Camera

-->

All ->

<--

<- All

S-SSD\looks

Apply

Delete...

Yes

No

Select Media

S-SSD

R-SSD

Format Media...



Reel No

+

1 – 999

Cam ID

A

A – Z

Cam Pos

center

right

center

left

Format

Cancel

Edge TC Start



0 – 23



0 – 59



0 – 59

Eject Media

Utils...

Secure Format...



Reel No

+

1 – 999

A – Z

right

center

left

Secure Format

Cancel



0 – 23



0 – 59



0 – 59

Settings see next pages

Settings

Power

Shutdown

Cancel



RED EPIC MENU GUIDE



Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00

www.octamas.com

Secondary Menus 2/11

Settings

Display




RED EPIC MENU GUIDE



Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00
www.octamas.com

Settings

Display

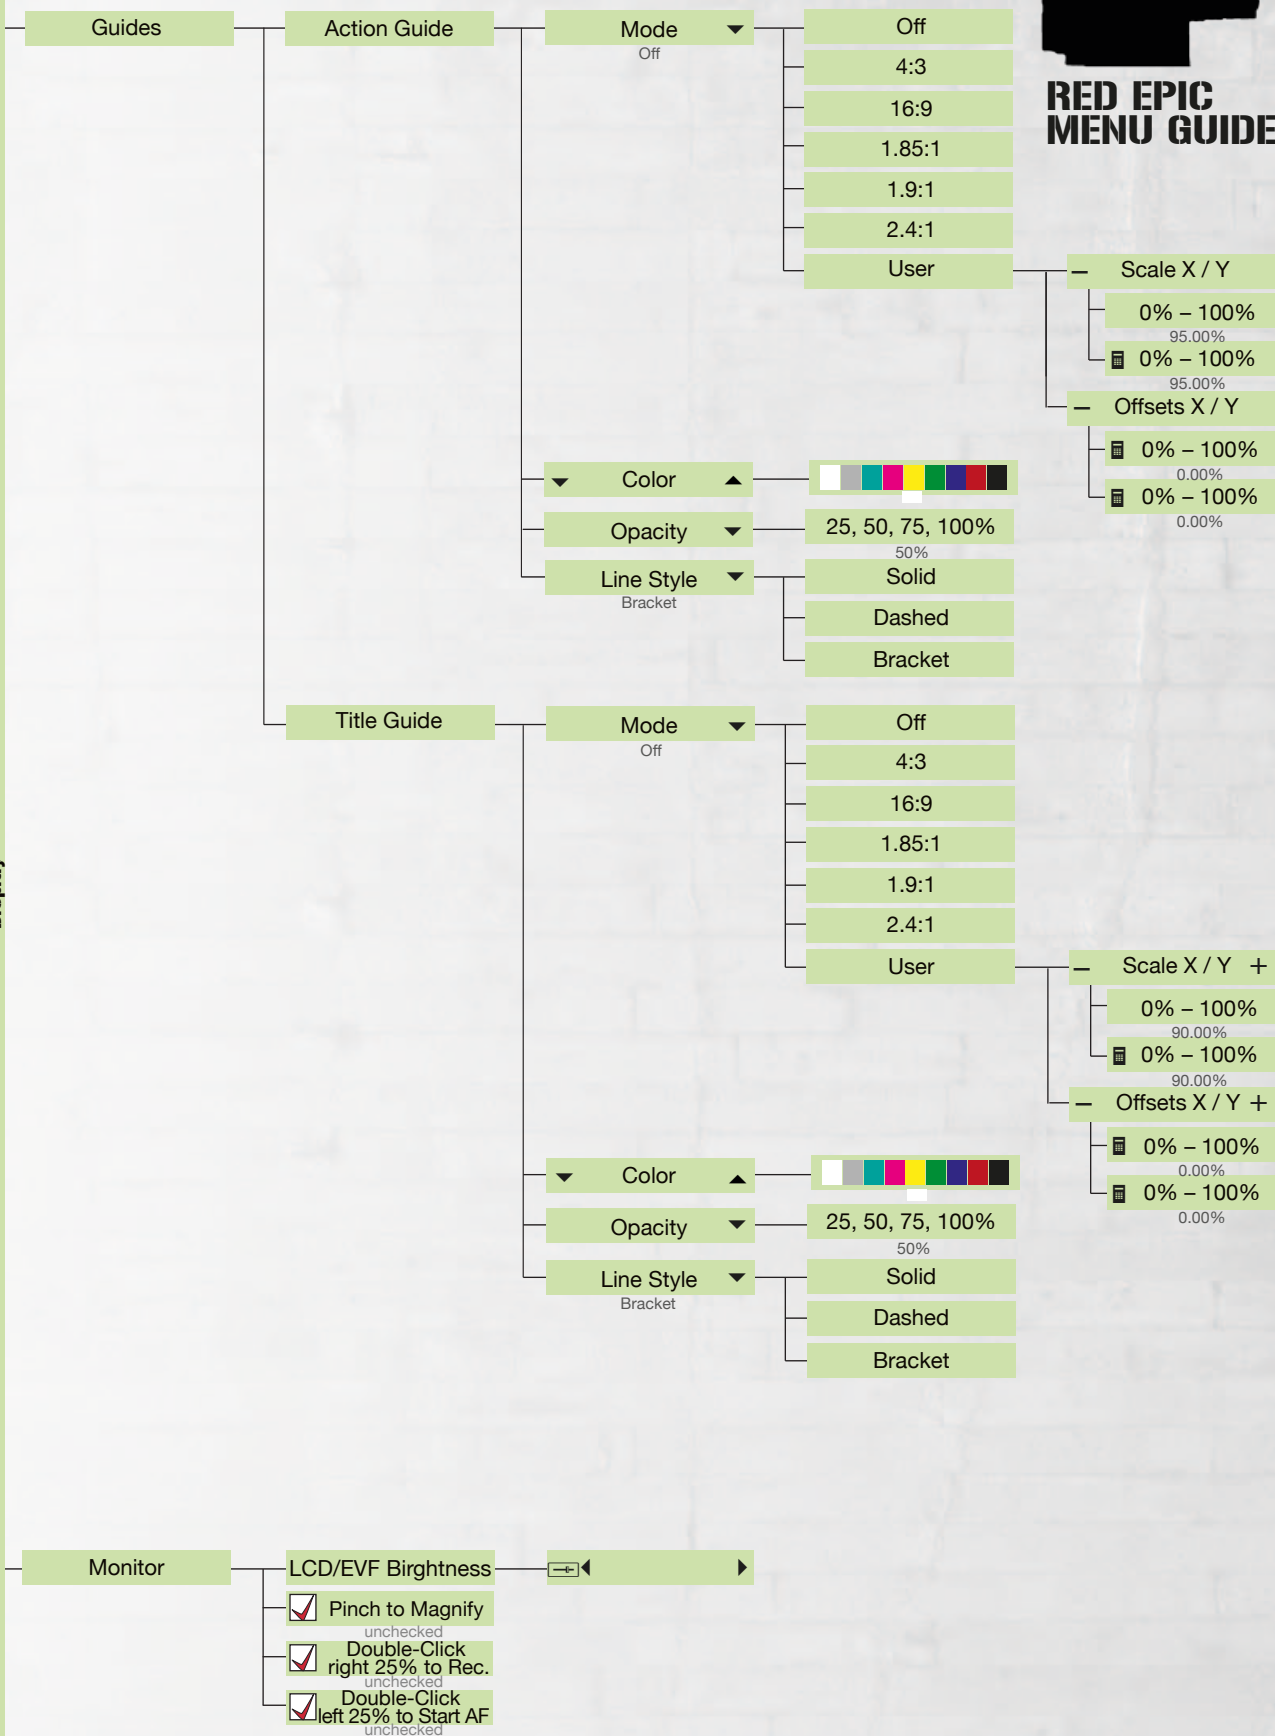

v3.2.21
SVN 48926




RED EPIC MENU GUIDE

OCTAMAS

Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00
www.octamas.com

Settings


Look

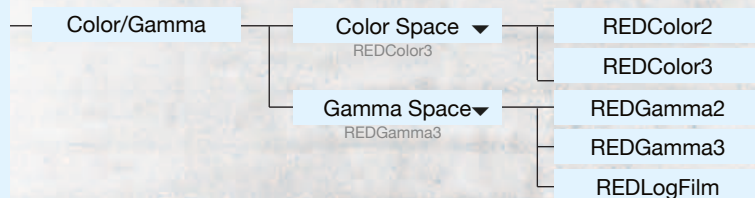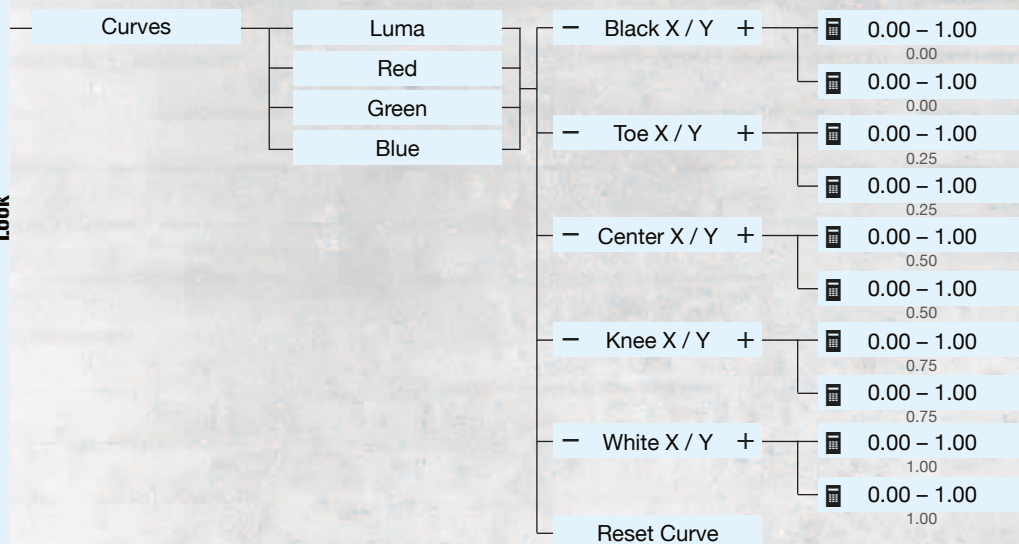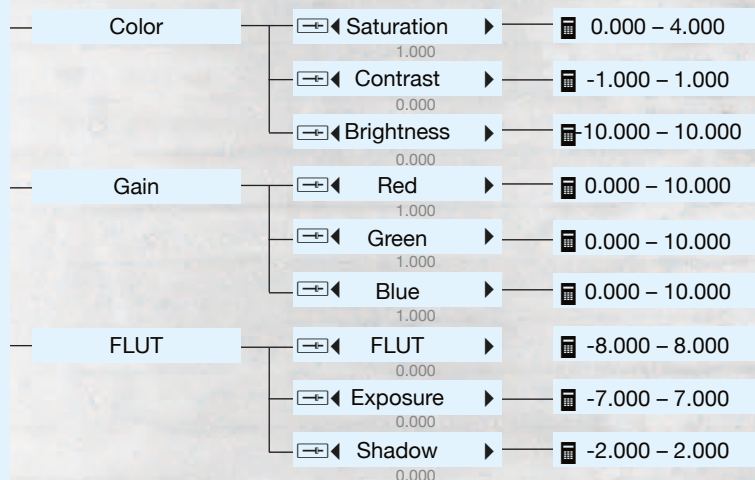

**RED EPIC
MENU GUIDE**


Settings

Project

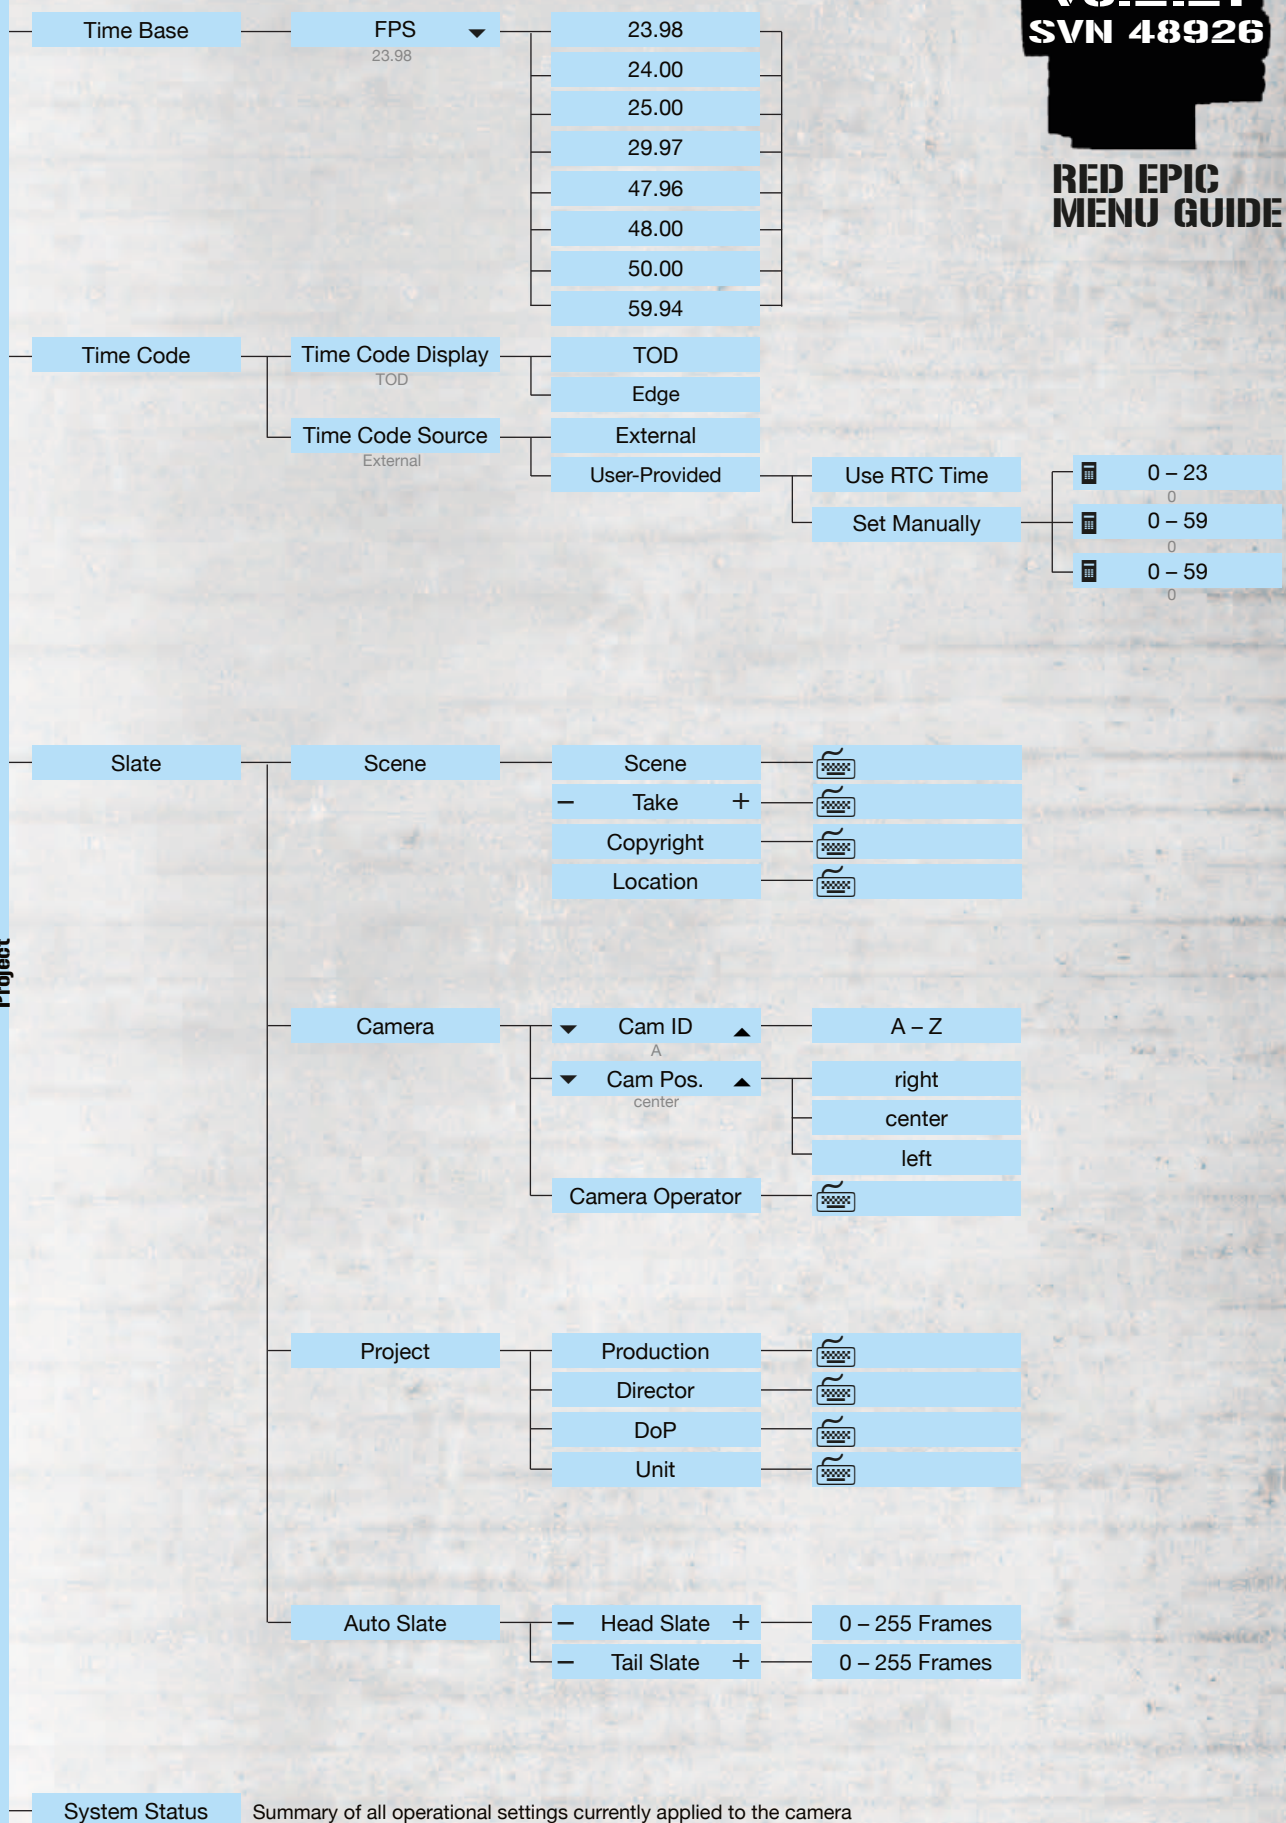


Settings

Audio / Video

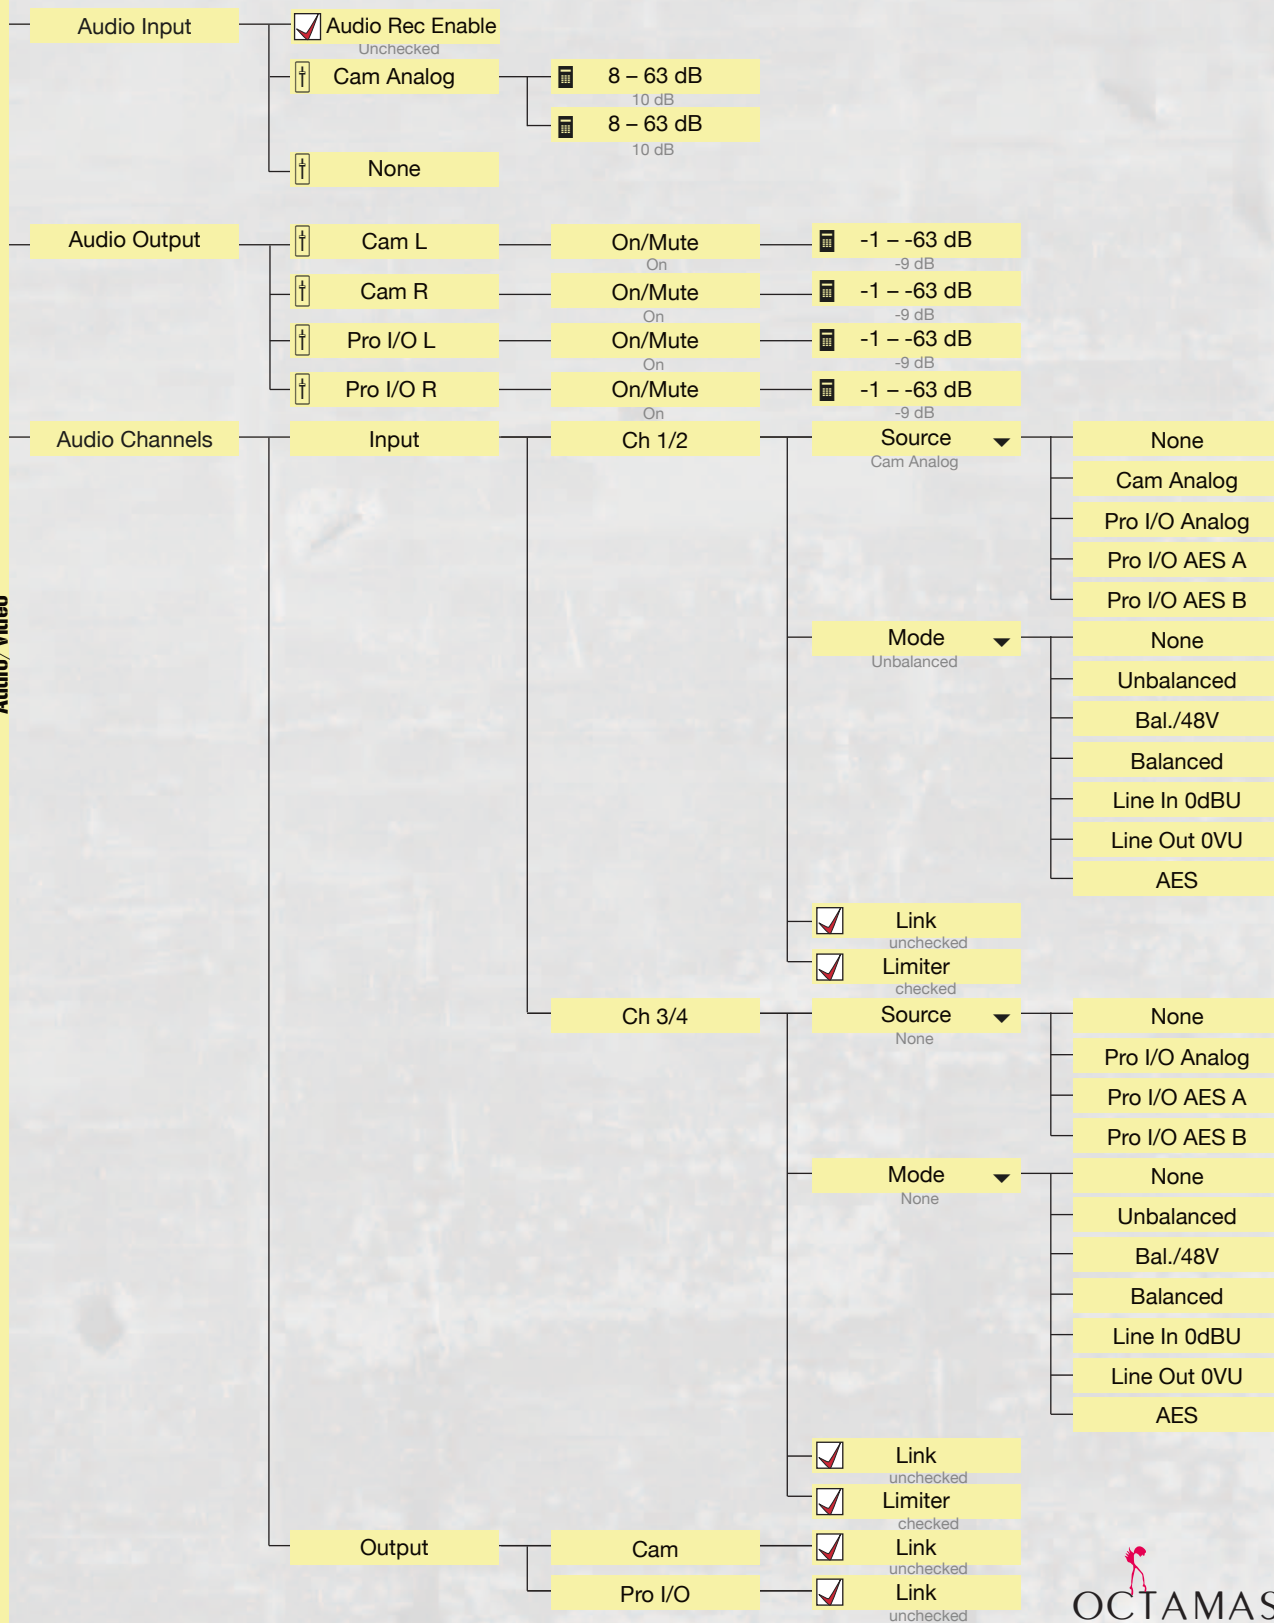

RED EPIC
MENU GUIDE


OCTAMAS

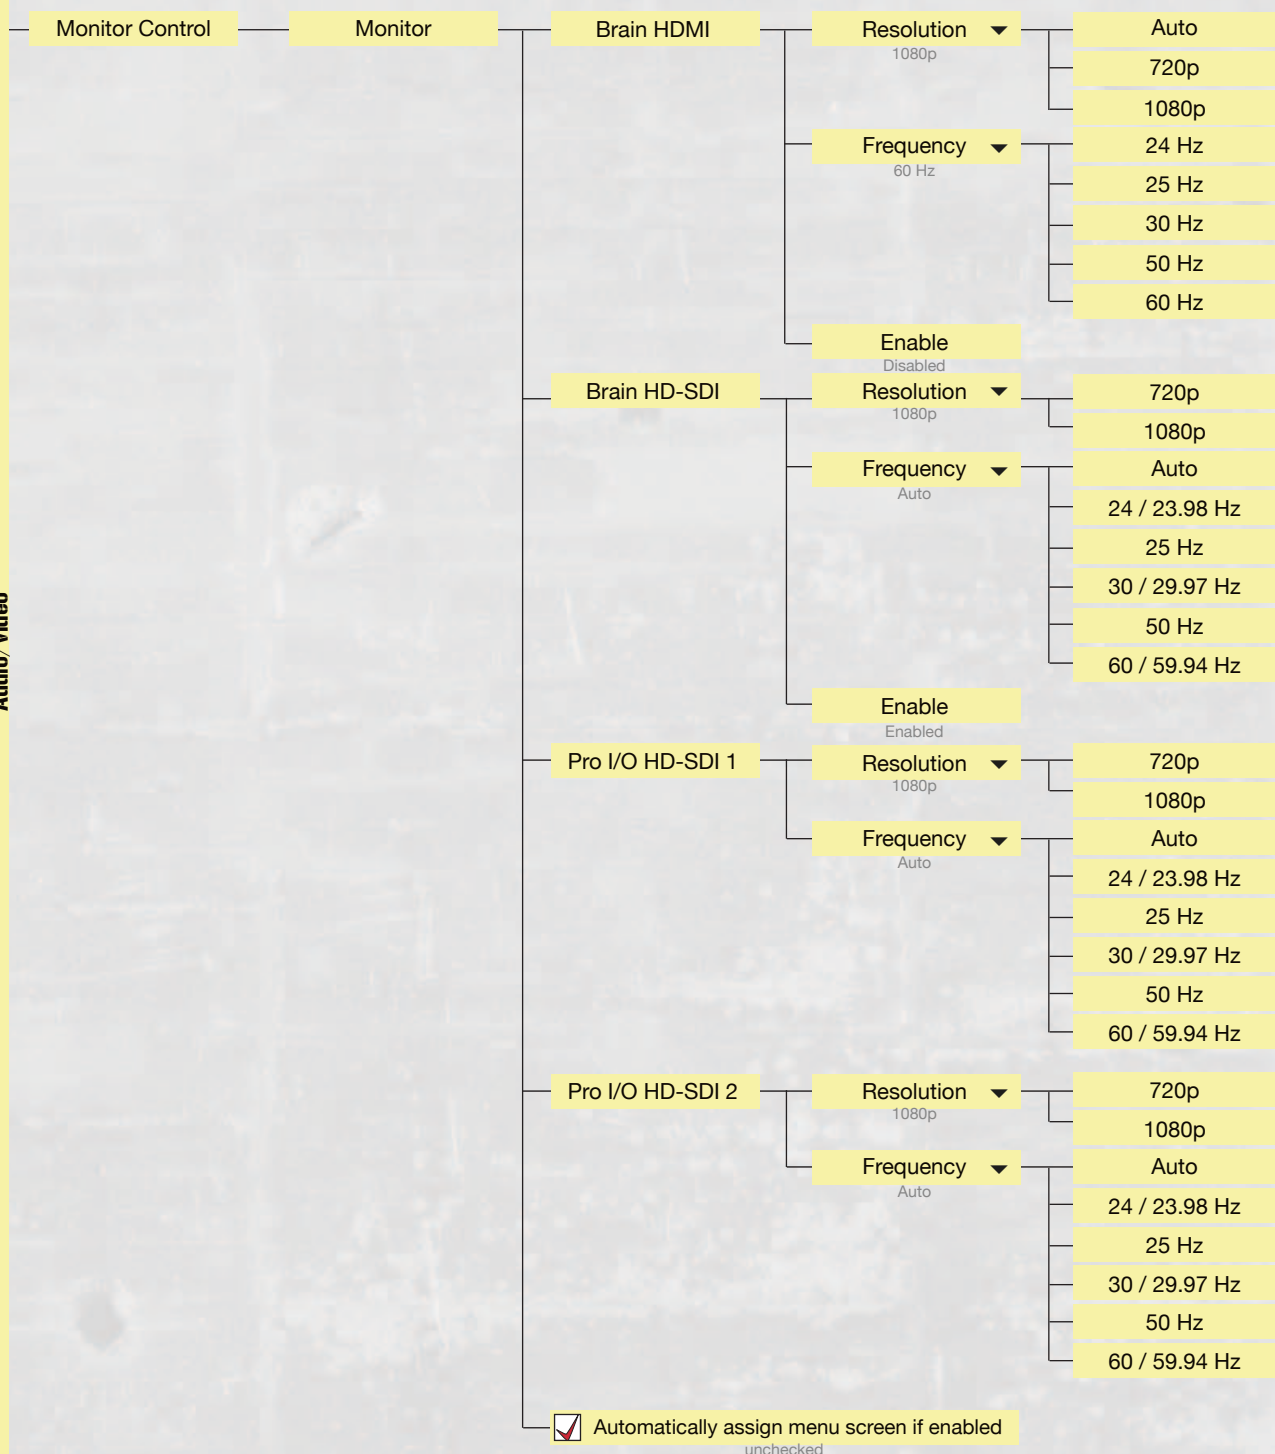

Secondary Menus 8/11

Settings

Audio / Video

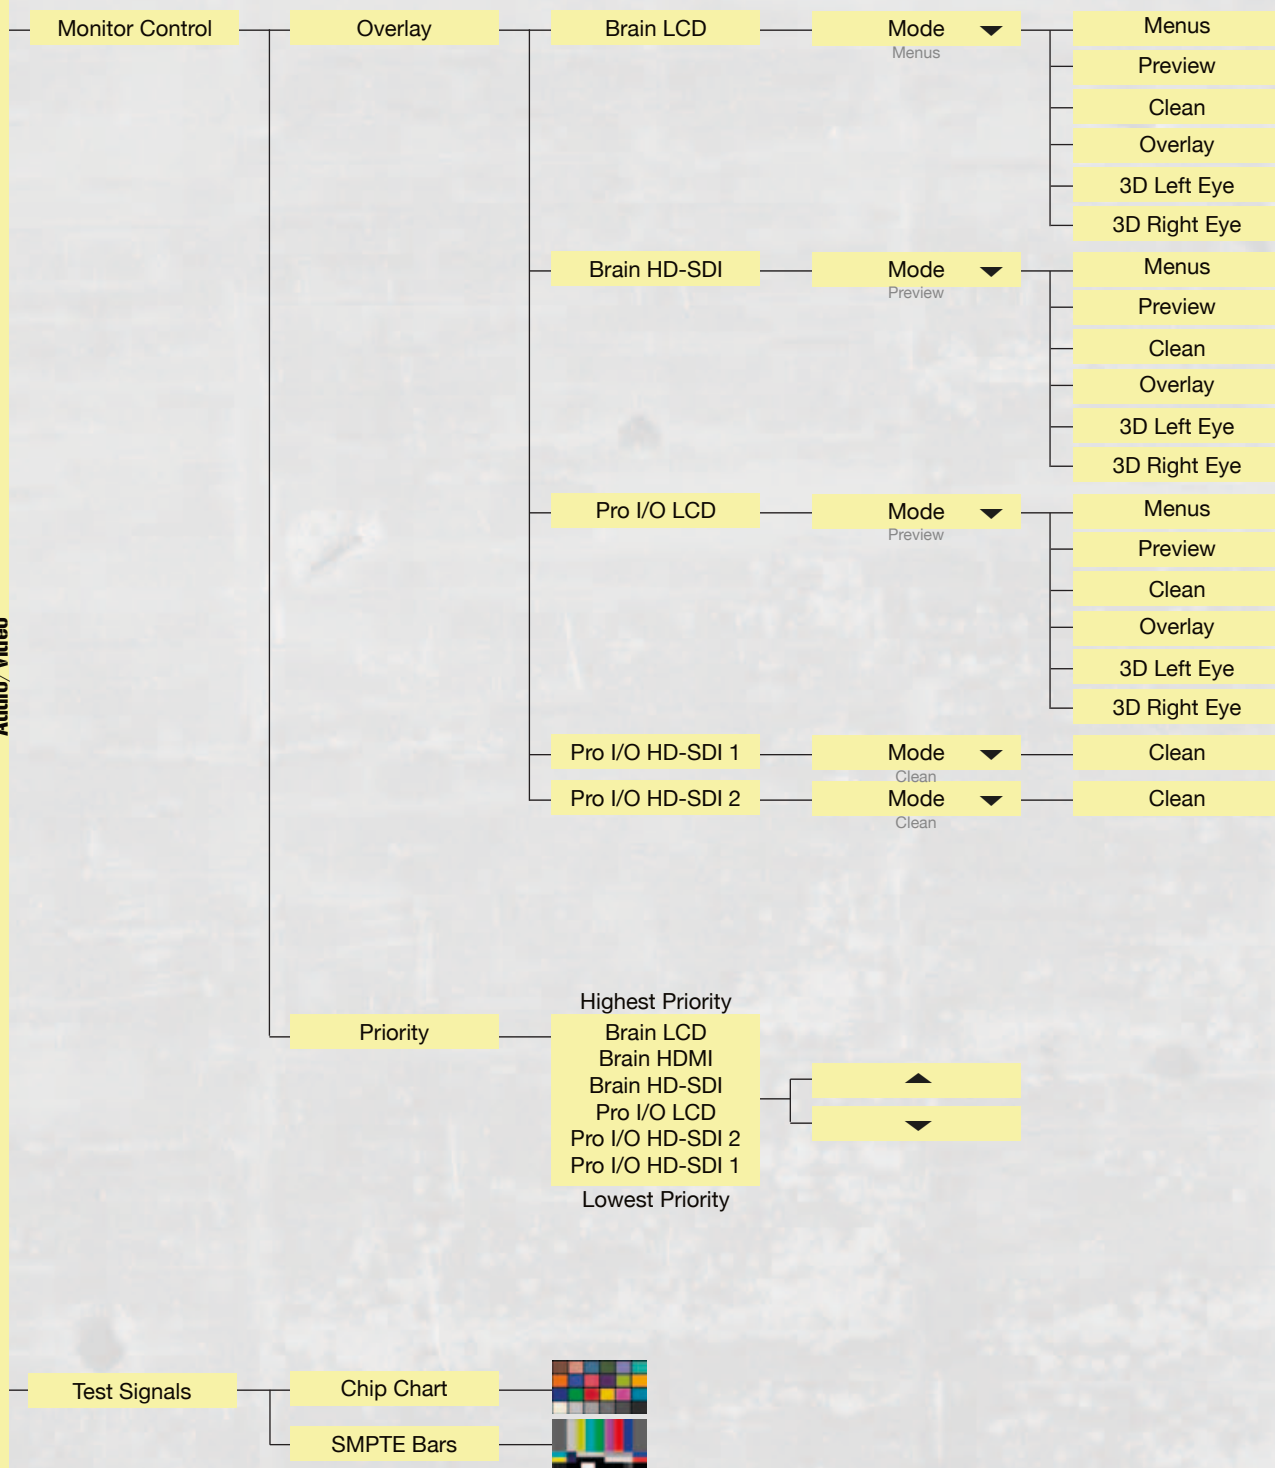


**RED EPIC
MENU GUIDE**

 **OCTAMAS**

Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00
www.octamas.com

Settings


Setup

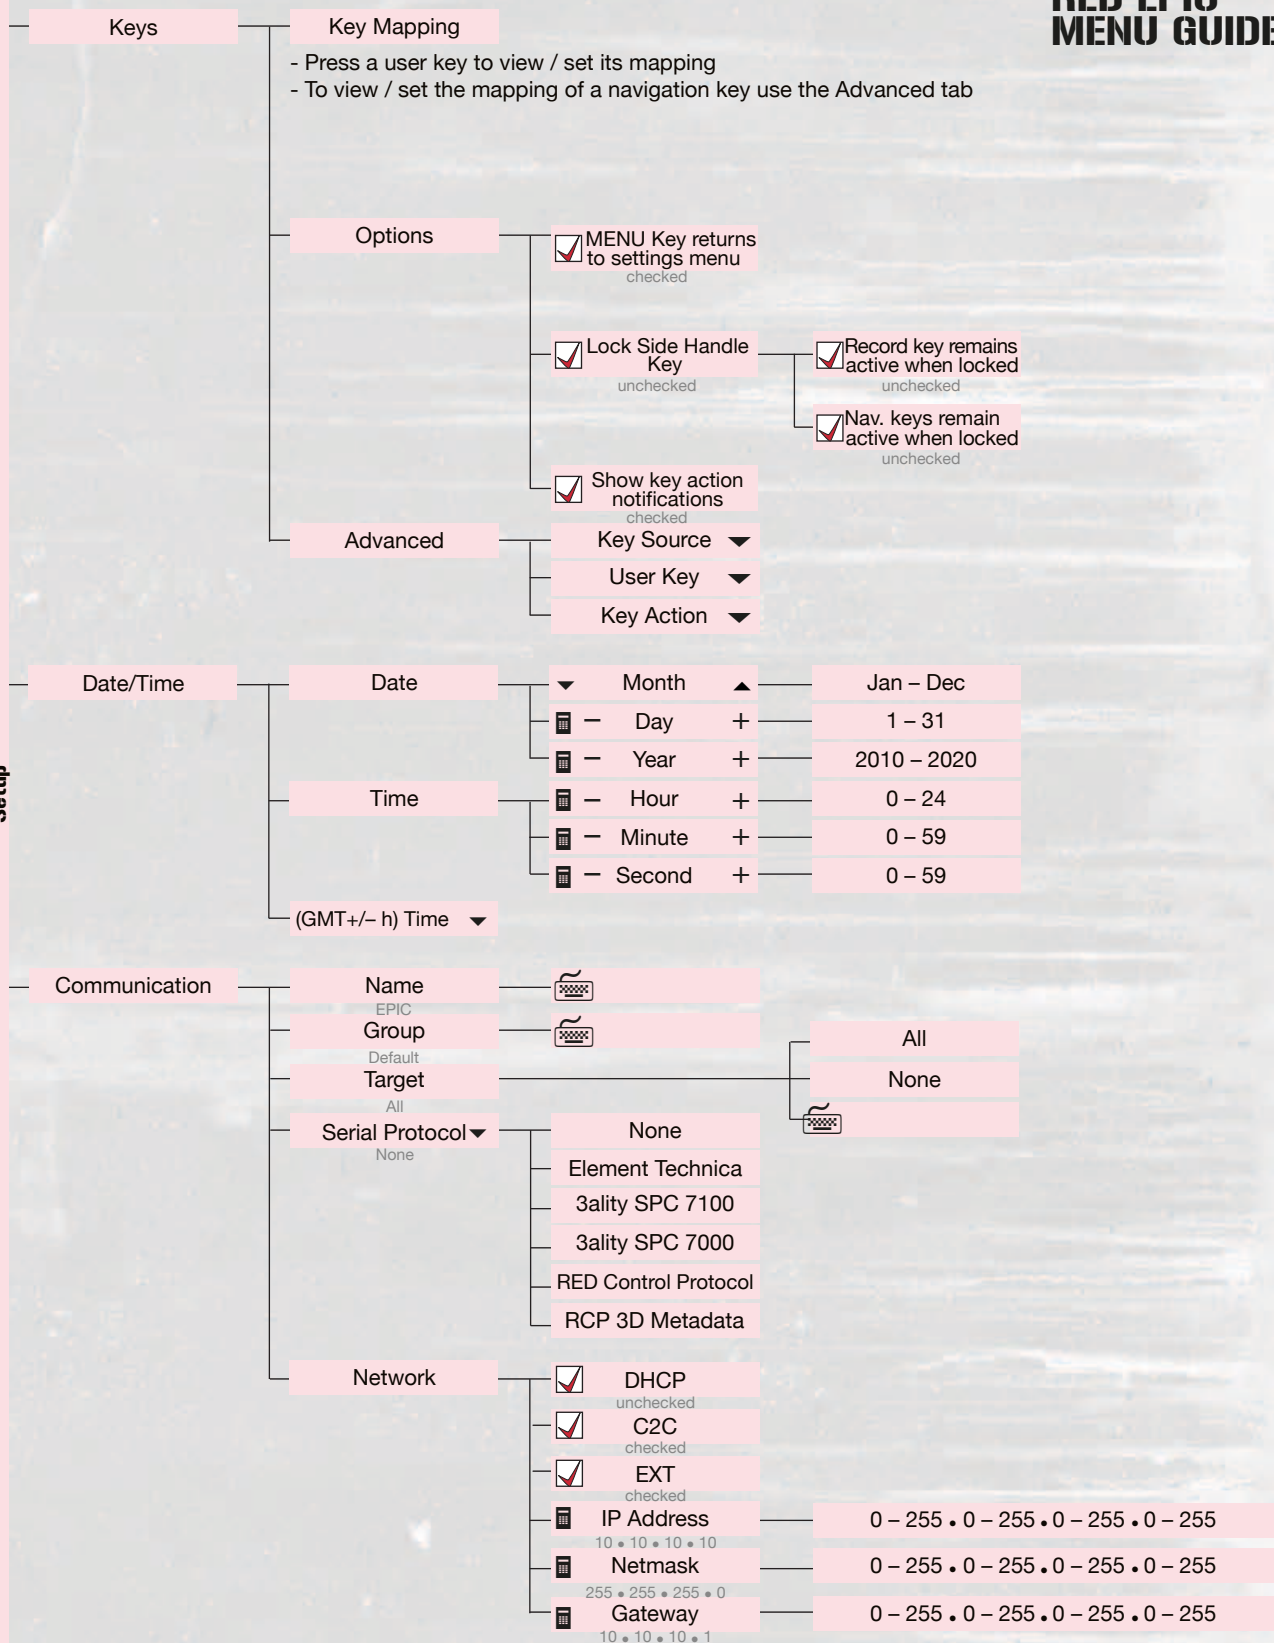

**RED EPIC
MENU GUIDE**

Settings


Setup

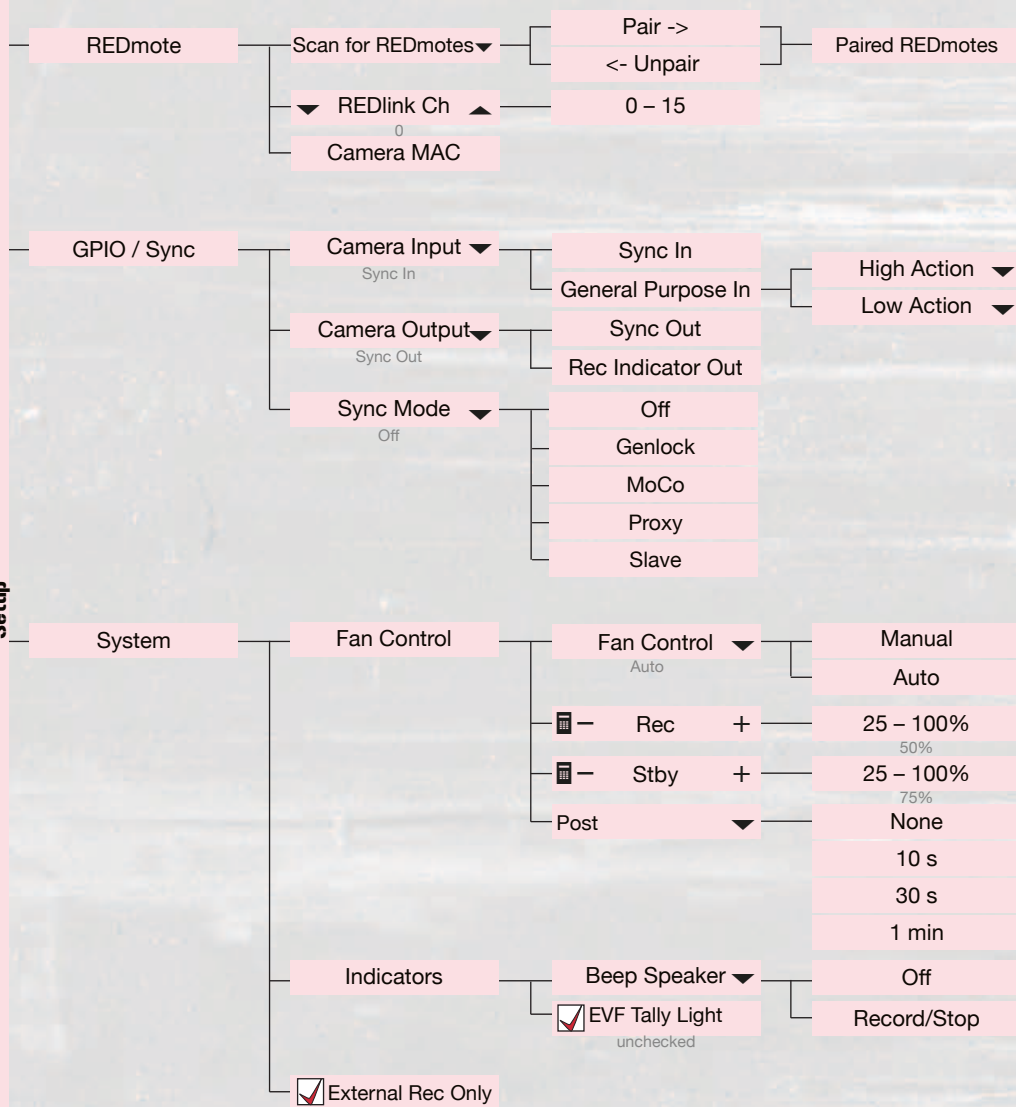

RED EPIC
MENU GUIDE

Settings

Maintenance

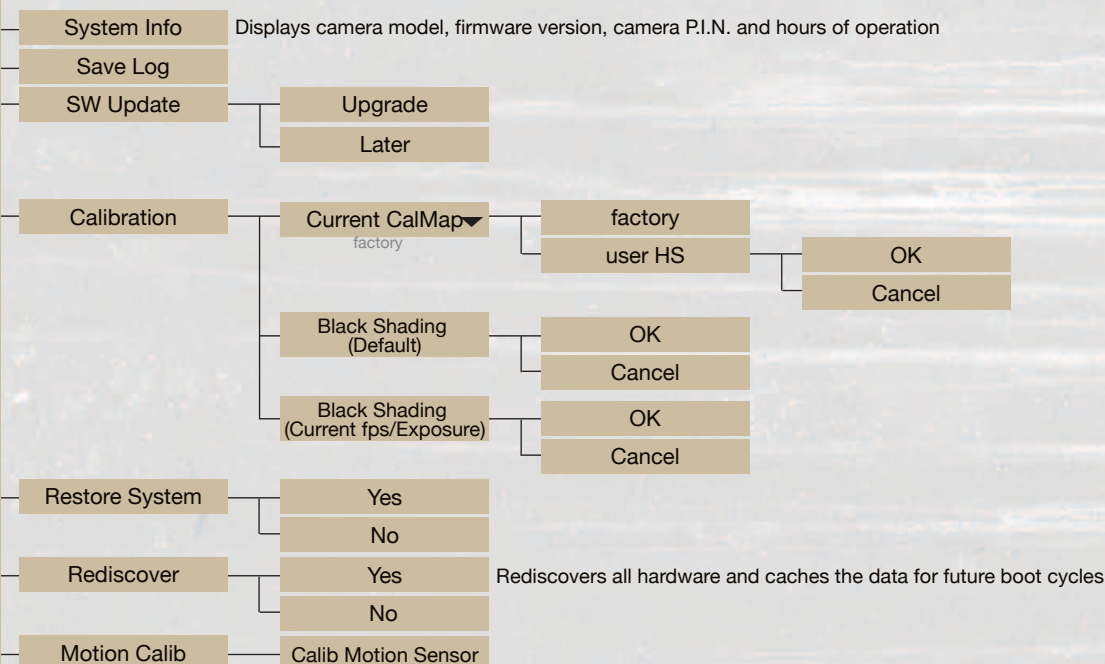

Playback

Allows you to view clips and also allows you to change the look of the playback clips, see operation guide p. 132 - 140

LEGEND

- ▶ Playback
- Exit Playback
- x1 Playback Speed
- ⋯/ In Point Marker
- ◀ Frame-by-frame reverse
- ▶ / II Play / Pause
- ▶ Frame-by-frame forward
- ⋯/ Out Point Marker
- I / ↺ Play once / Loop
- / ← Playback direction