

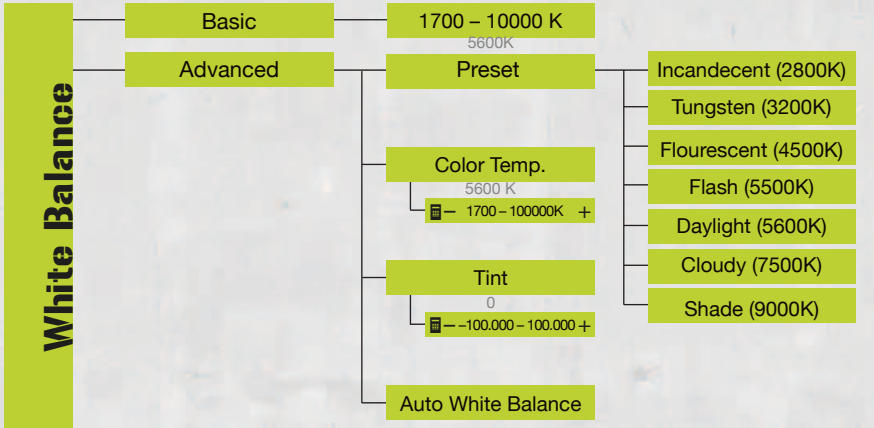
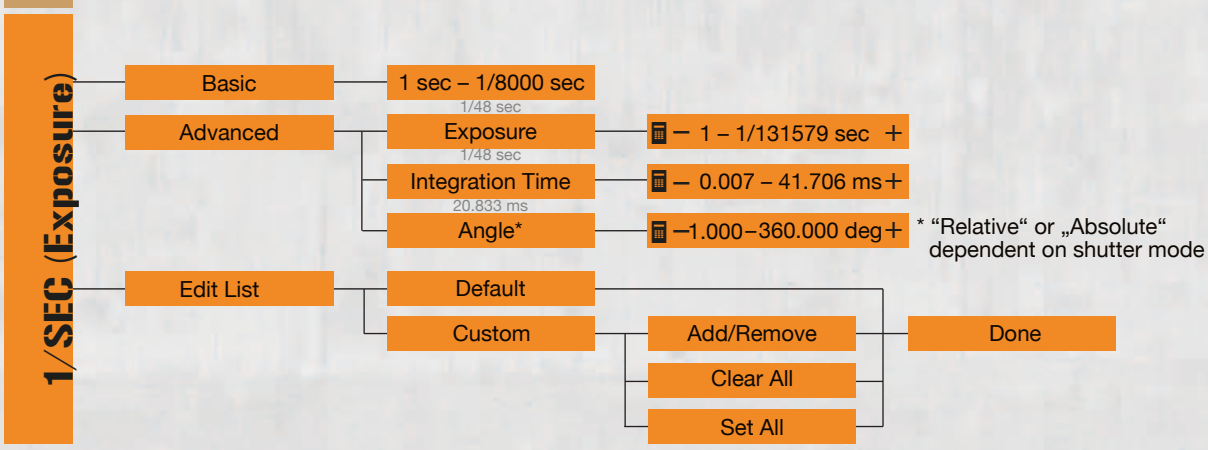
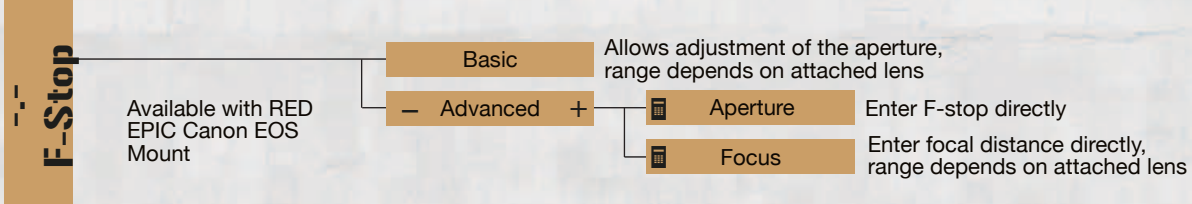


Basic Menus 1/2

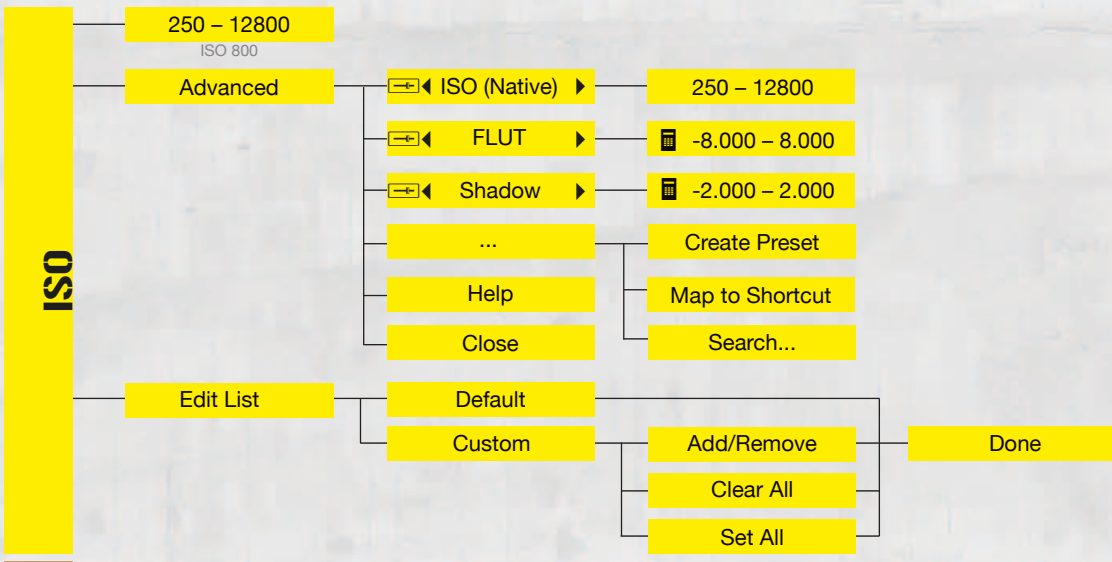


RED EPIC MENU GUIDE

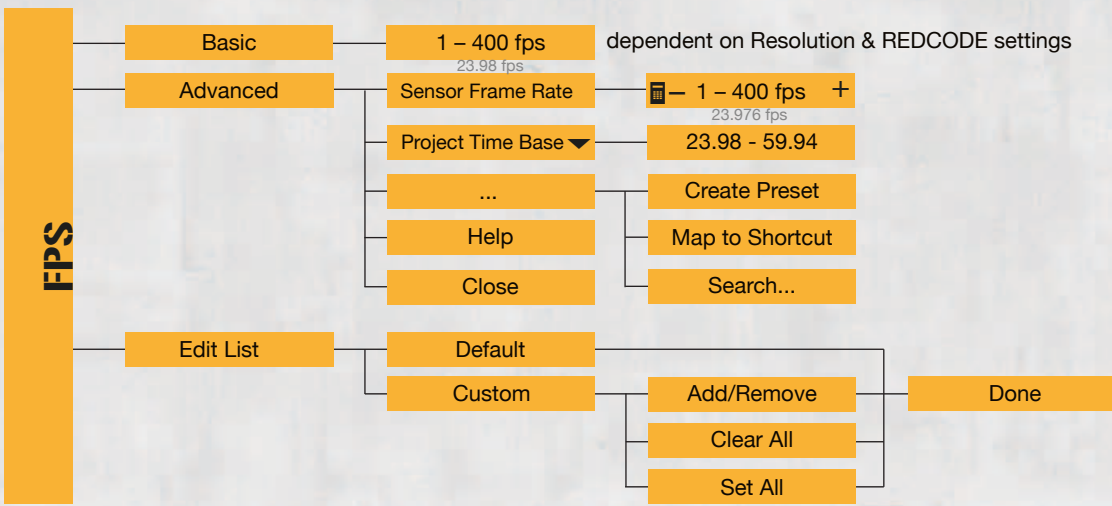

Basic Menus 2/2

White Balance

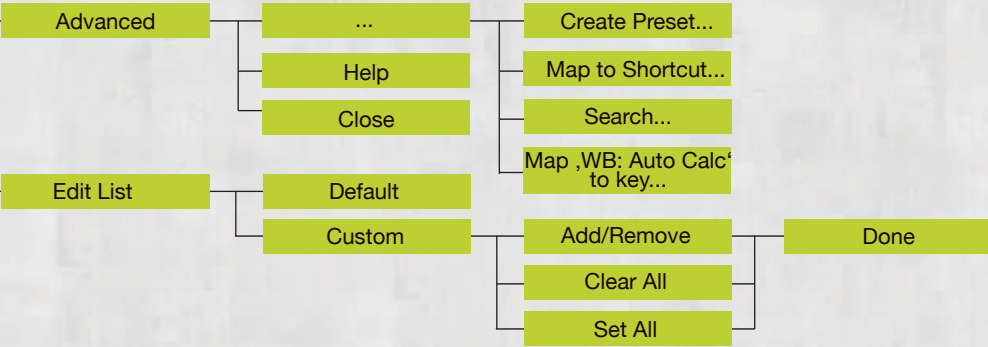


RED EPIC MENU GUIDE




Menu Guide OCTAMAS AG Switzerland
 mail@octamas.com +41 44 401 58 00
 www.octamas.com

Resolution

Preset	Resolution
5K	5120 x 2700
5K 2:1	5120 x 2560
5K WS	5120 x 2160
5K HD	4800 x 2700
4K	4096 x 2160
4K WS	4096 x 1708
4K HD	3840 x 2160
3K	3072 x 1620
3K WS	3072 x 1284
3K HD	2880 x 1620
2K	2048 x 1080
2K WS	2048 x 854
2K HD	1920 x 1080
1K WS	1280 x 480
1K HD	1280 x 720

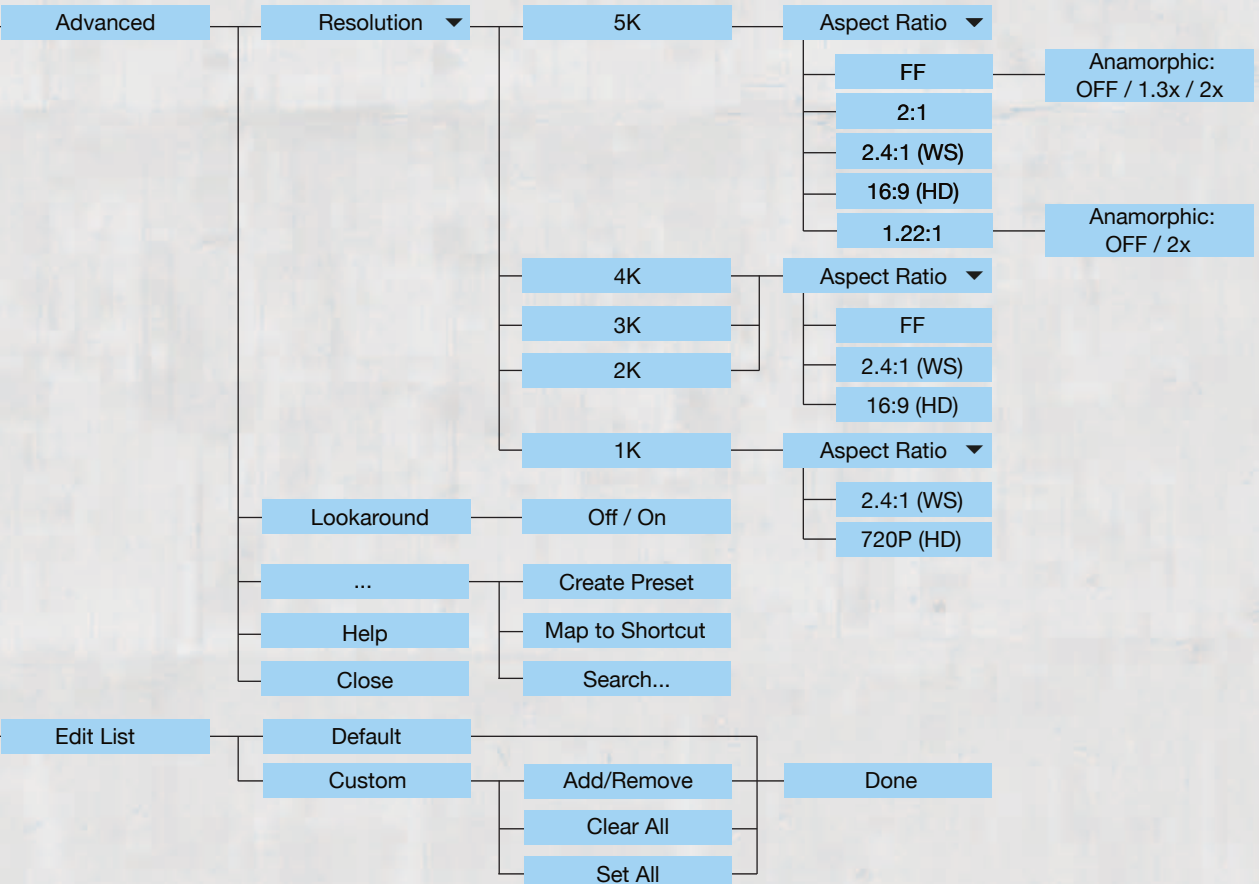

REDCODE

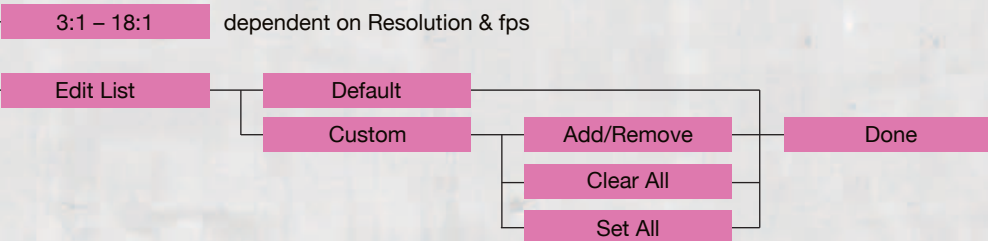


Settings

Settings see the following pages from Advanced Menus 4/20



RED EPIC MENU GUIDE

Media

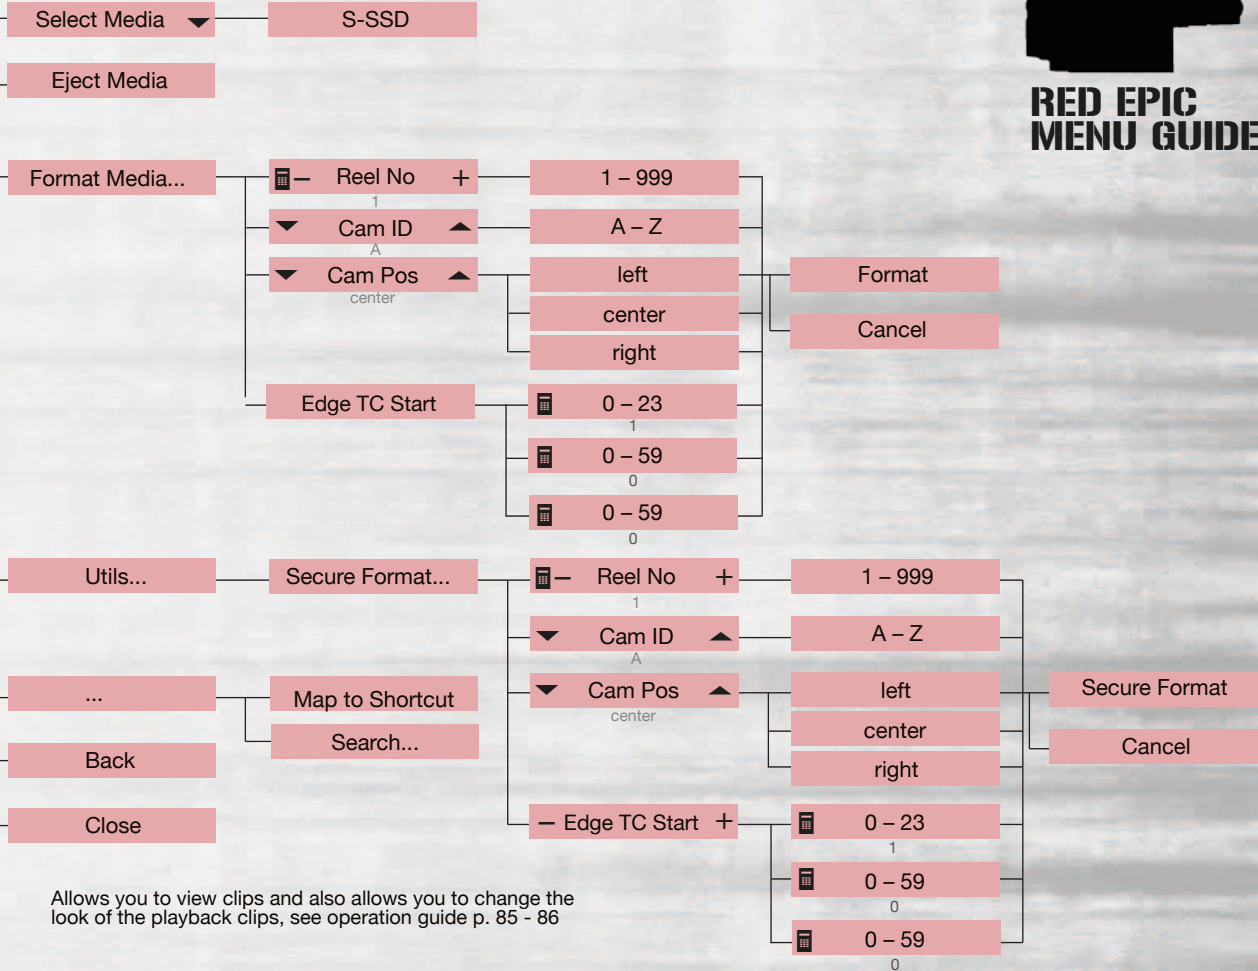


Allows you to view clips and also allows you to change the look of the playback clips, see operation guide p. 85 - 86


Playback/Record

- Playback
- Exit Playback
- Playback Speed
- In Point Marker
- Frame-by-frame reverse
- Play / Pause
- Frame-by-frame forward
- Out Point Marker
- Play once / Loop
- Playback direction

Power

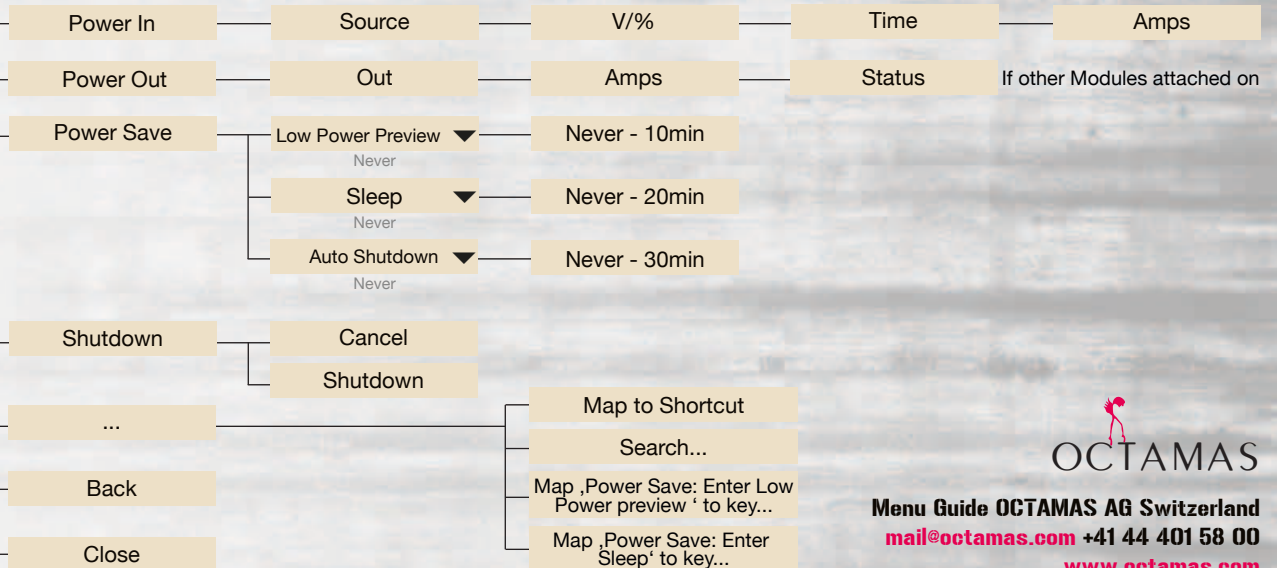


HDR

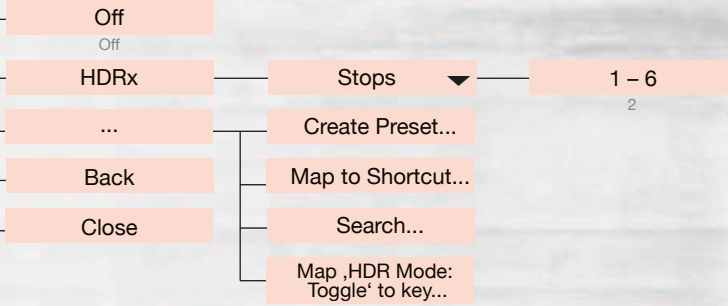

RED EPIC MENU GUIDE


Focus

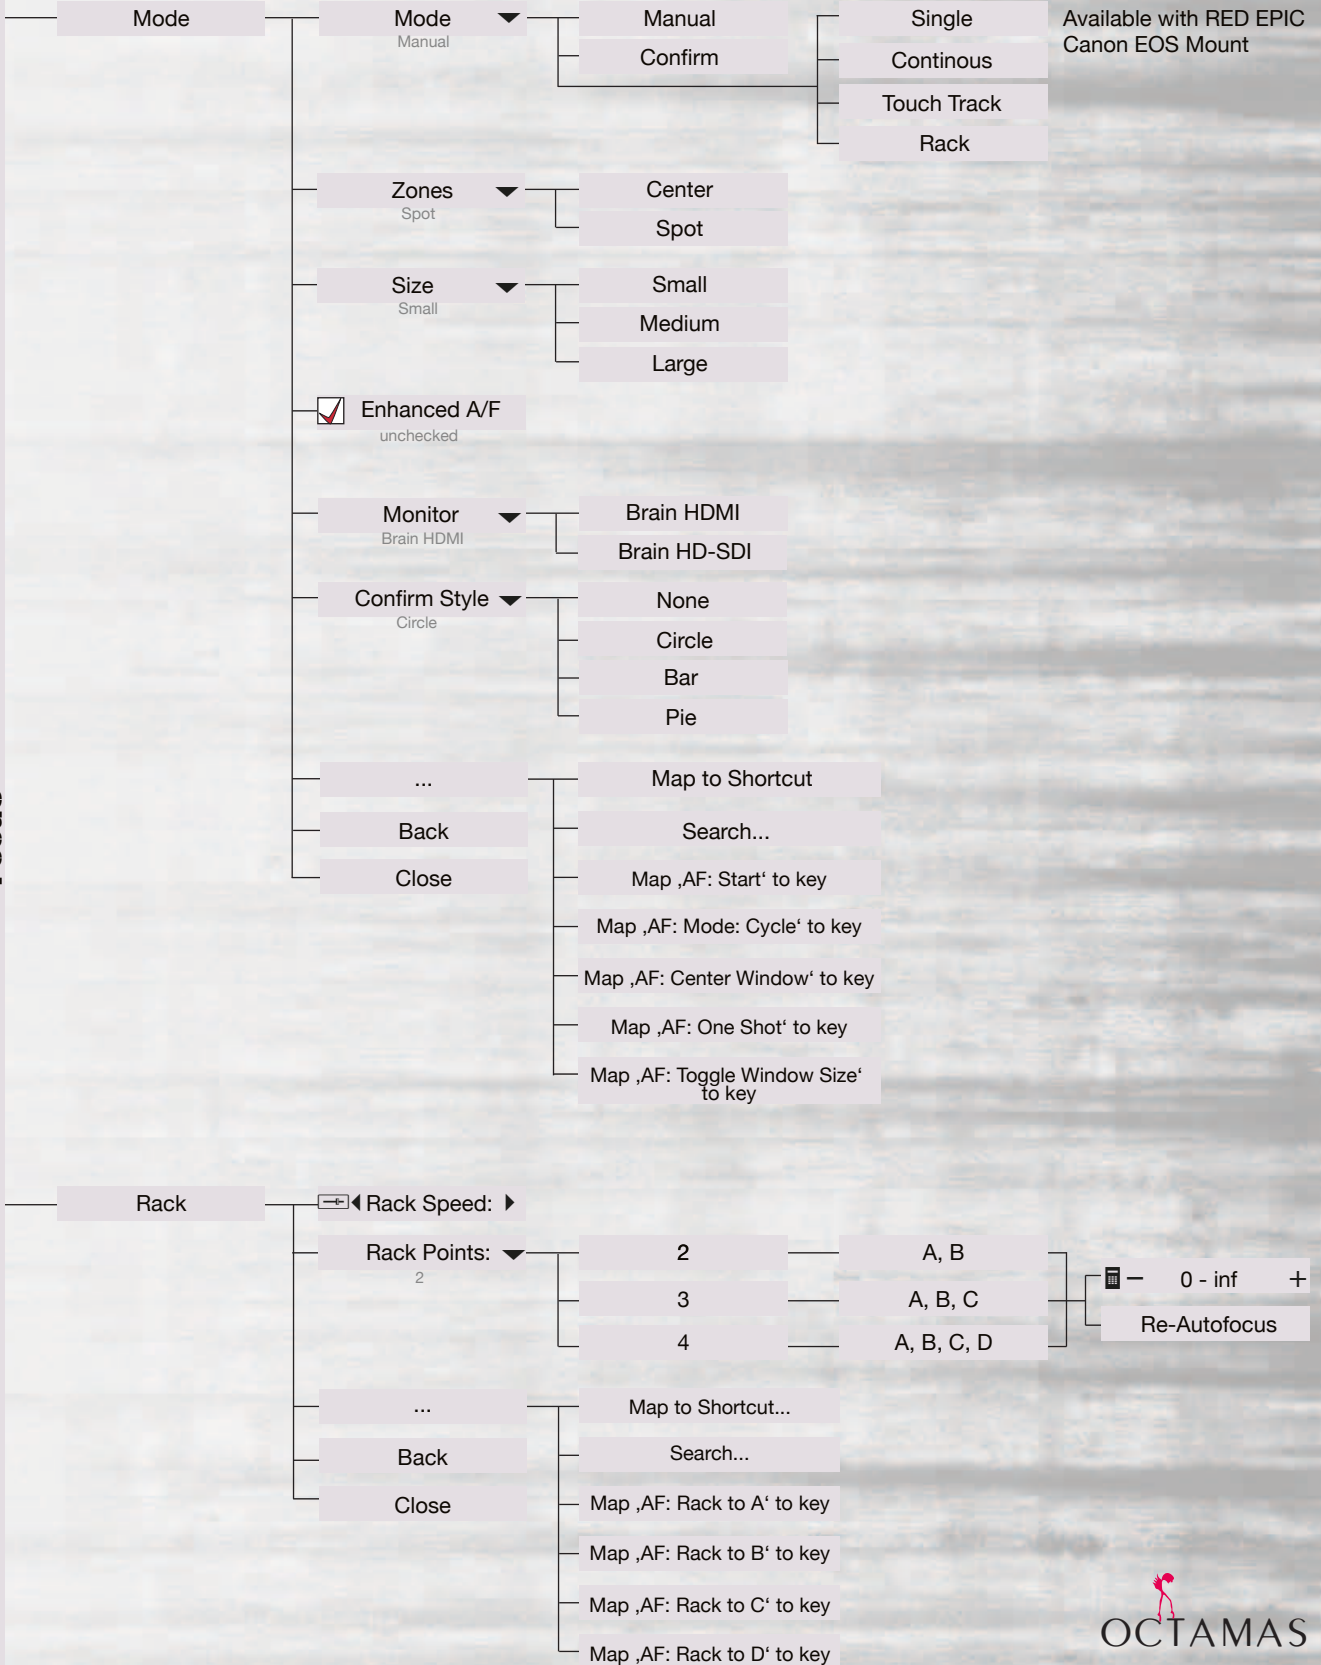

Available with RED EPIC Canon EOS Mount



Presets



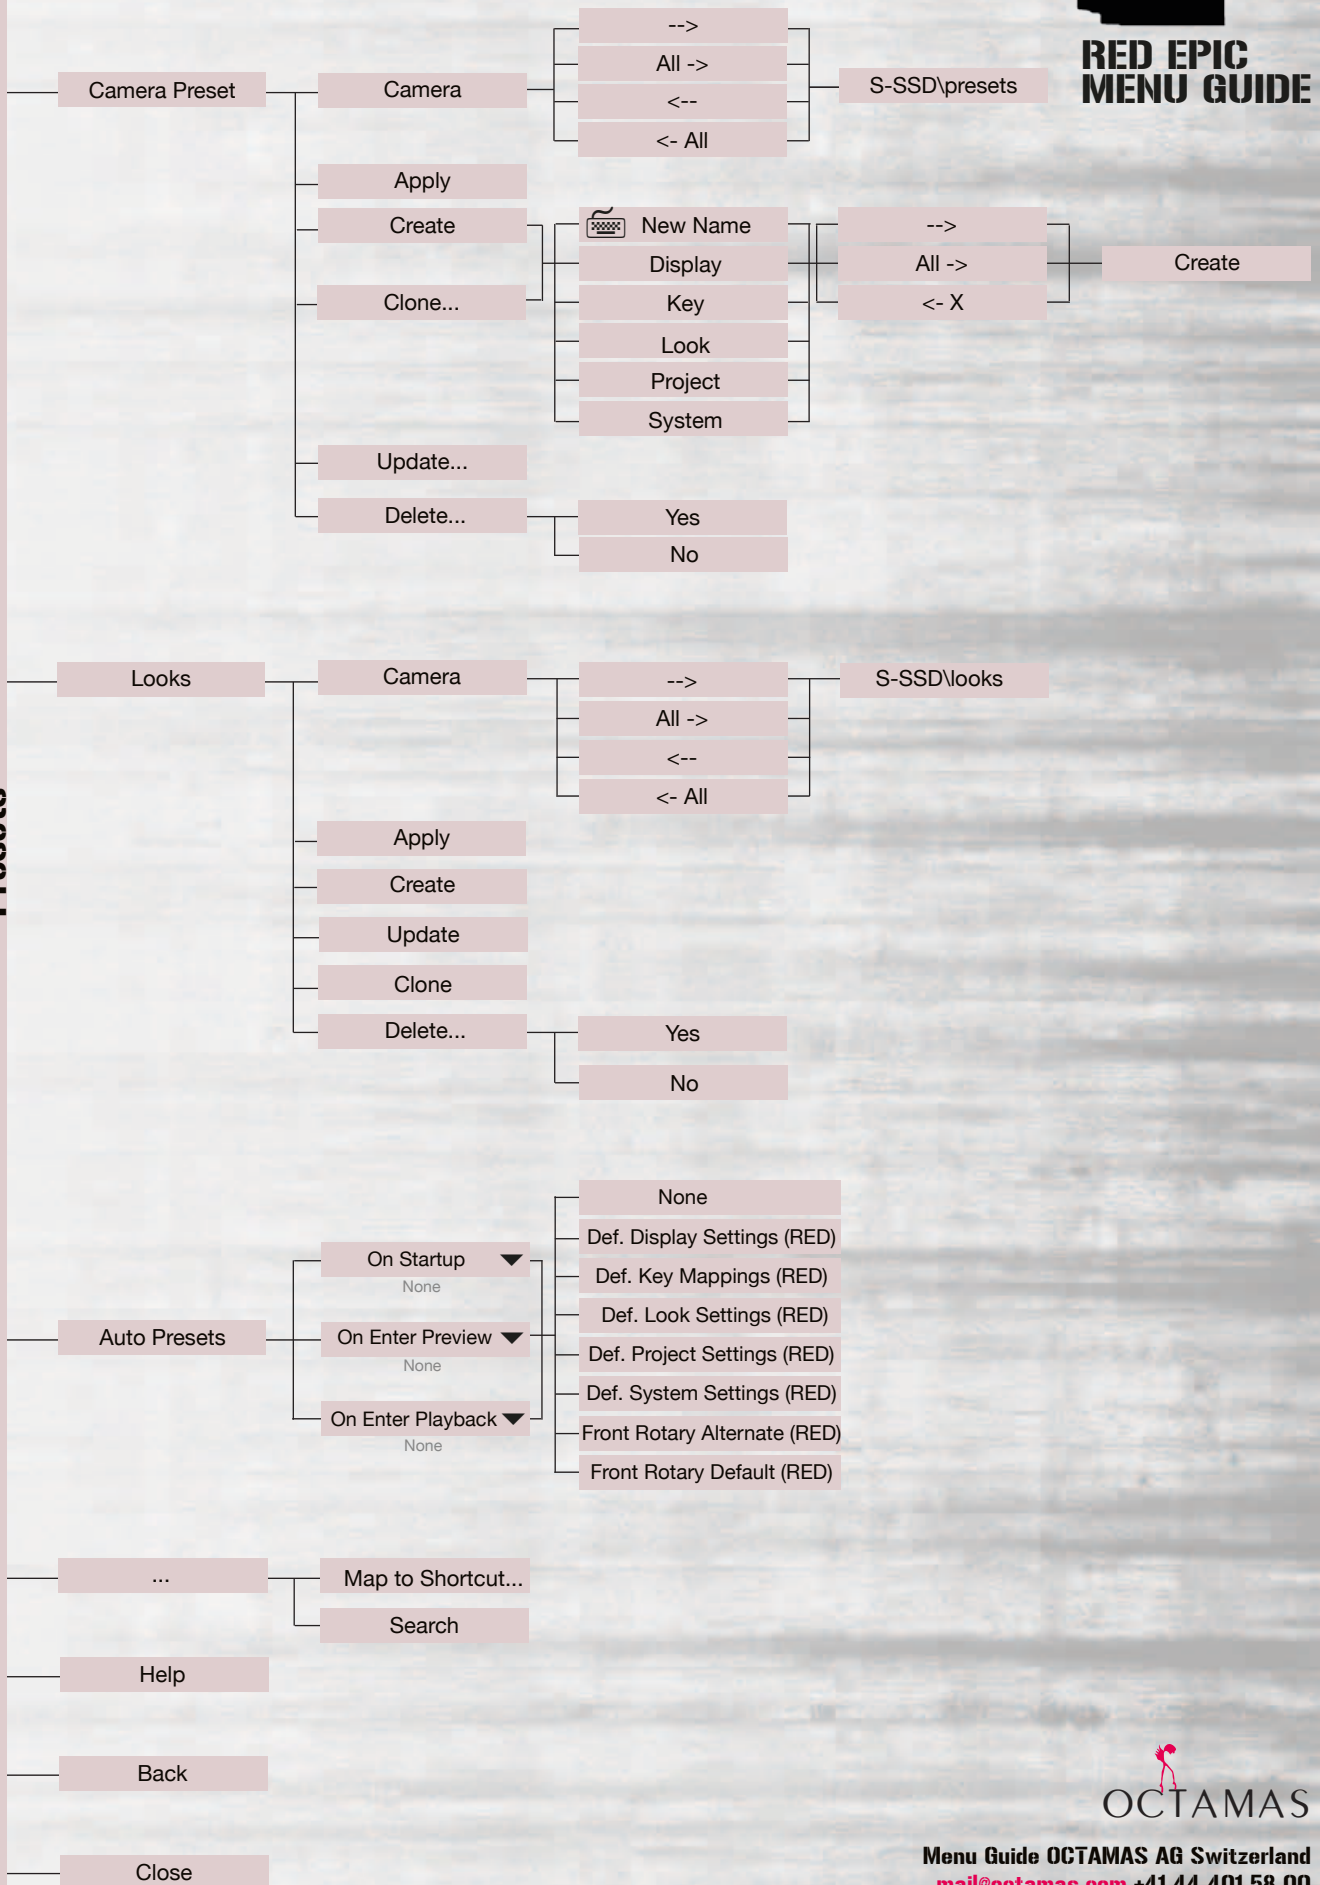




RED EPIC MENU GUIDE

Settings



Display

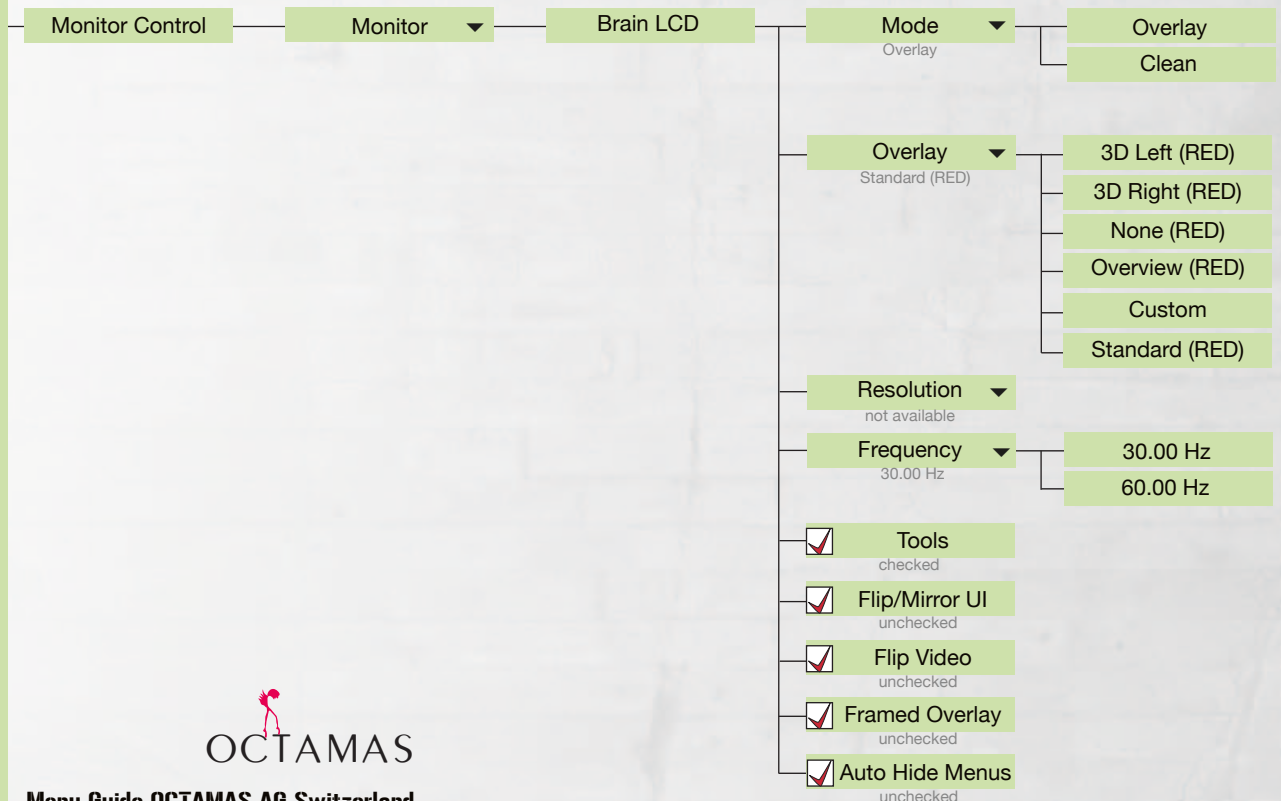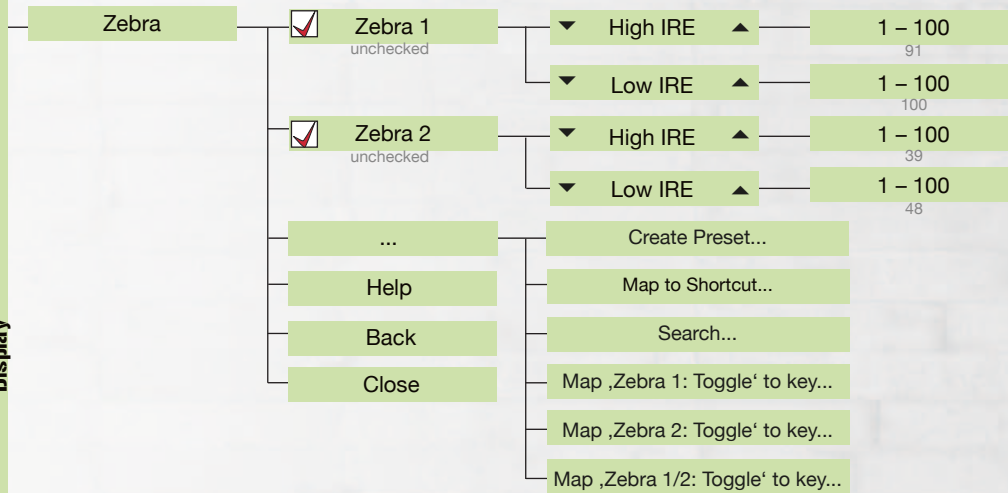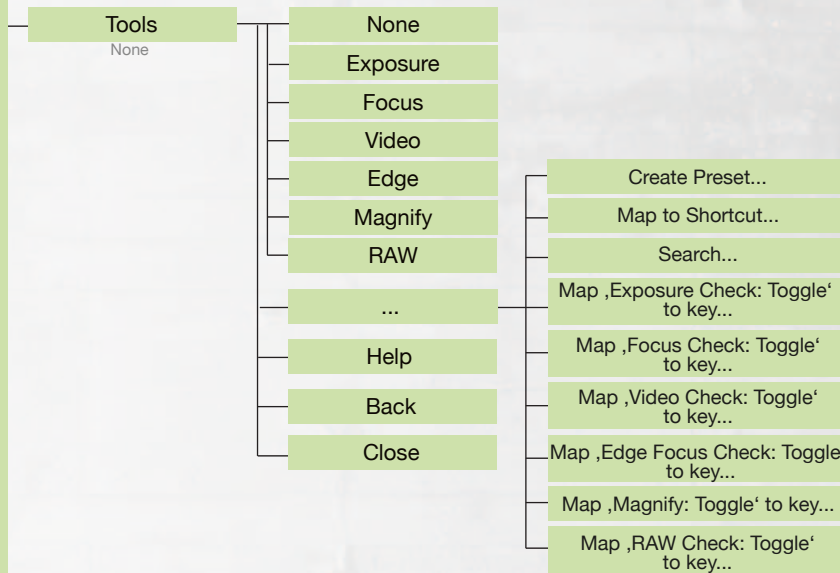

Advanced Menus 5/20

Settings

Display

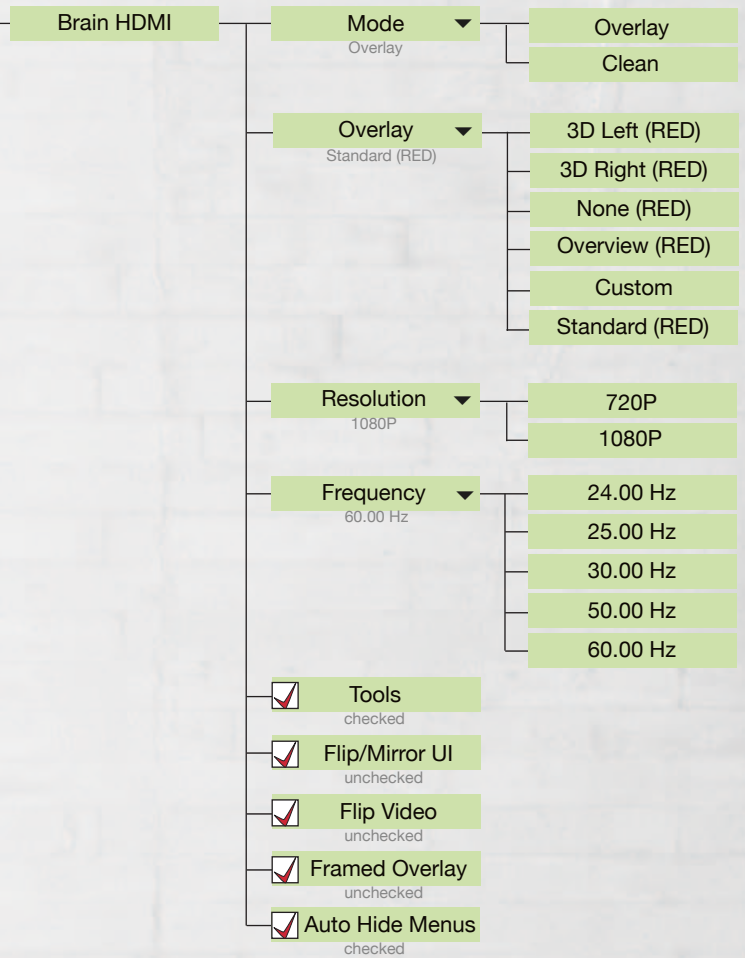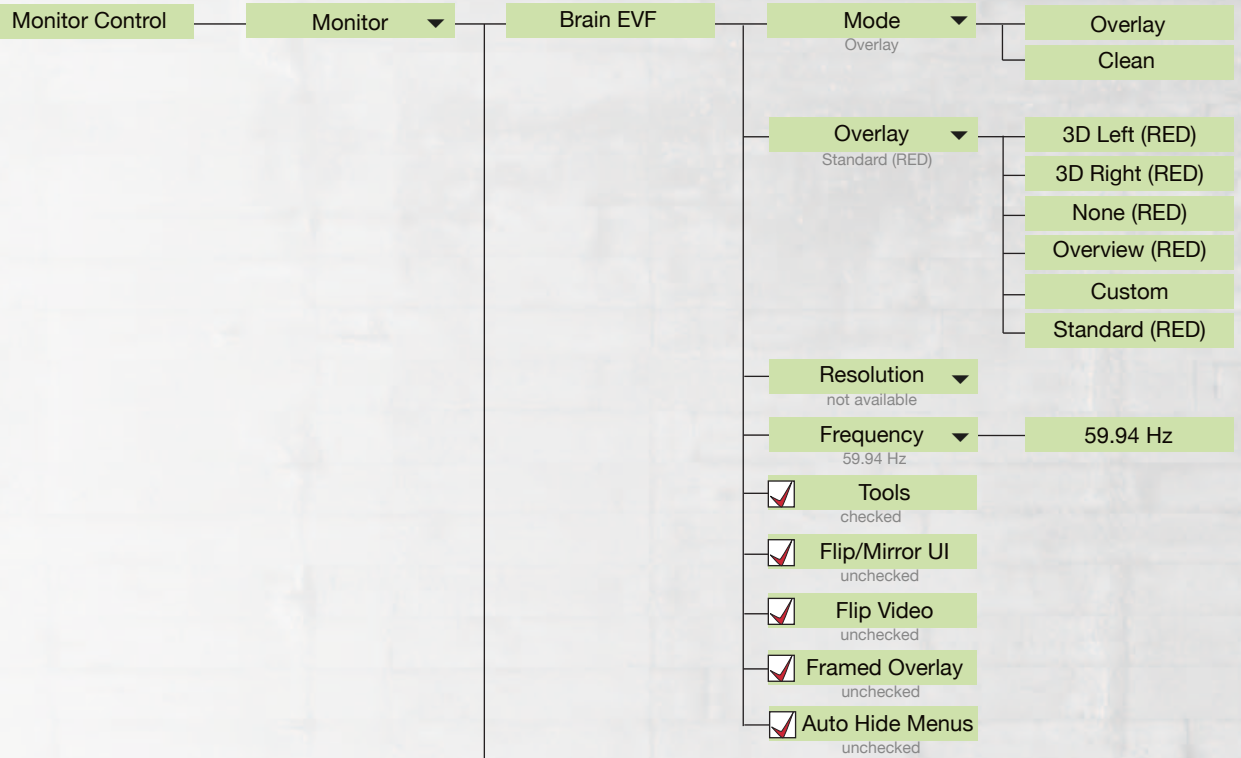


RED EPIC
MENU GUIDE



Settings

Display

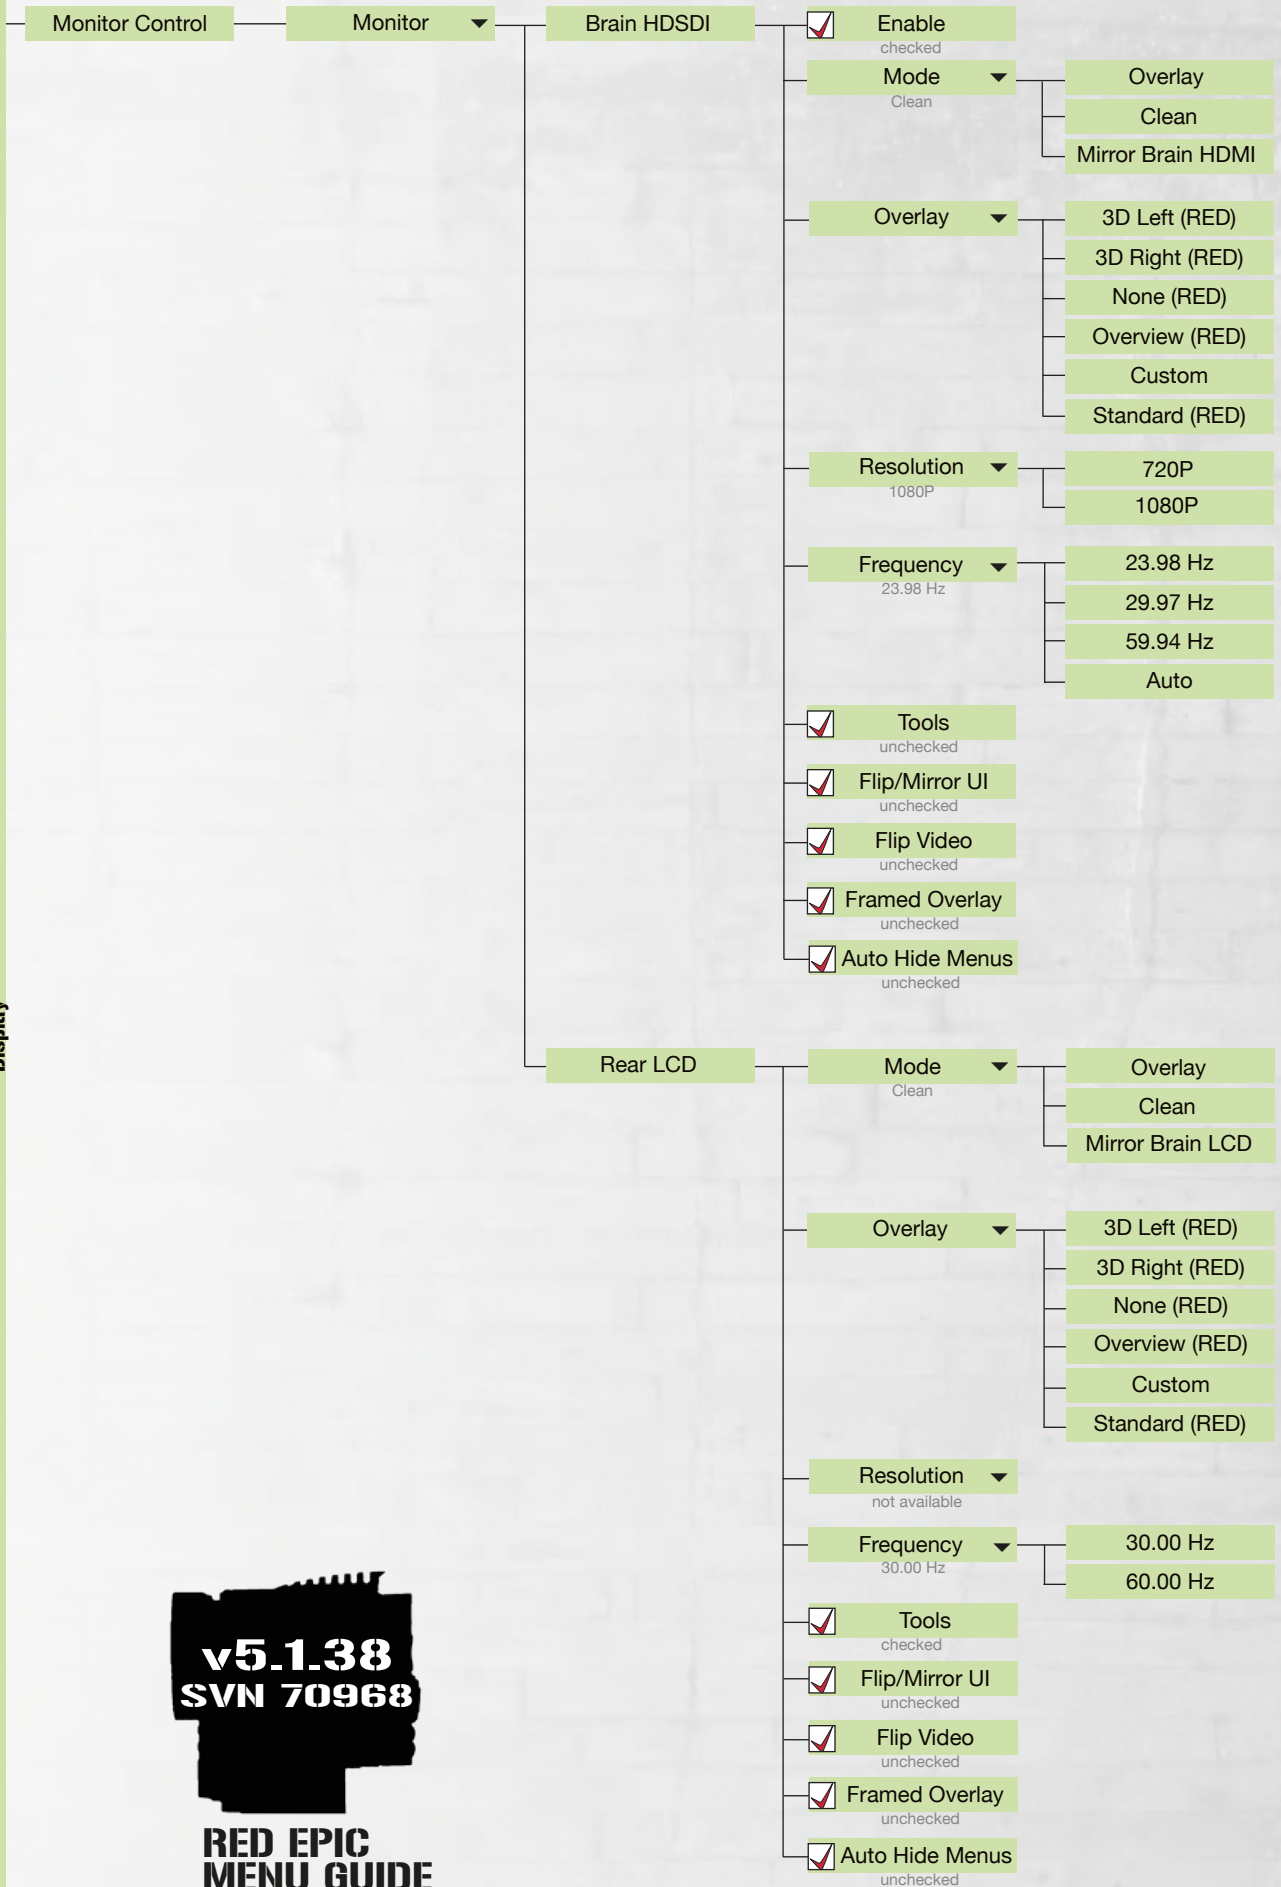


**RED EPIC
MENU GUIDE**


OCTAMAS

Advanced Menus 7/20

Settings

Display

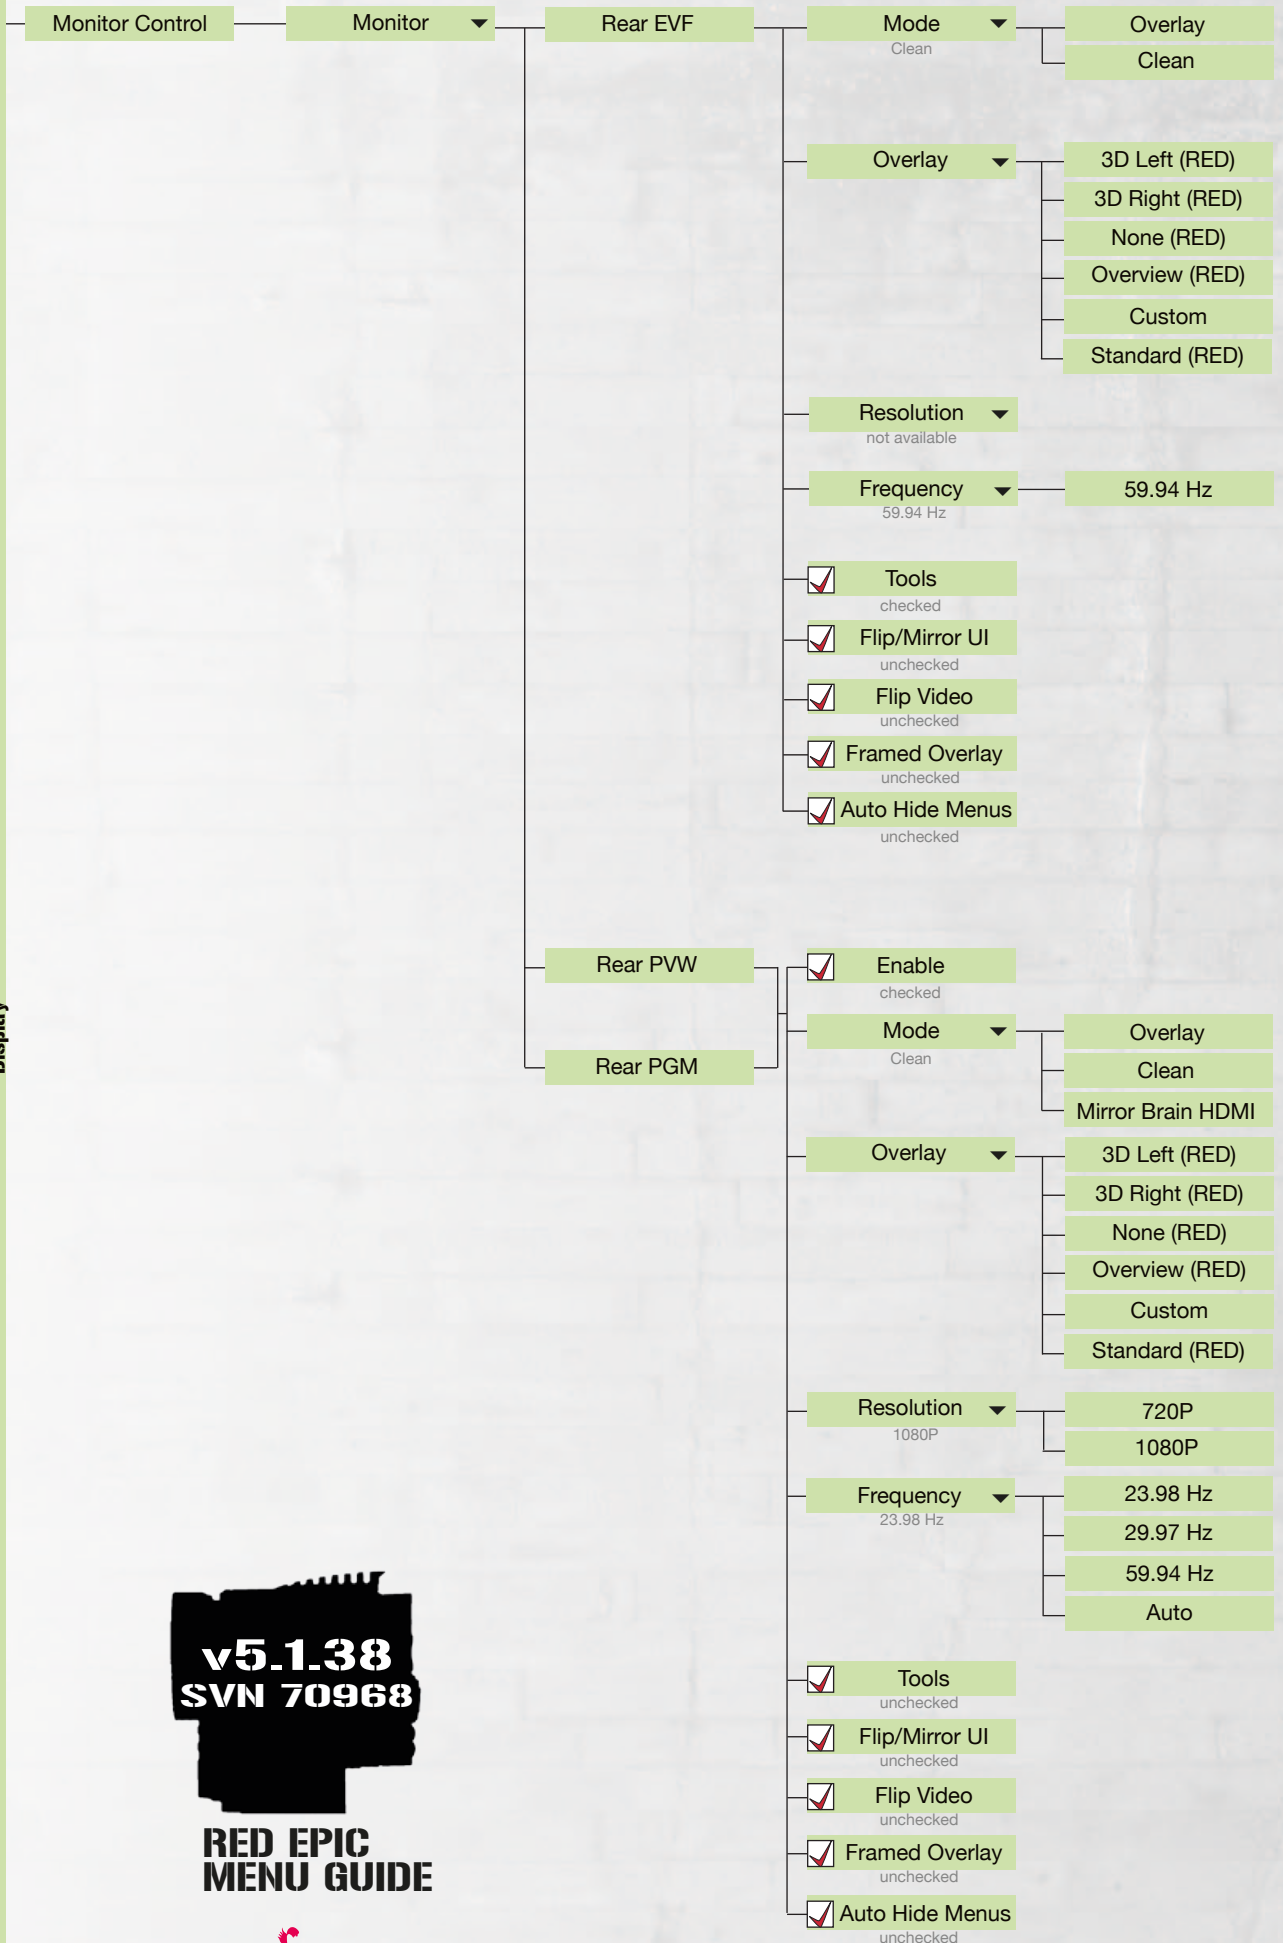

v5.1.38
SVN 70968


RED EPIC
MENU GUIDE

OCTAMAS

Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00
www.octamas.com

Settings

Display

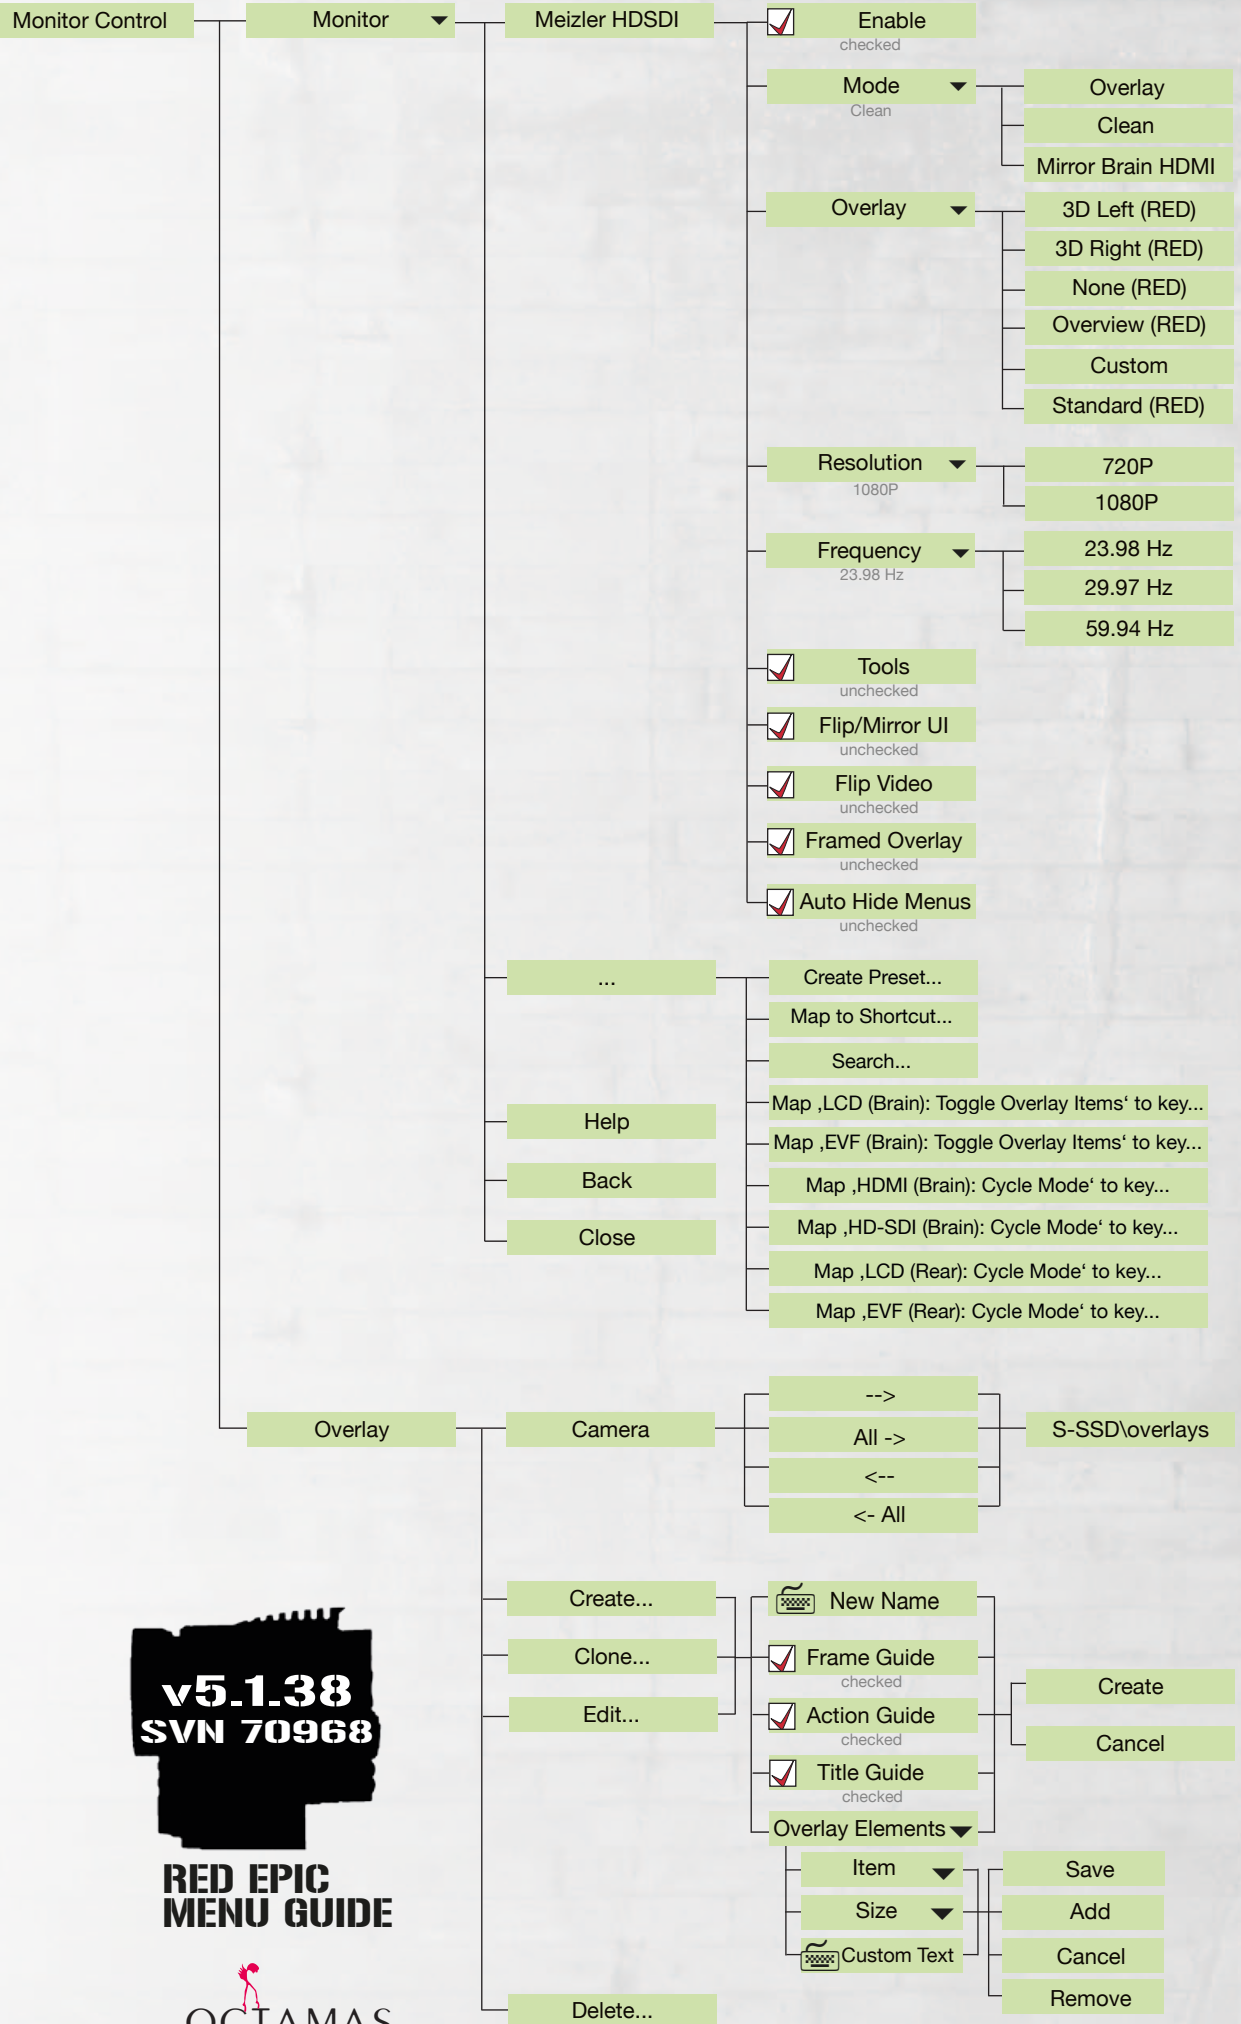


RED EPIC
MENU GUIDE

OCTAMAS

Settings

Display

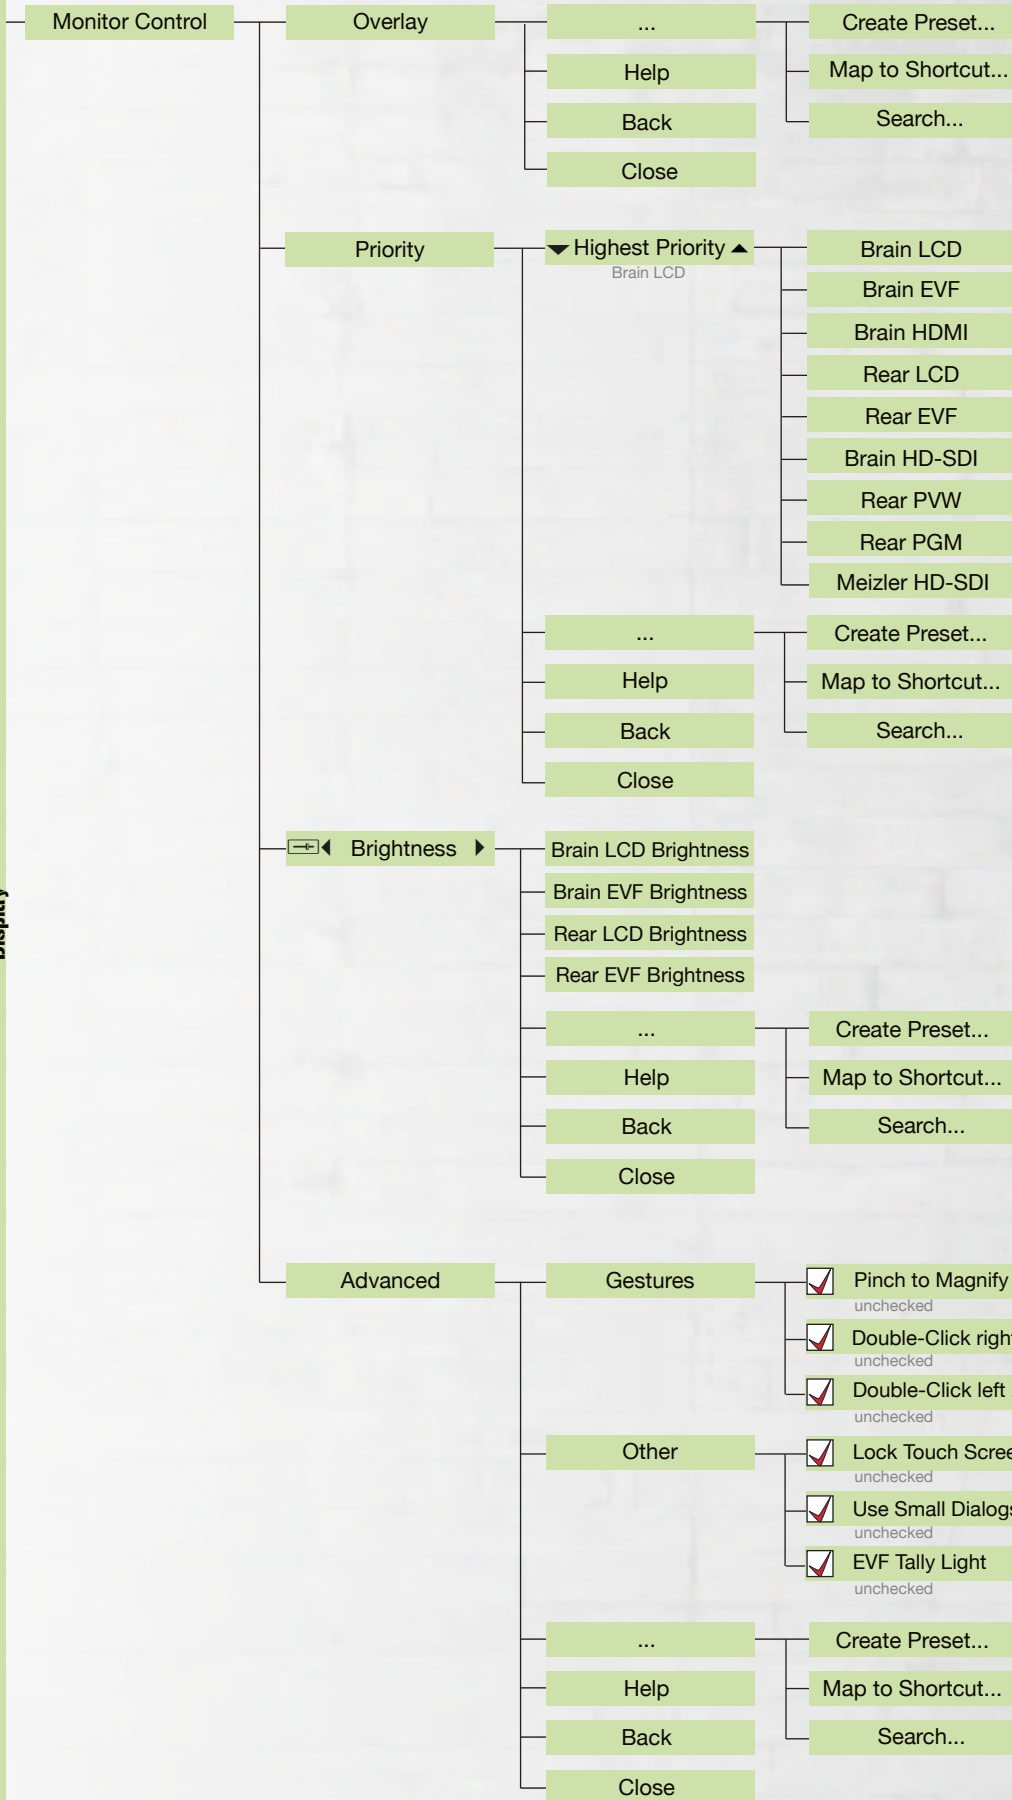


RED EPIC
MENU GUIDE


Advanced Menus 10/20

Settings

Display

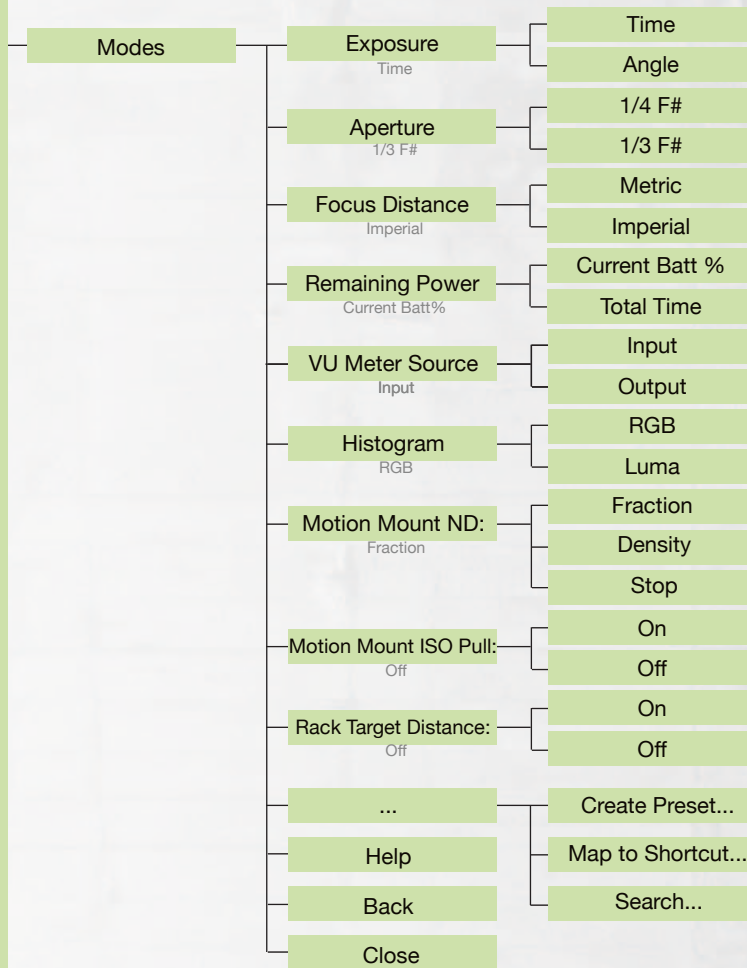


RED EPIC MENU GUIDE

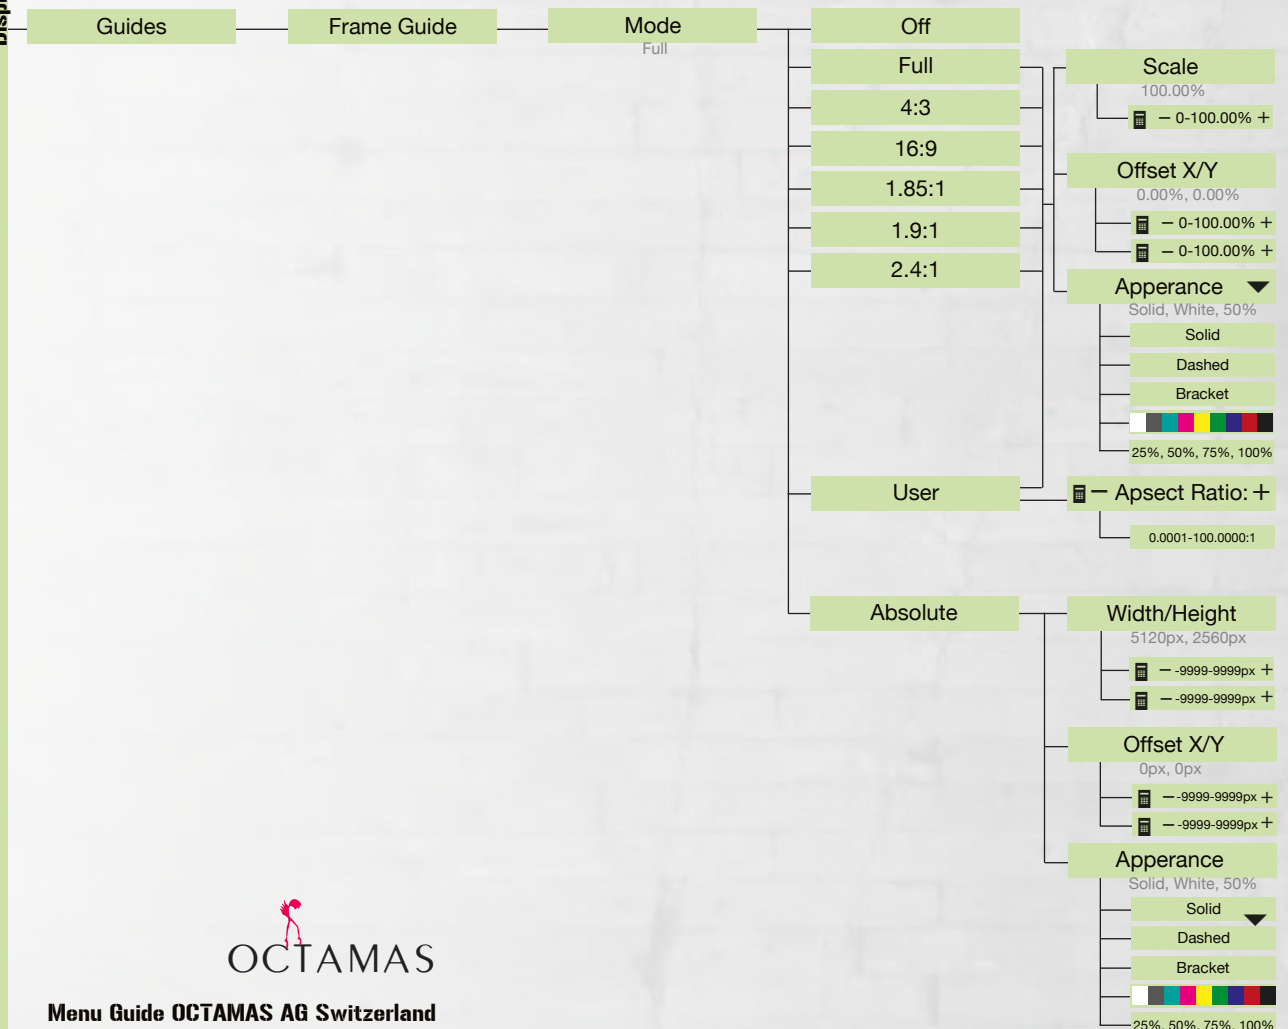

Advanced Menus 11/20

Settings


Display

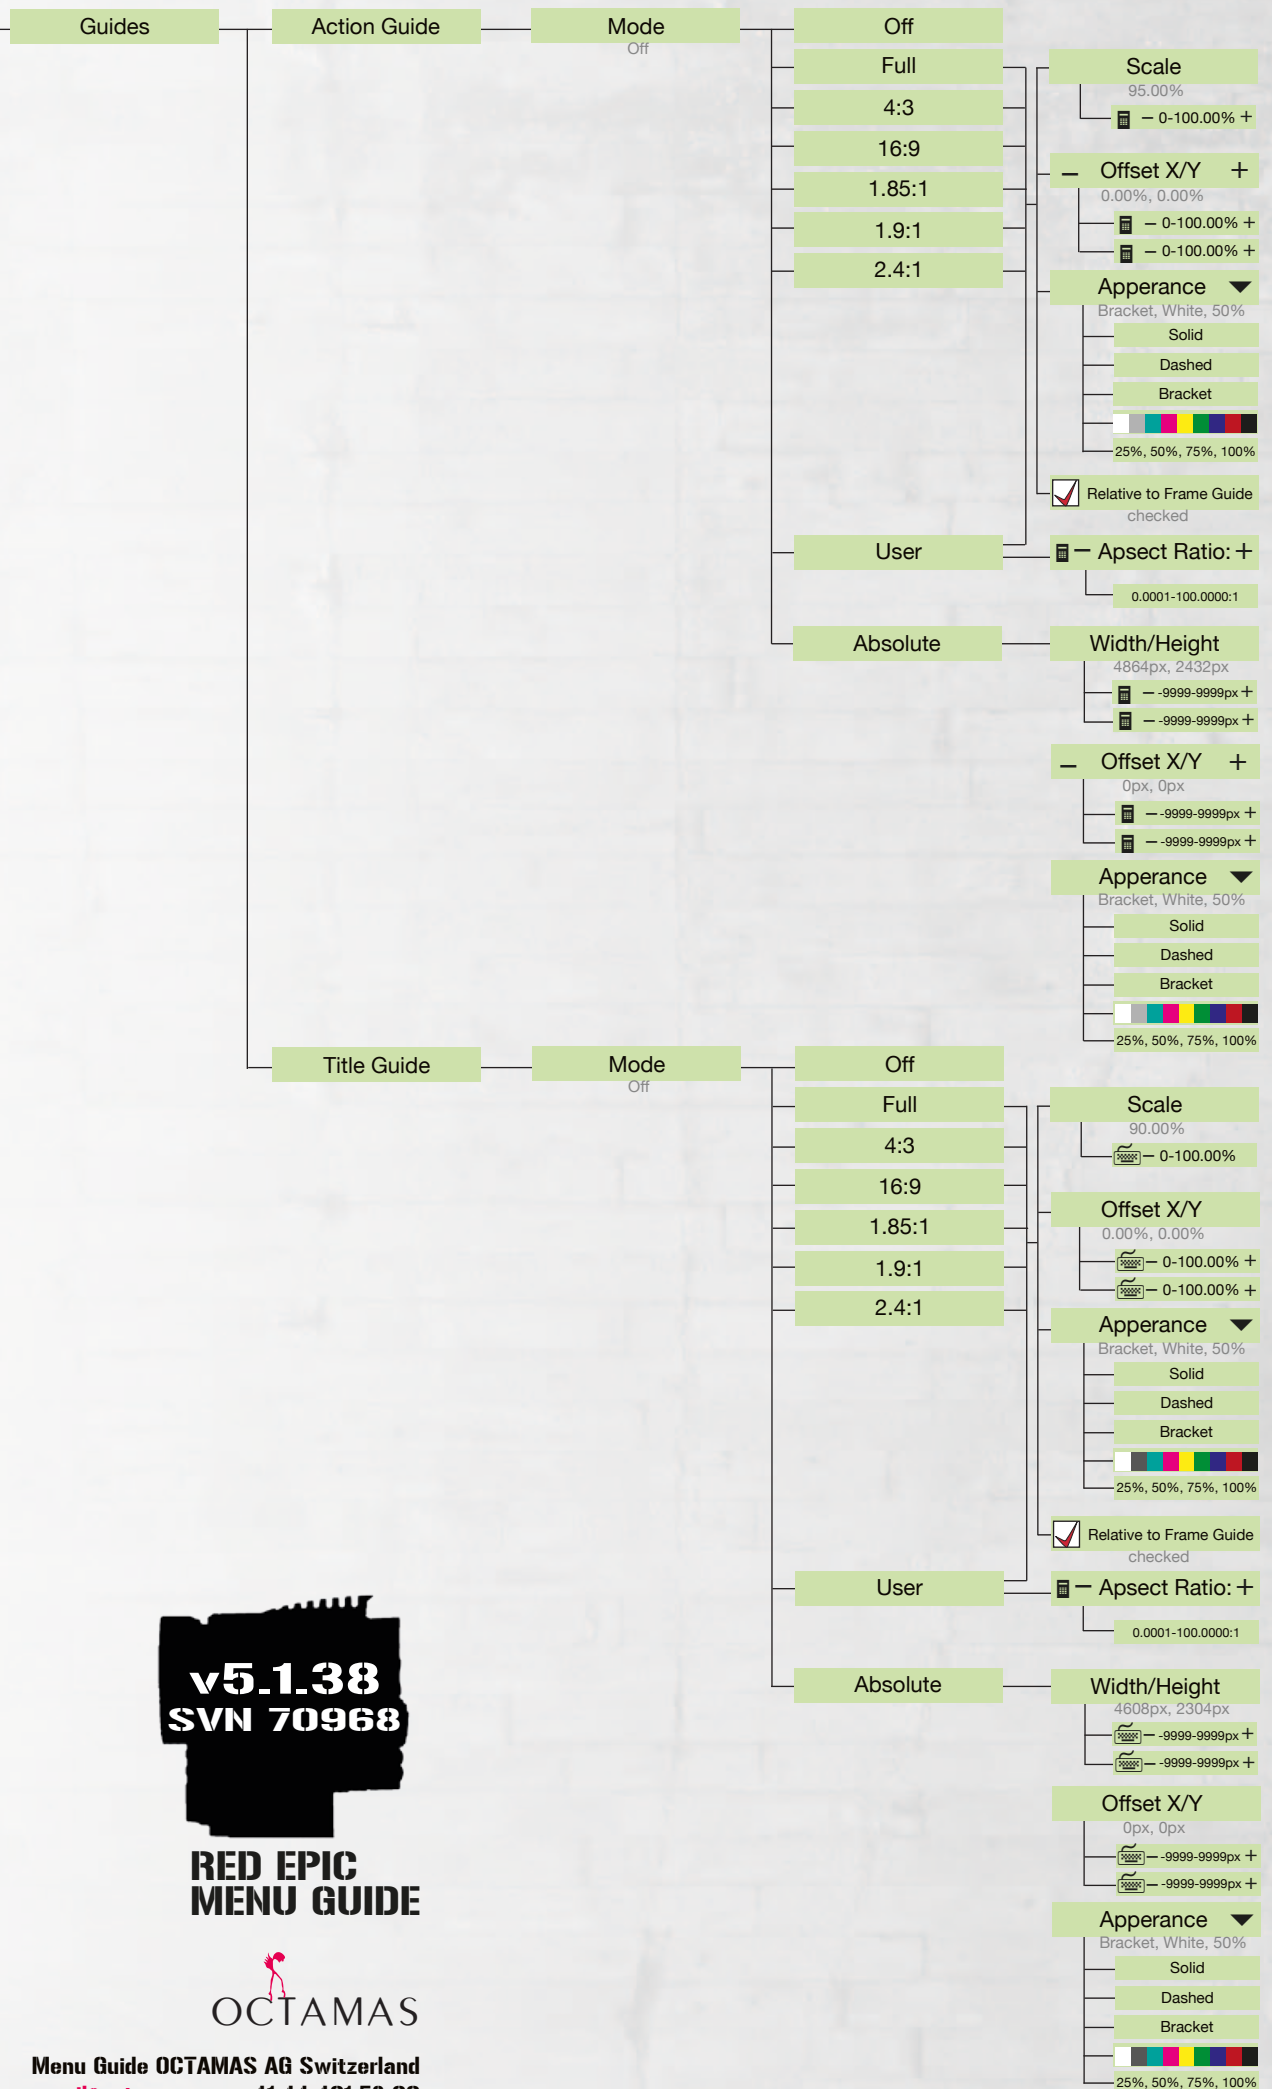

RED EPIC
MENU GUIDE


OCTAMAS

Menu Guide OCTAMAS AG Switzerland
mail@octamas.com +41 44 401 58 00
www.octamas.com

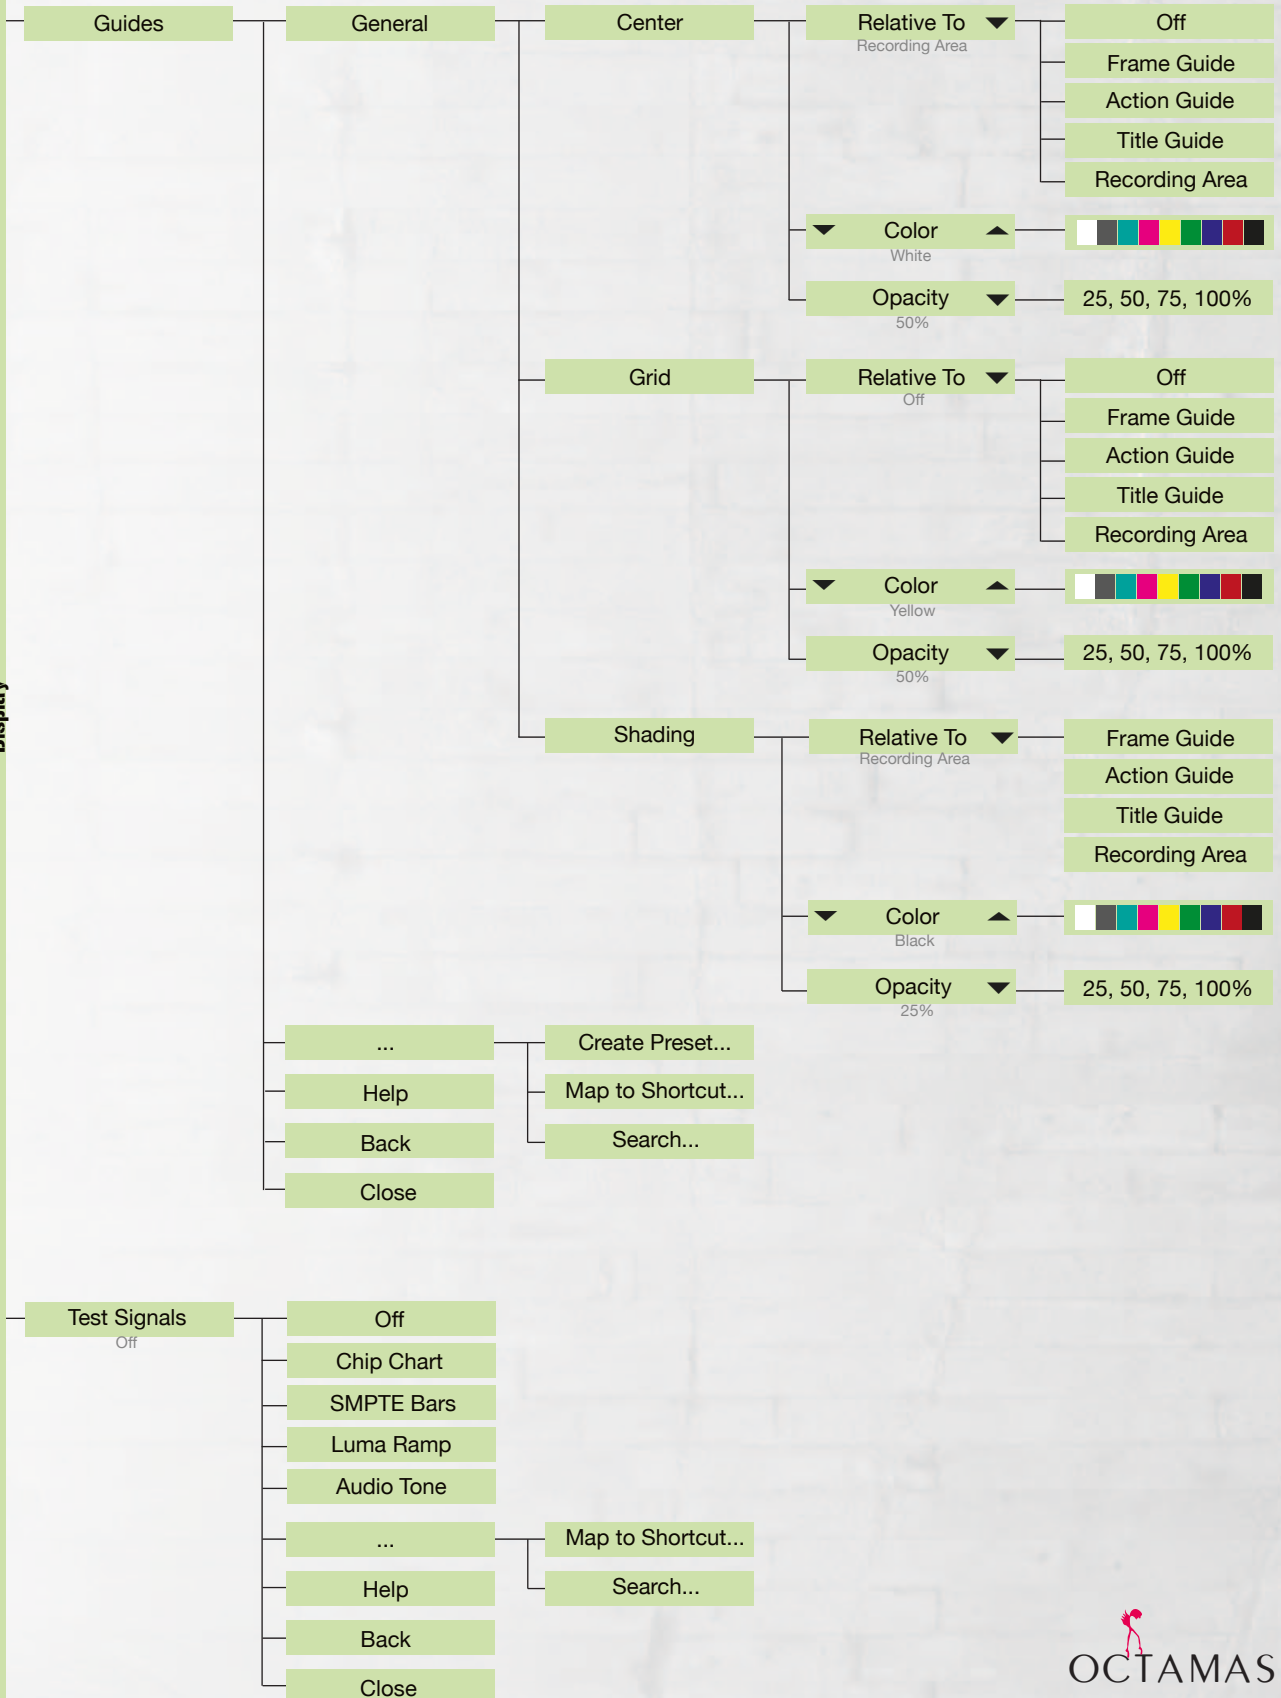

Settings

Look

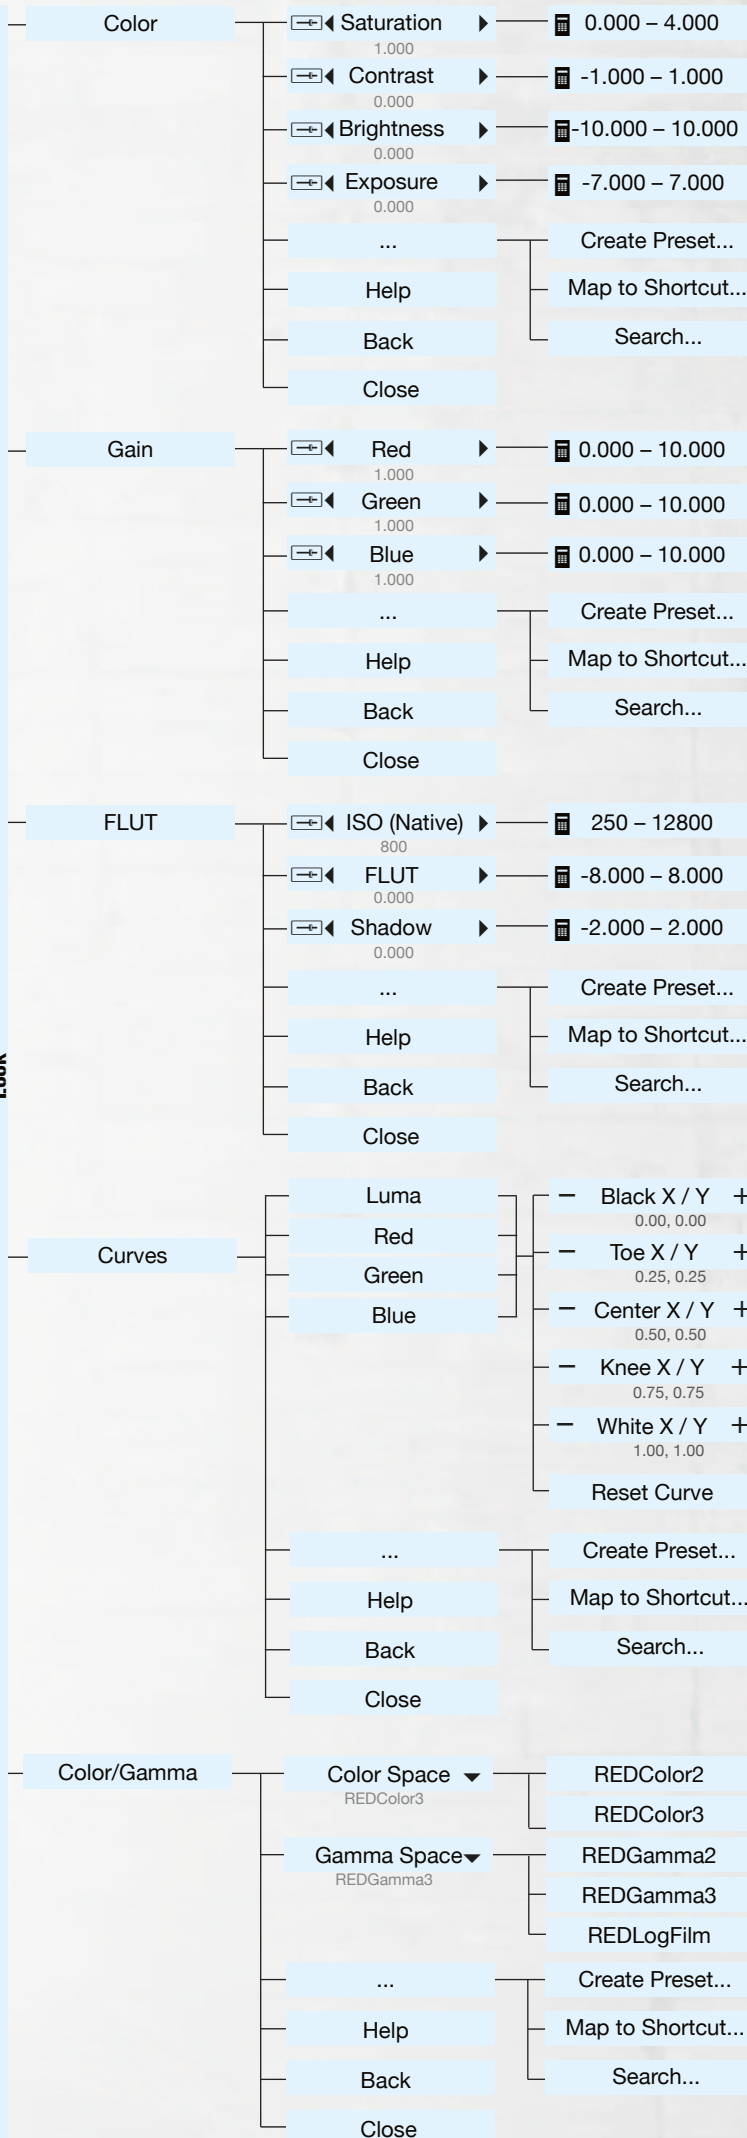

**RED EPIC
MENU GUIDE**



Advanced Menus 14/20

Settings

Look

Color Temp

Preset

- Incandescent (2800K)
- Tungsten (3200K)
- Flourescent (4500K)
- Flash (5500K)
- Daylight (5600K)
- Cloudy (7500K)
- Shade (9000K)

Color Temp.

1700 - 100000K +

Tint

-100.00 - 100.000 +

Auto White Balance

...

Create Preset...

Help

Map to Shortcut...

Back

Search...

Close

Map ,WB: Auto Calc' to key...

Frame Rate

Sensor Frame Rate

1 - 400 fps +

Project Time Base

23.98

23.98

24.00

25.00

29.97

47.95

48.00

50.00

59.94

...

Create Preset...

Help

Map to Shortcut...

Back

Search...

Close

Exposure

Exposure

1/48 sec

1 - 1/131579 sec +

Integration Time

20.833 ms

0.007 - 41.706 ms +

Angle*

-1.000 - 360.000 deg +

* "Relative" or "Absolute" dependent on shutter mode

...

Create Preset...

Help

Map to Shortcut...

Back

Search...

Close

Time Code

Time Code Display

TOD

TOD

Edge

Time Code Source

External Brain

User-Provided

External Brain

External: Rear Module

Use RTC Time

Set Manually

0 - 23

0

0 - 59

0

0 - 59

0

User Bits

00000000

...

Create Preset...

Help

Map to Shortcut...

Back

Search...

Close

Map ,TC Display Mode: Toggle' to key...





RED EPIC MENU GUIDE



Menu Guide OCTAMAS AG Switzerland
 mail@octamas.com +41 44 401 58 00
 www.octamas.com

Settings


Project

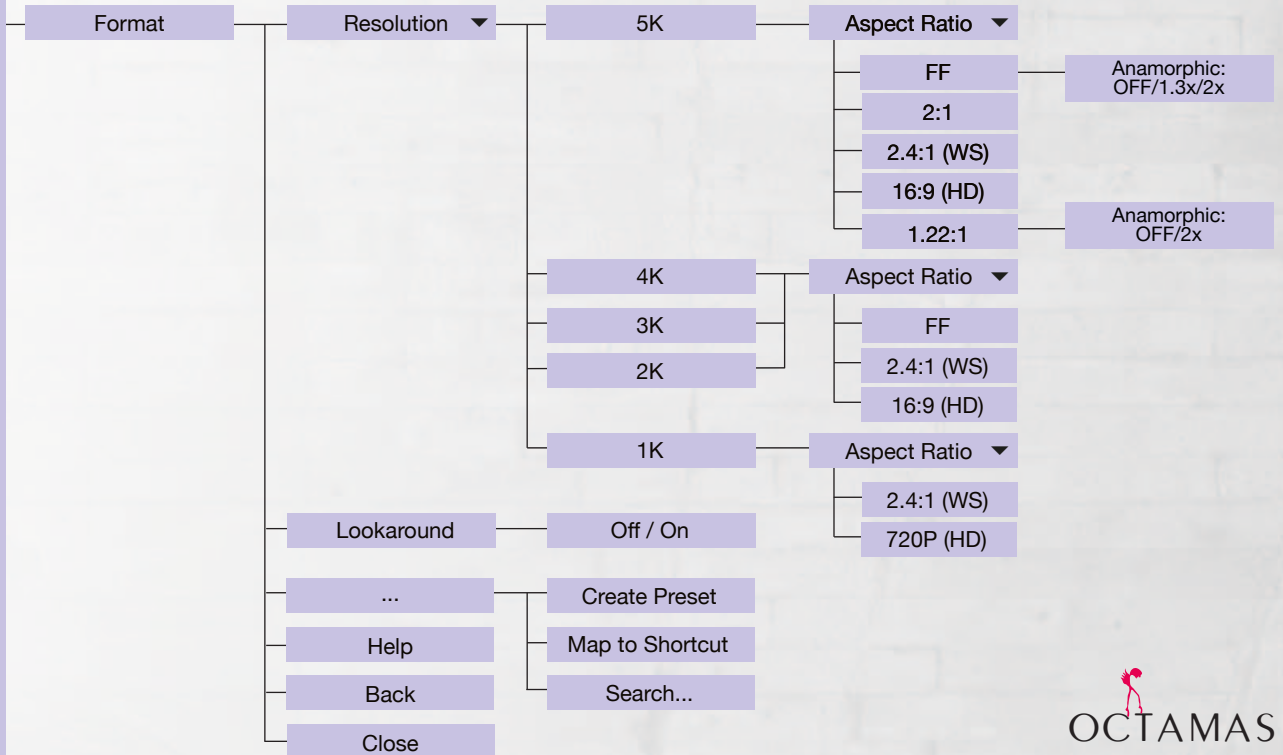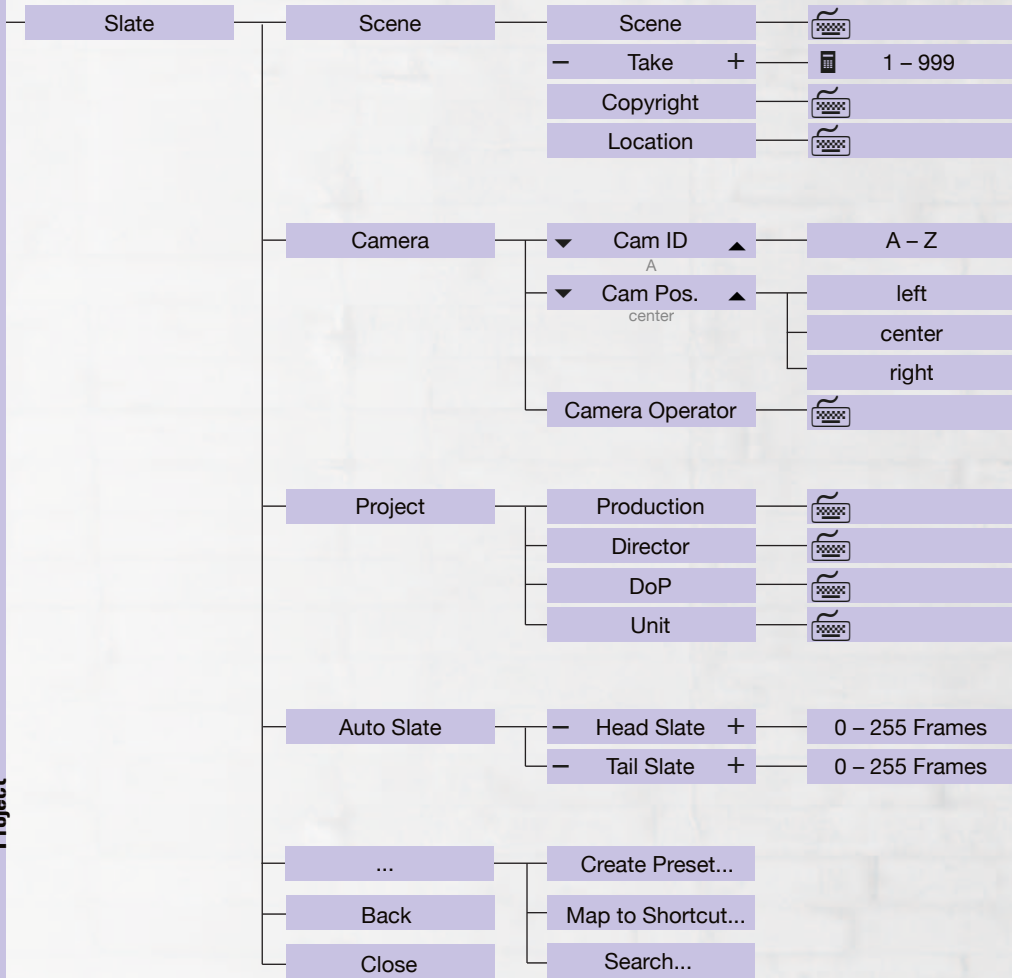

Settings Audio

Audio Control

- Pre-Amp**
 - Cam Analog**
 - Ch1: +30 dB - +60dB (+32dB)
 - Ch2: +30 dB - +60dB (+32dB)
 - None
 - Ch3: +30 dB - +60dB
 - Ch4: +30 dB - +60dB
 - Headphone**
 - Cam L (Active)
 - Cam R (Active)
 - Active/Mute: -28dB - 0dB (-9dB)
 - Cam Mix**: Cam Analog, L ... R, 0% - 100% (100%)
 - Rear Mix**: Cam Analog, L ... R, 0% - 100% (100%)
 - Monitor Mix**: None, L ... R, 0% - 100% (0%)
 - ...: L ... R, 0% - 100% (0%)
 - Back: Create Preset...
 - Close: Map to Shortcut...

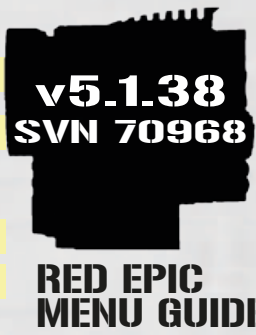

Audio Channels


- Channel 1/2**
 - Source: Cam Analog (dropdown)
 - None
 - Cam Analog
 - Pro I/O Analog
 - Pro I/O AES A
 - Meizler Module
 - Link:
 - Gain Sliders (Unchecked)
 - Volume Sliders (Unchecked)
 - Name: Ch1, Ch2
 - Mode: Balanced (dropdown)
 - None
 - Balanced
 - Unbalanced
 - Line (0 dBu ref)
 - AES
 - Line In
 - Wireless

Dependent on Source Setting
 - 48V Pwr (unchecked)
 - Limiter (unchecked)
- Channel 3/4**
 - Source: (dropdown)
 - None
 - Cam Analog
 - Pro I/O Analog
 - Pro I/O AES B
 - Link:
 - Gain Sliders (Unchecked)
 - Volume Sliders (Unchecked)
 - Name: Ch3, Ch4
 - Mode: None (dropdown)
 - None
 - Balanced
 - Unbalanced
 - Line (0 dBu ref)
 - AES

Dependent on Source Setting
 - 48V Pwr (N/A)
 - Limiter (N/A)
- ...: Create Preset...
- Back: Map to Shortcut...
- Close: Search...

Settings


Recording

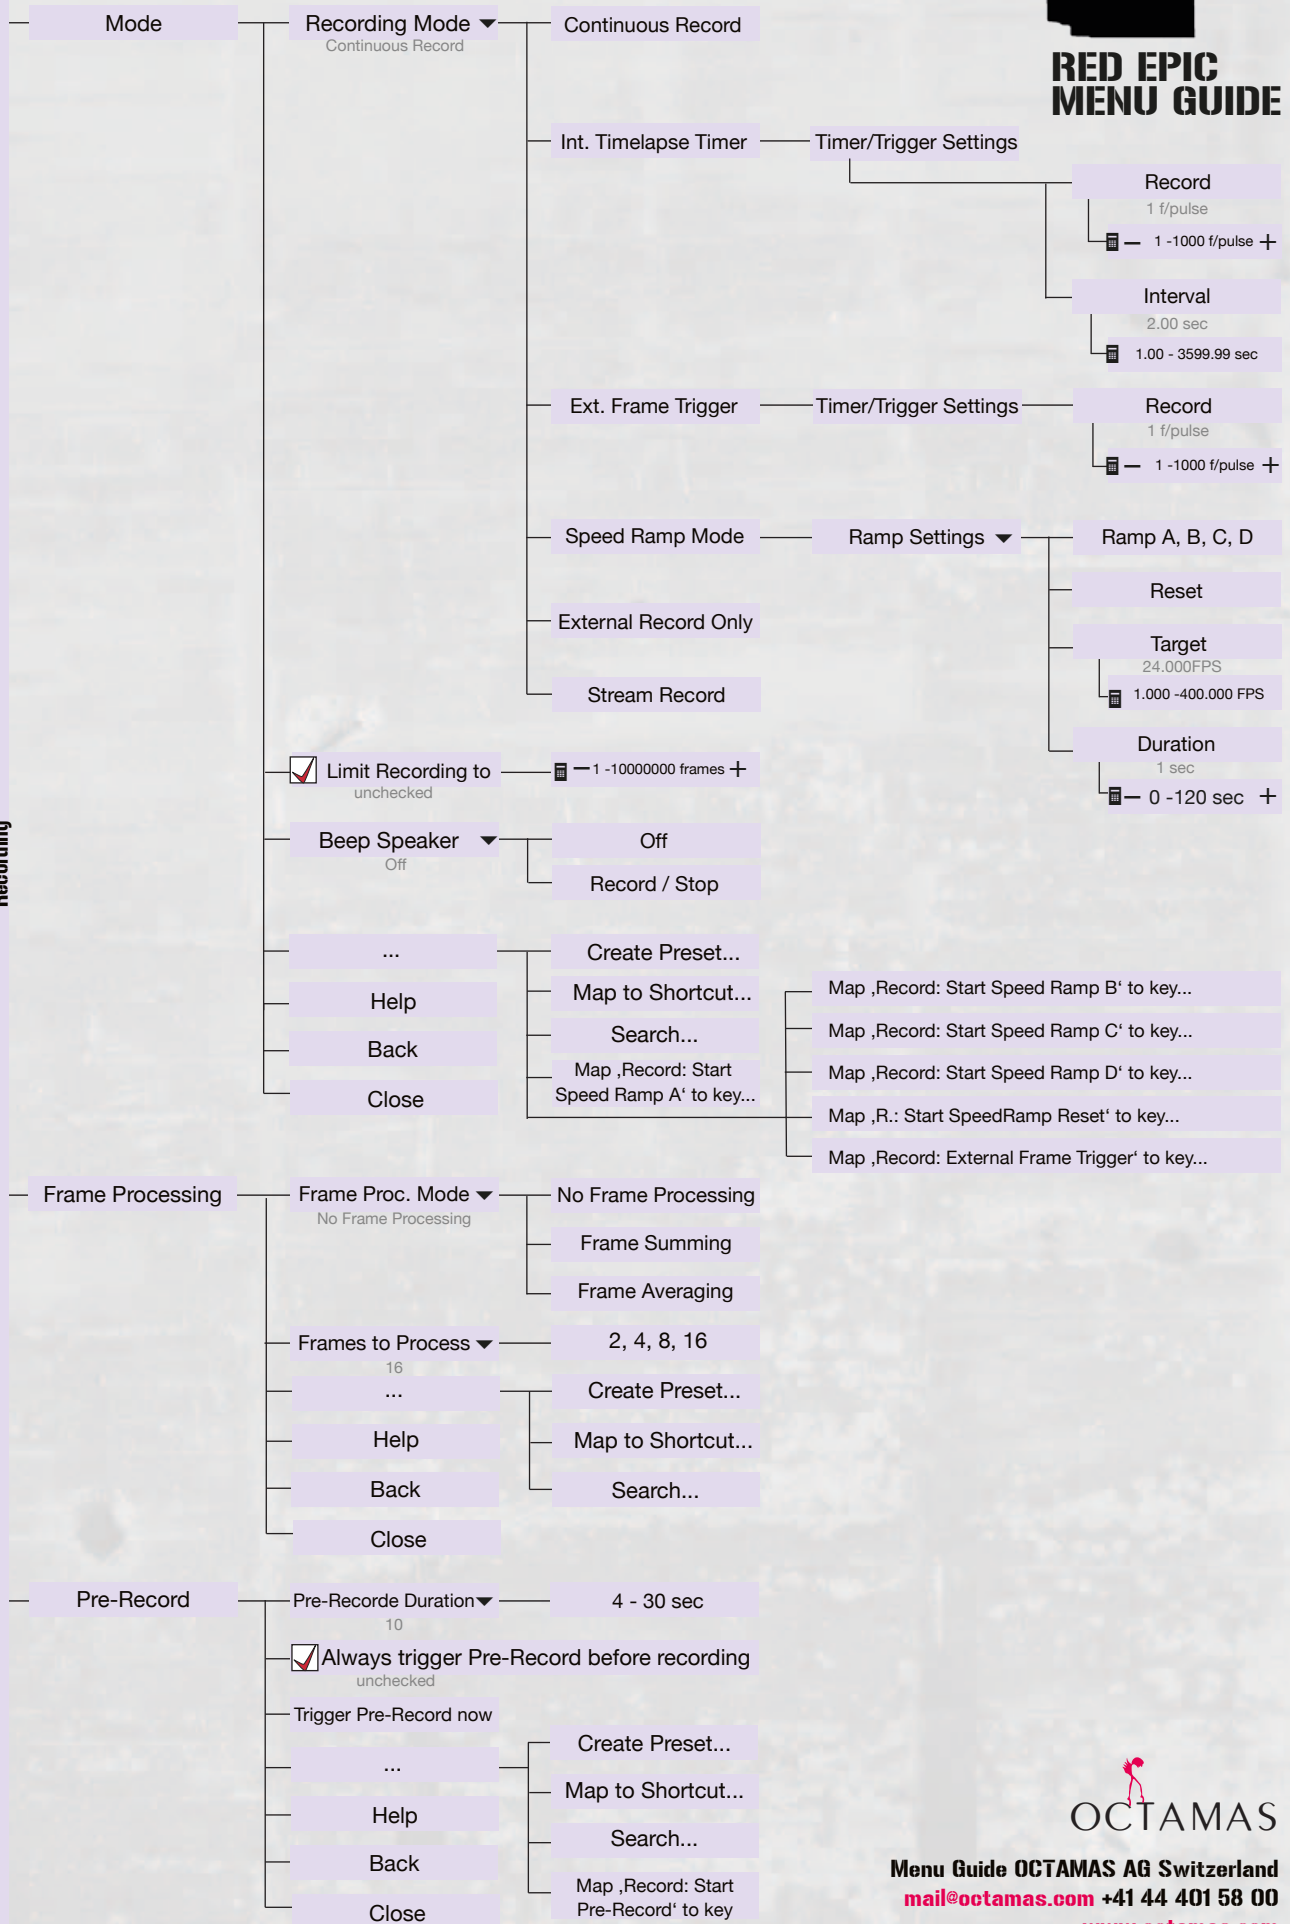

RED EPIC MENU GUIDE




Settings Setup

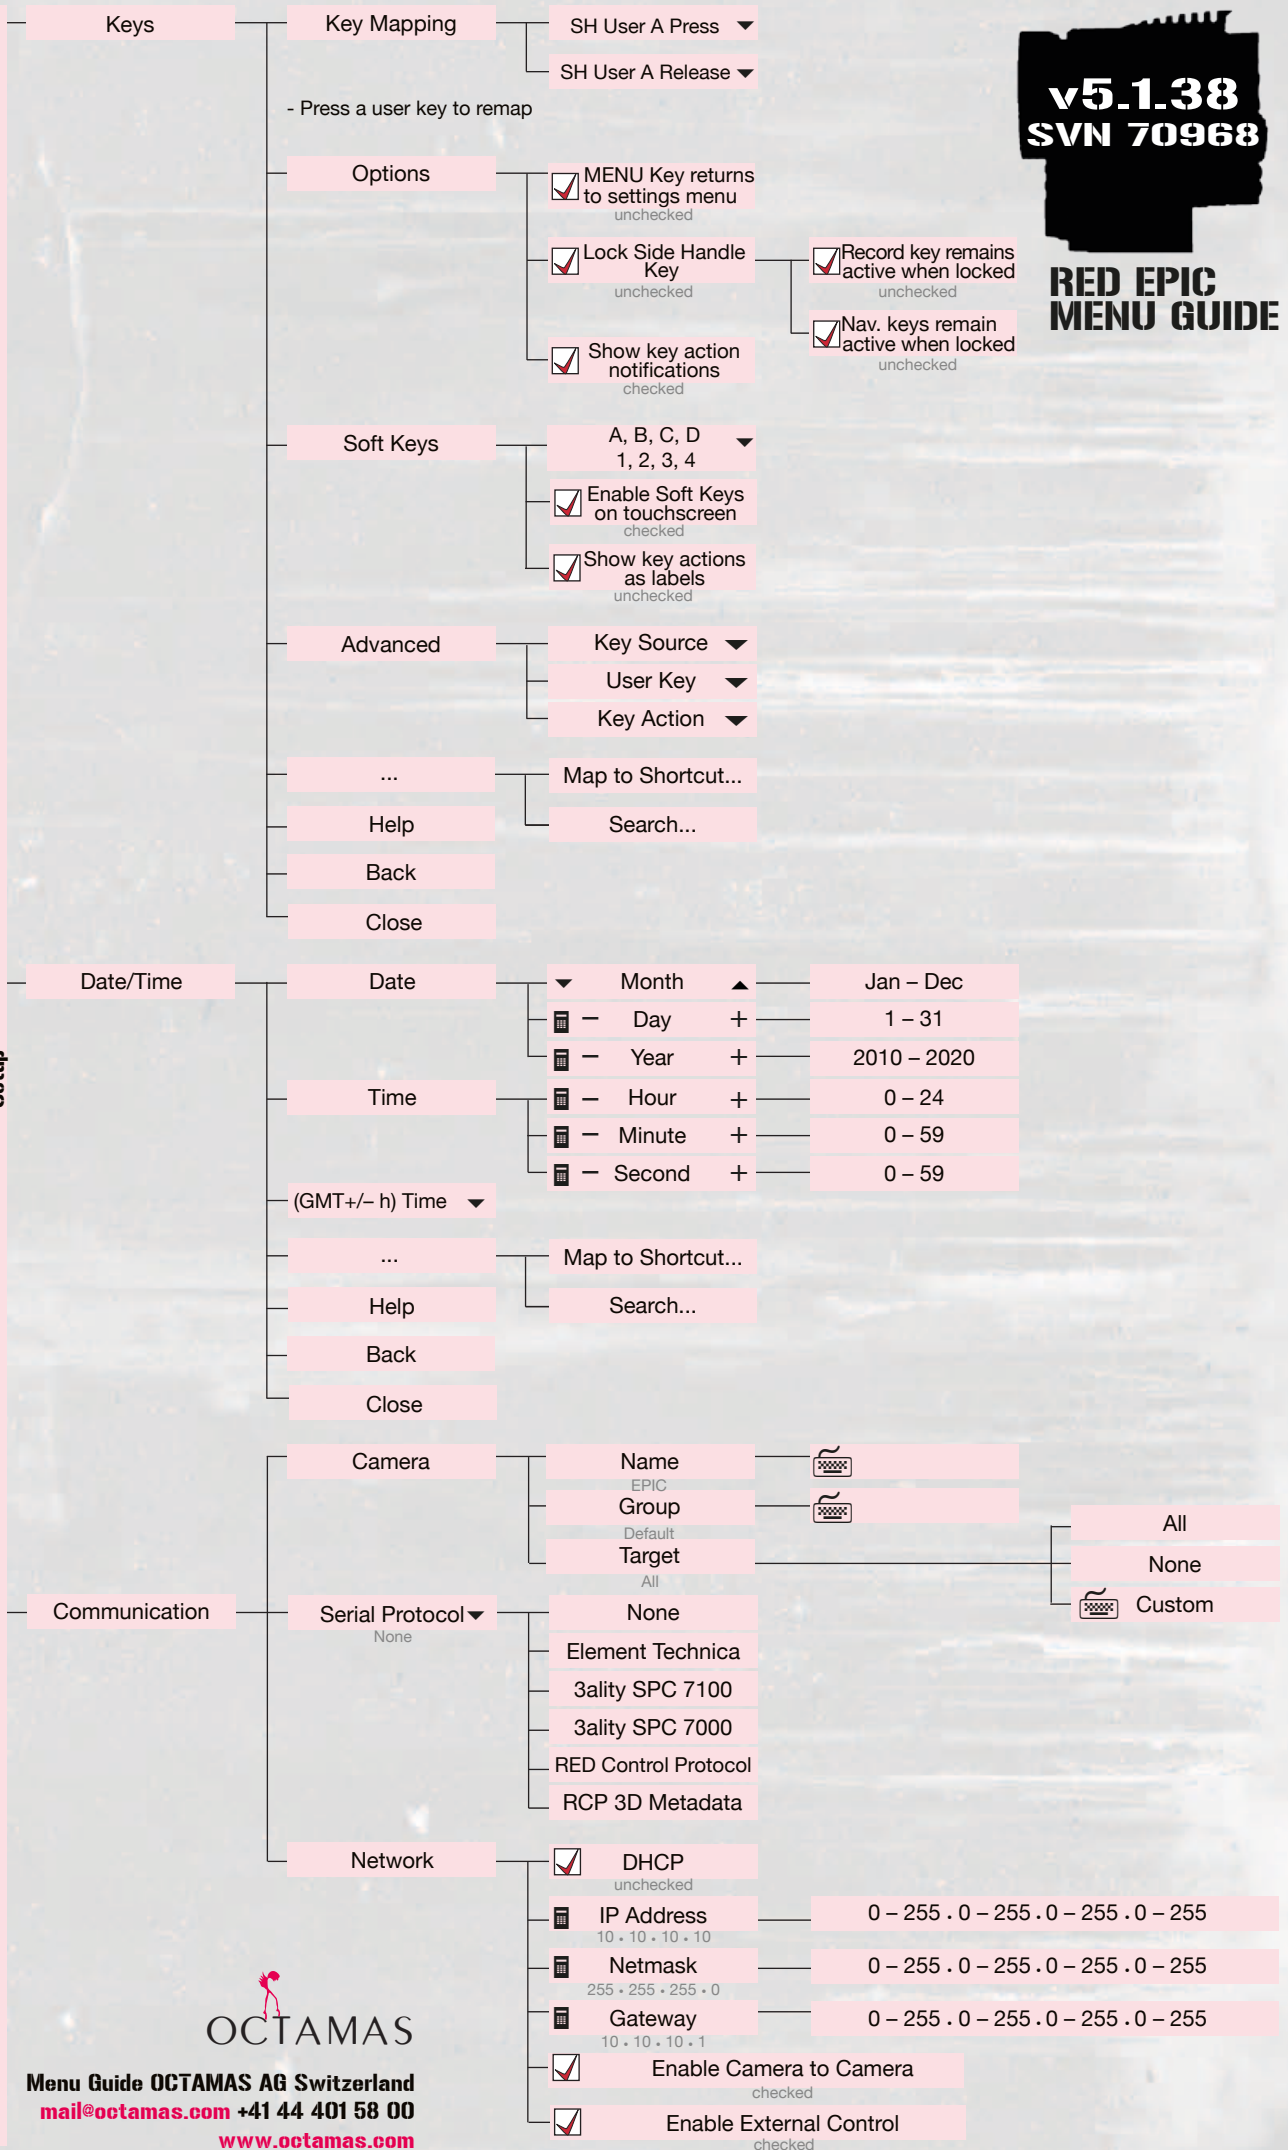

RED EPIC MENU GUIDE



Settings Setup

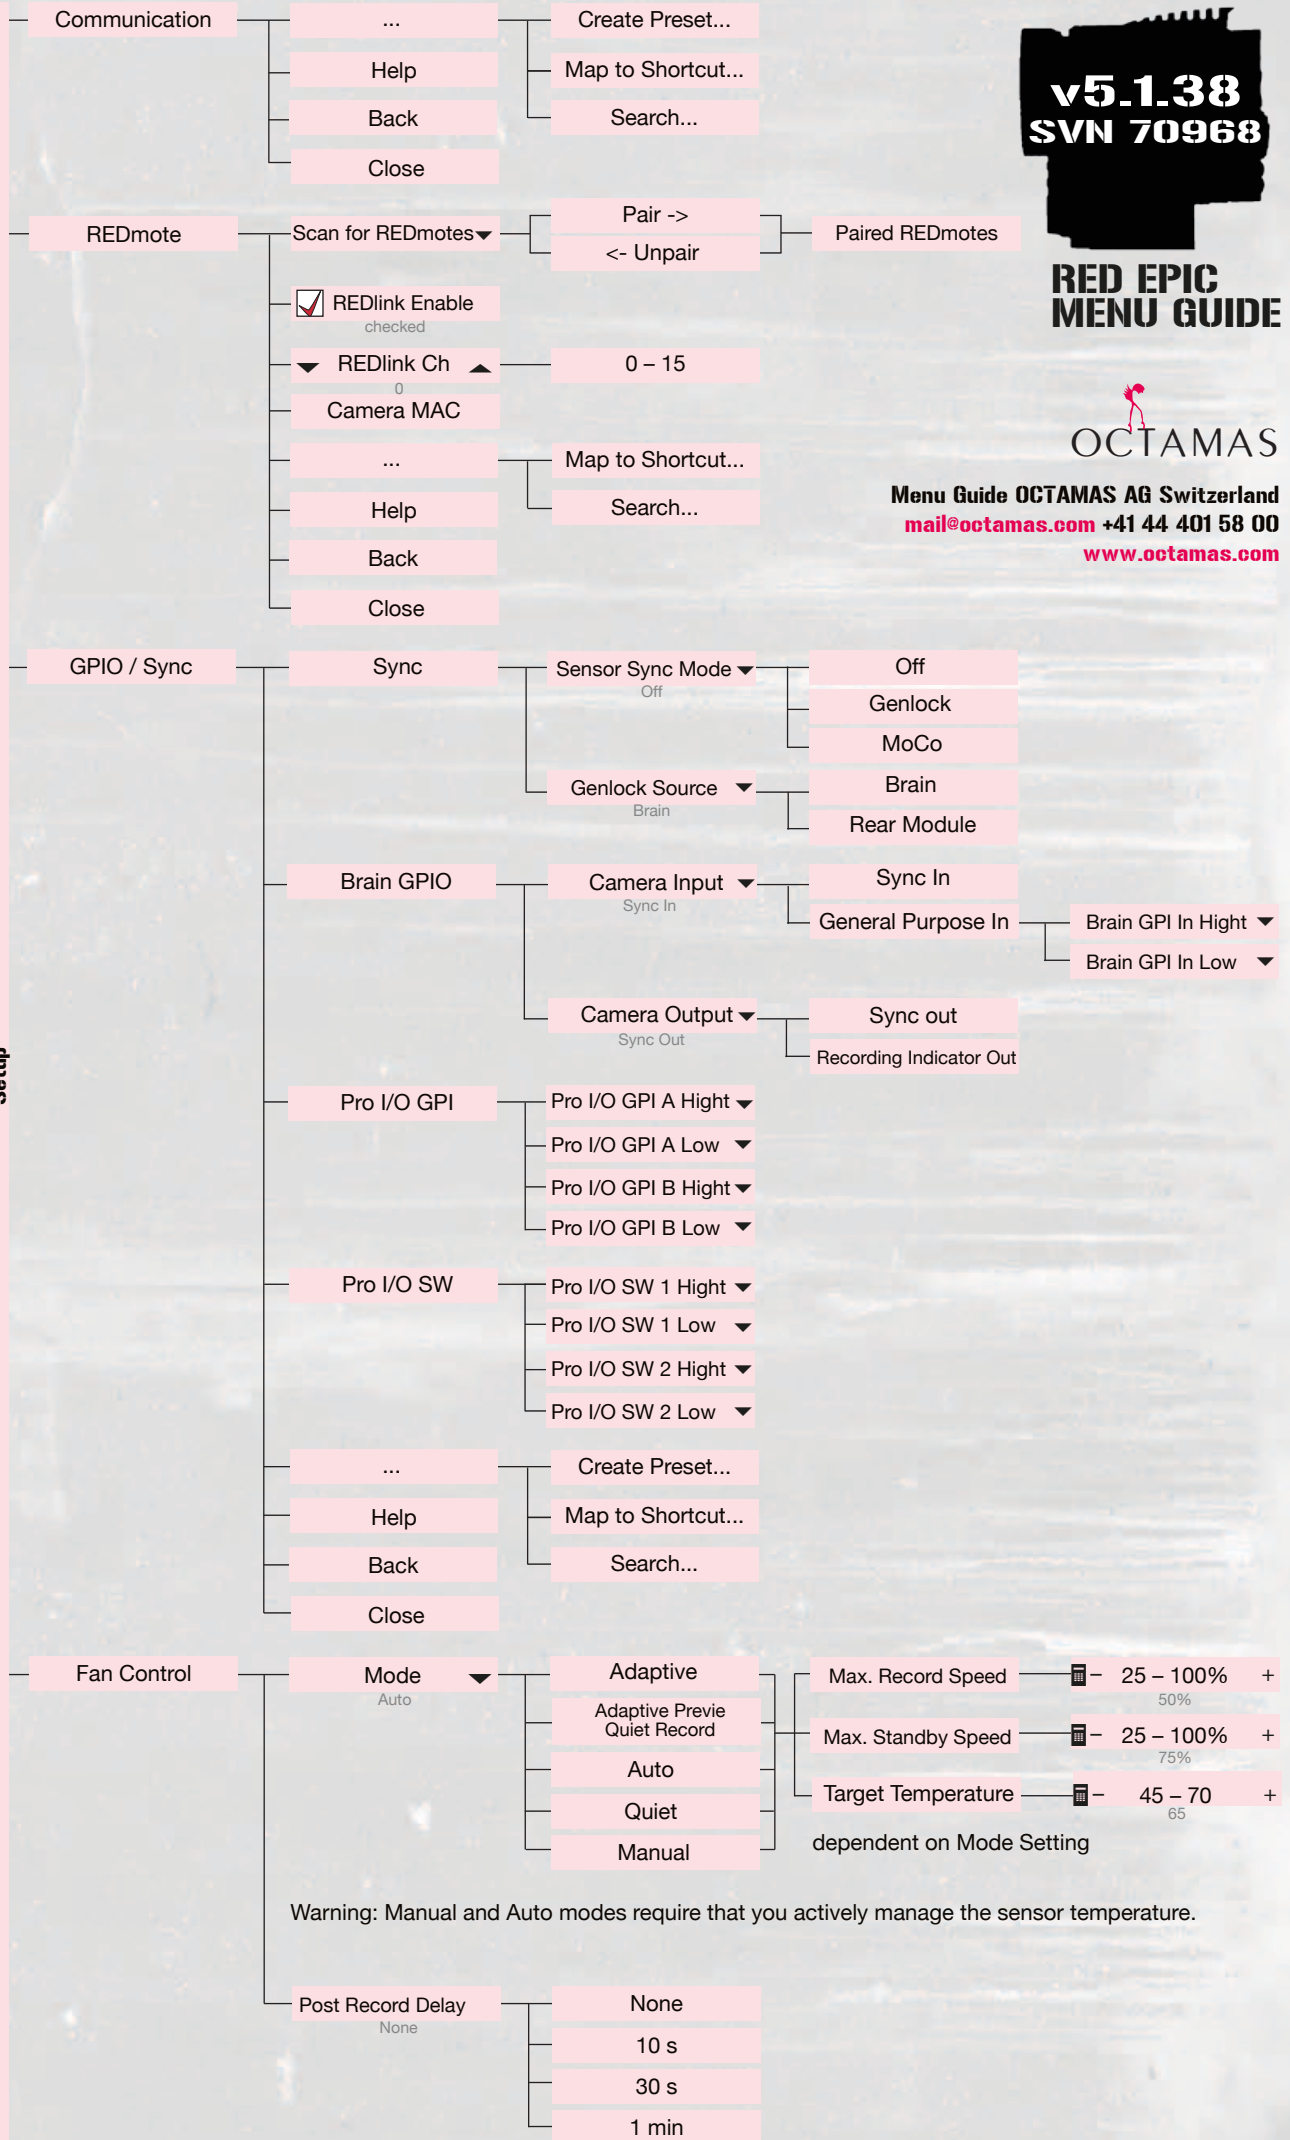

RED EPIC MENU GUIDE



Menu Guide OCTAMAS AG Switzerland
 mail@octamas.com +41 44 401 58 00
 www.octamas.com


Warning: Manual and Auto modes require that you actively manage the sensor temperature.

Advanced Menus 20/20

Settings

Maintenance

Setup

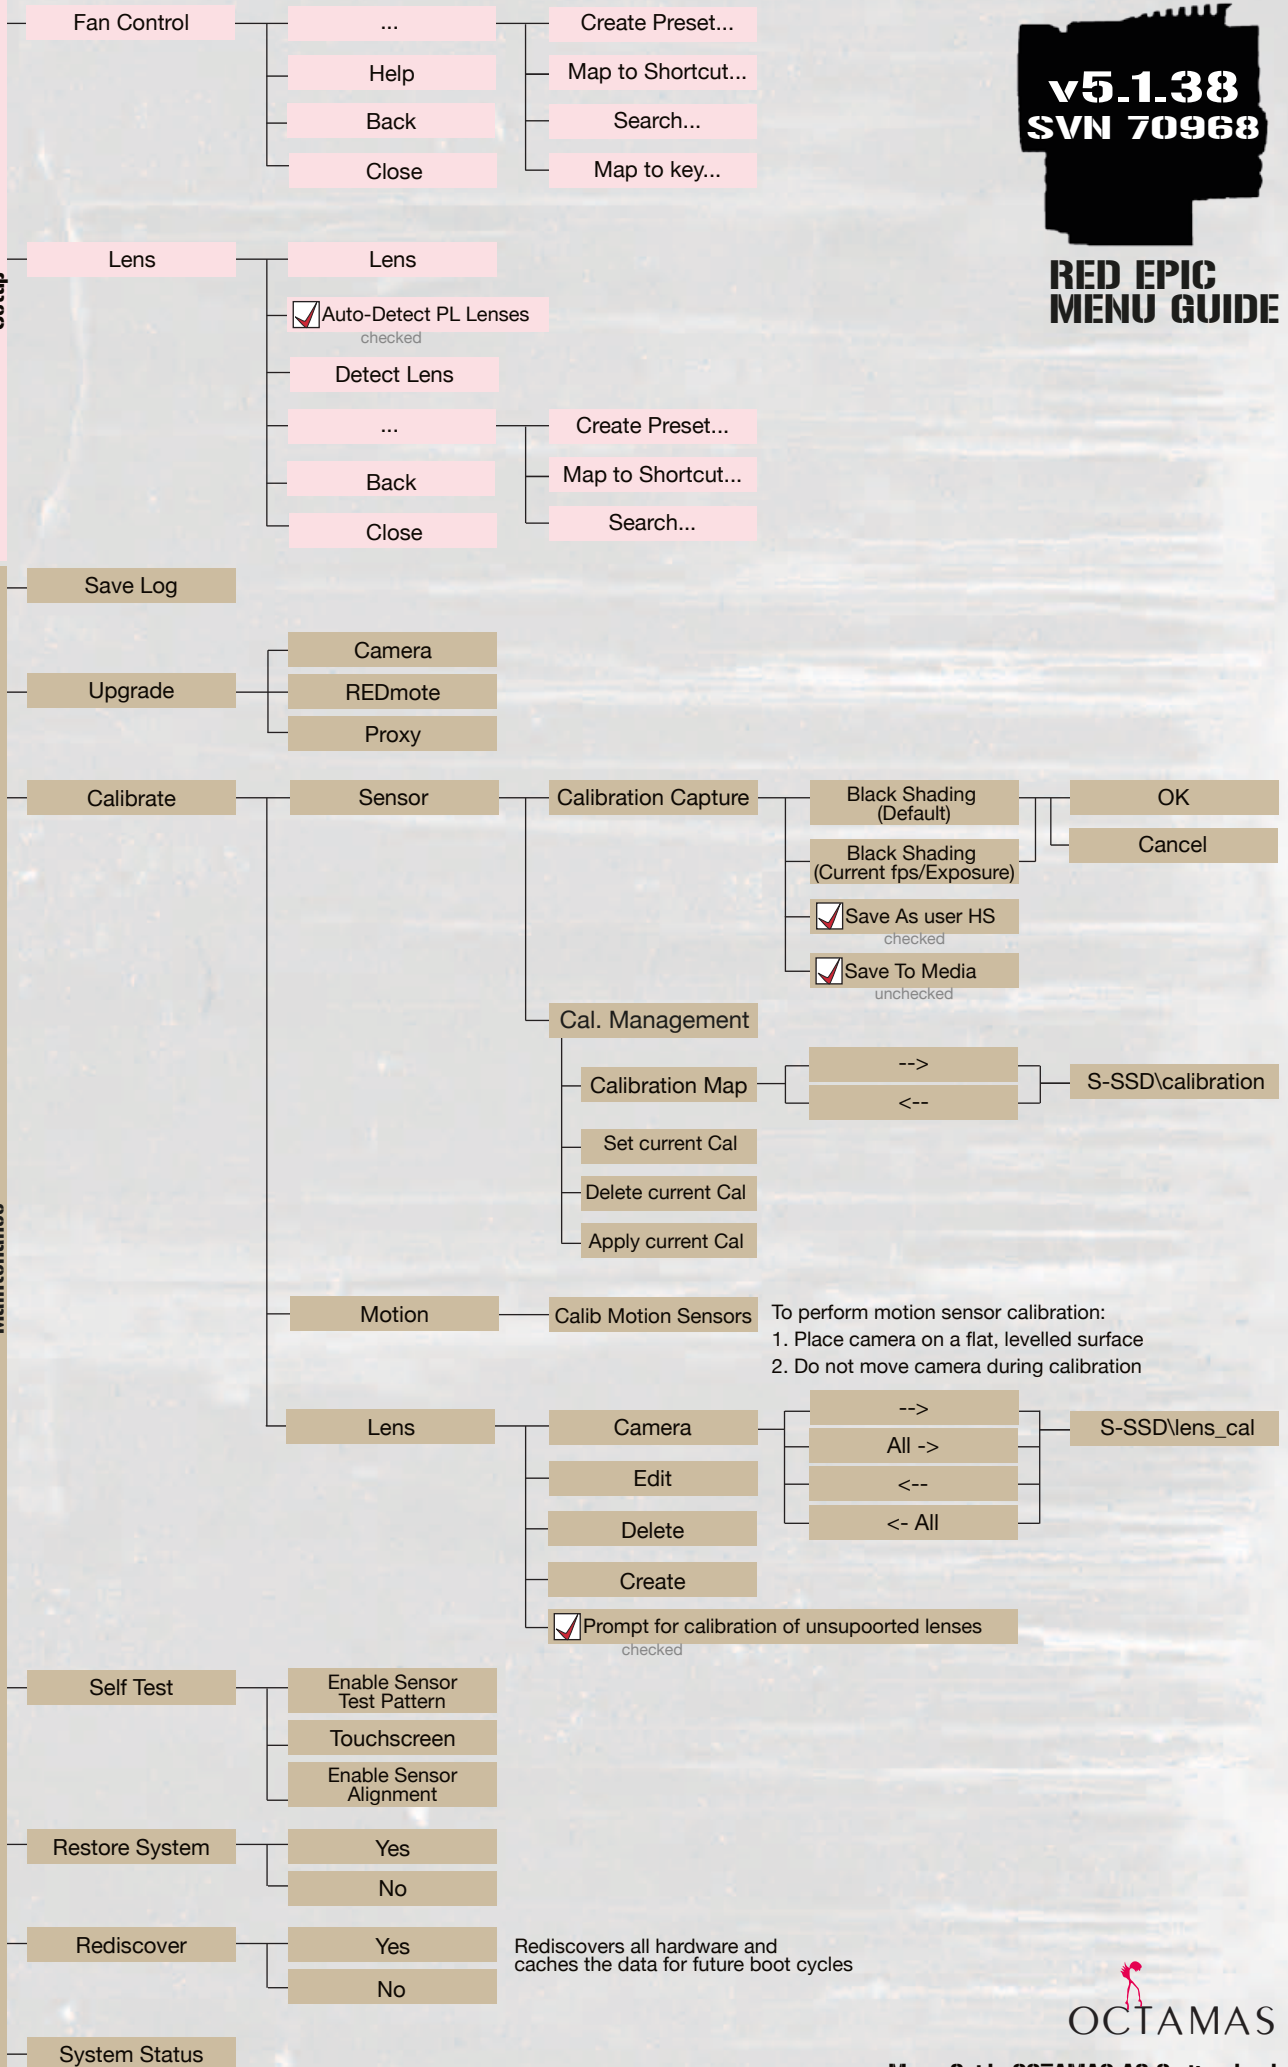

RED EPIC
MENU GUIDE

